

User Manual

Hotel Lock System

Software Version: 1.1.9.6

Document Version: V2.0

Date: August, 2014

All design and specification declared are subject to change without notice in advance.

Contents

1	System Installation	1
1.1	Environmental Requirement of System Installation	1
1.2	Database and System Installation.....	1
1.2.1	One-click Database Installation	1
1.2.2	One-click Software Installation.....	6
2	Software Running & Register	11
2.1	System Login	11
2.2	System register.....	12
3	Configuring Hotel Information	14
3.1	Changing Password.....	14
3.2	Filling in Hotel Information	14
3.3	Certificate Type Setting	16
3.4	Currency Setting.....	16
3.5	Commodity Setting	17
3.6	Creating Hotel Rooms	18
3.6.1	Building Floor Setting.....	18
3.6.2	Room Type Setting	20
3.6.3	Room Setting	22
3.6.4	Group Room Setting	25
3.7	Setup Card.....	25
3.7.1	Authorised Card	26
3.7.2	Time Sync Card	27
3.7.3	Room Card.....	27
3.7.4	Lost Card.....	29
3.7.5	Record Card.....	30
3.7.6	Close card	31
3.7.7	Guest exit card	31
3.7.8	Group setting card.....	32
3.8	Logout and Exit.....	33
4	Daily Management.....	34
4.1	User Management	34
4.1.1	Group User Management	34
4.1.2	User Management.....	35
4.1.3	Group Permission Setting	36
4.1.4	User Permission Setting	37
4.2	Employee Card Management.....	38

4.2.1 Emergency Card	40
4.2.2 Master Card.....	40
4.2.3 Building Card.....	41
4.2.4 Floor Card	43
4.2.5 Read Card.....	44
4.2.6 Clear Card.....	44
4.3 Reception Center.....	45
4.3.1 Room Center.....	45
4.3.2 Group Reception	51
4.3.3 Room Reservation	59
4.3.4 Check Room	62
4.4 Consumption Management	62
4.5 Database Log	63
4.5.1 Guest Details.....	64
4.5.2 Expenses Log	64
4.5.3 Other Logs.....	65
4.5.4 Card Setting Log	65
4.5.5 Group Card Setting Log.....	66
4.5.6 Lock Open Log.....	66
4.6 Database Management	67
5 Appendix.....	68
5.1 Sound Prompt of an Invalid Card	68
5.2 Database Configuration.....	68
5.2.1 Configuring the Server of Database	68
5.2.2 Create an Account for Database Login.....	70
5.3 System Setting.....	75



Suporte Técnico:
 Site: <https://www.zketeo.com.br/suporte>
 Tel.: (31) 3055-3530
 Email: suporte.brasil@zketeco.com

Para informações do produto homologado acesse o site: <https://sistemas.anatel.gov.br/sch>

Resolução Anatel 680/2017 -"Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados".

1 System Installation


1.1 Environmental Requirement of System Installation

- Operating system: Microsoft Windows XP SP3 or more advanced
- Database: Microsoft SQL Server 2005 or more advanced
- Available Memory: 1G or above



1.2 Database and System Installation



1.2.1 One-click Database Installation


Decompress HotelLock_Setup.rar, double click [**Biolock.exe**], and choose the language.

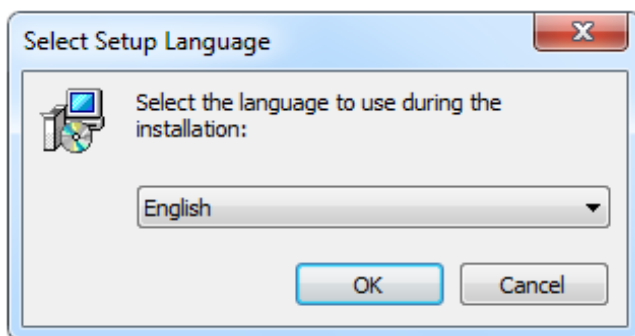


Firstly, you should install the Hotel Lock System. The system will prompt you that Microsoft SQLEXPRESS 2005Database will be installed. If yes, please click [**Yes**] to finish the database installation, otherwise click [**Cancel**] in the following pictures will appear during the database installation.

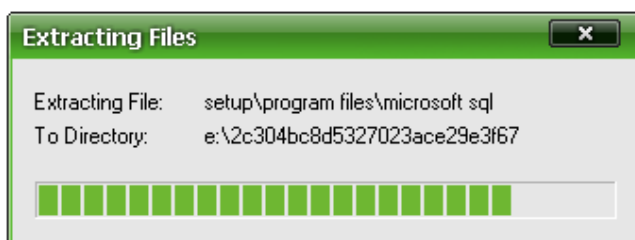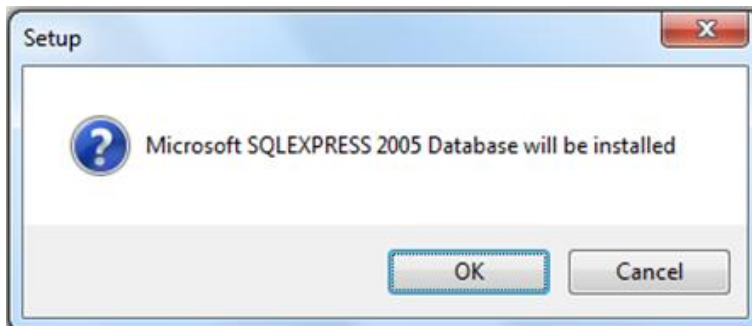

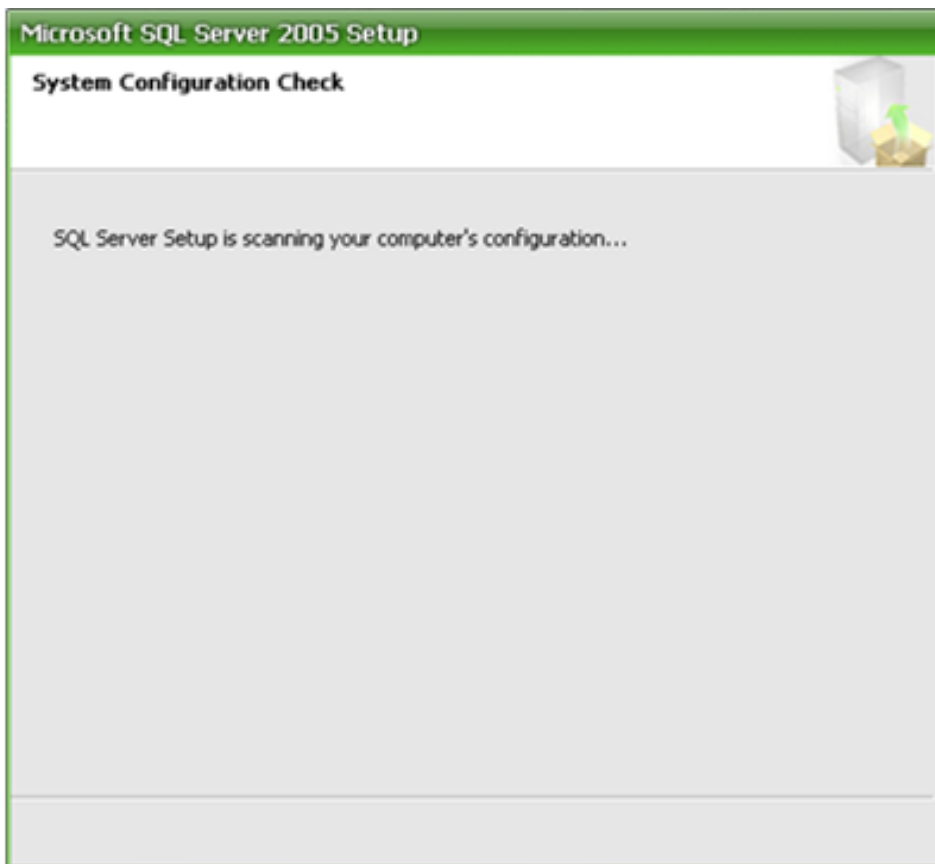
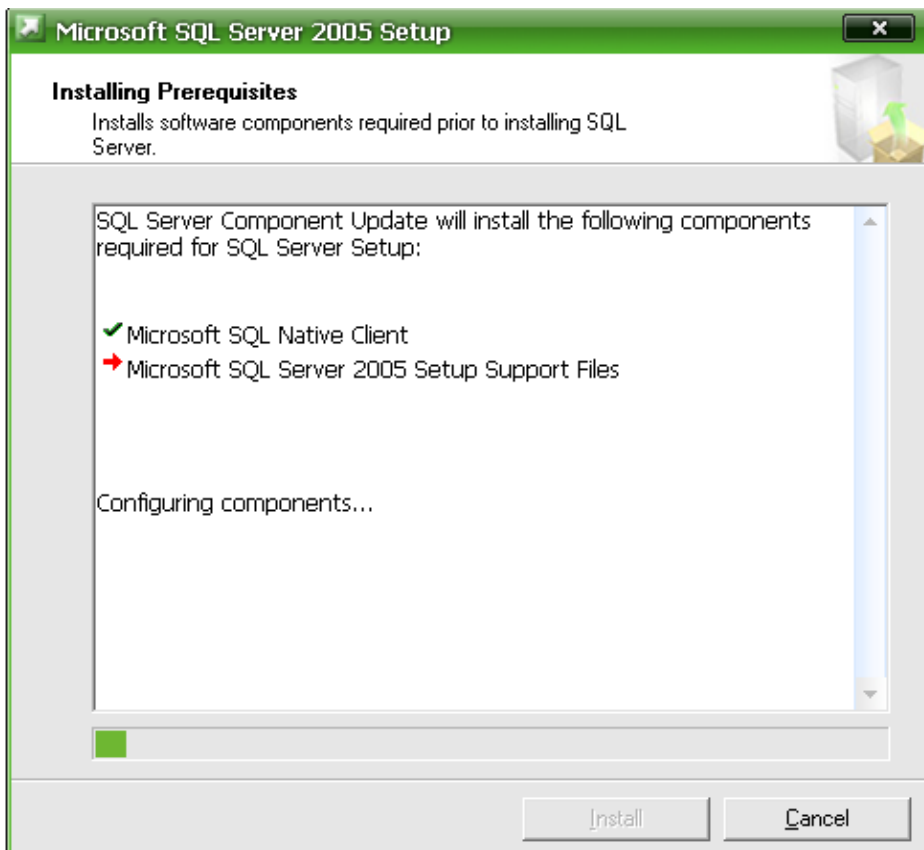



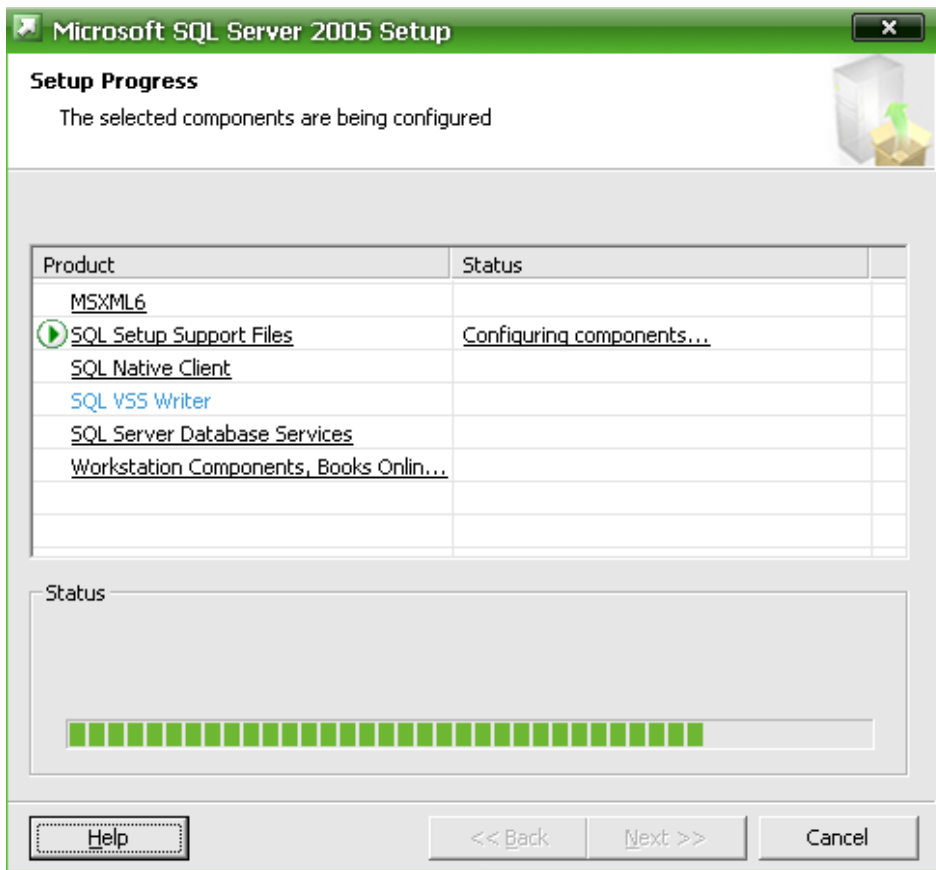




The above pictures show that the database installation is done, and the Biolock software installation will start. Just follow the prompts and click **[Next]** to install Biolock software.

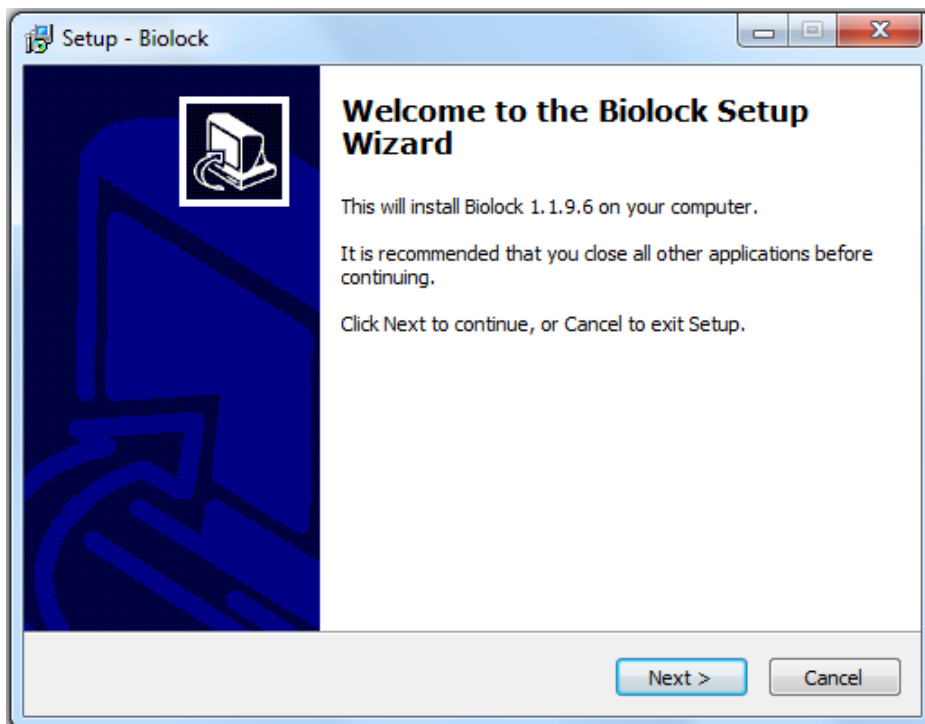

Click **[Browse]** to set the installation path.

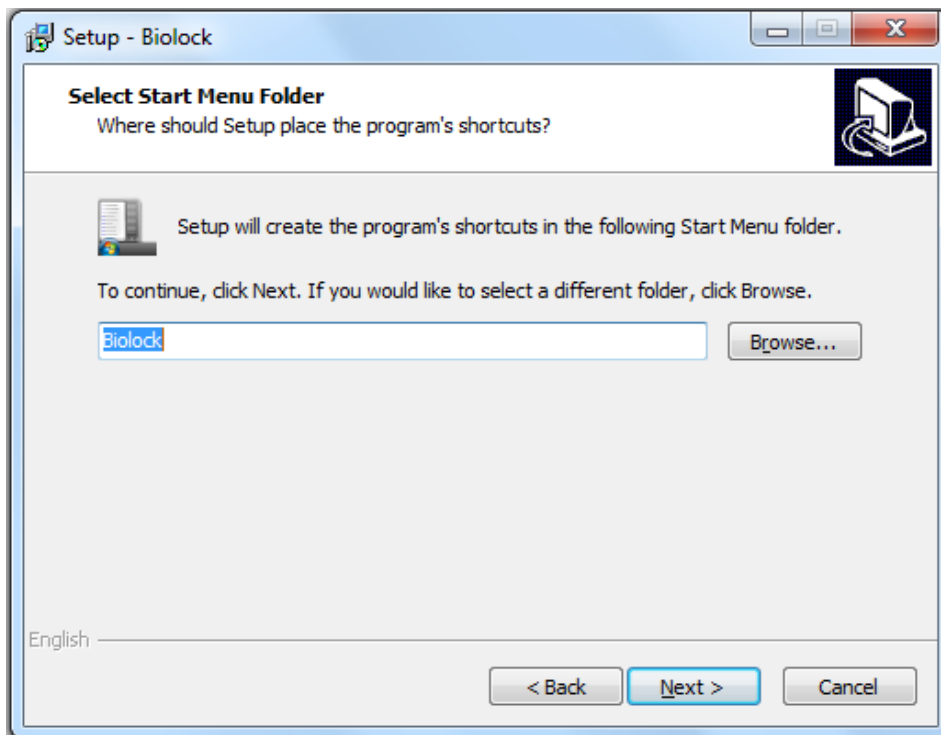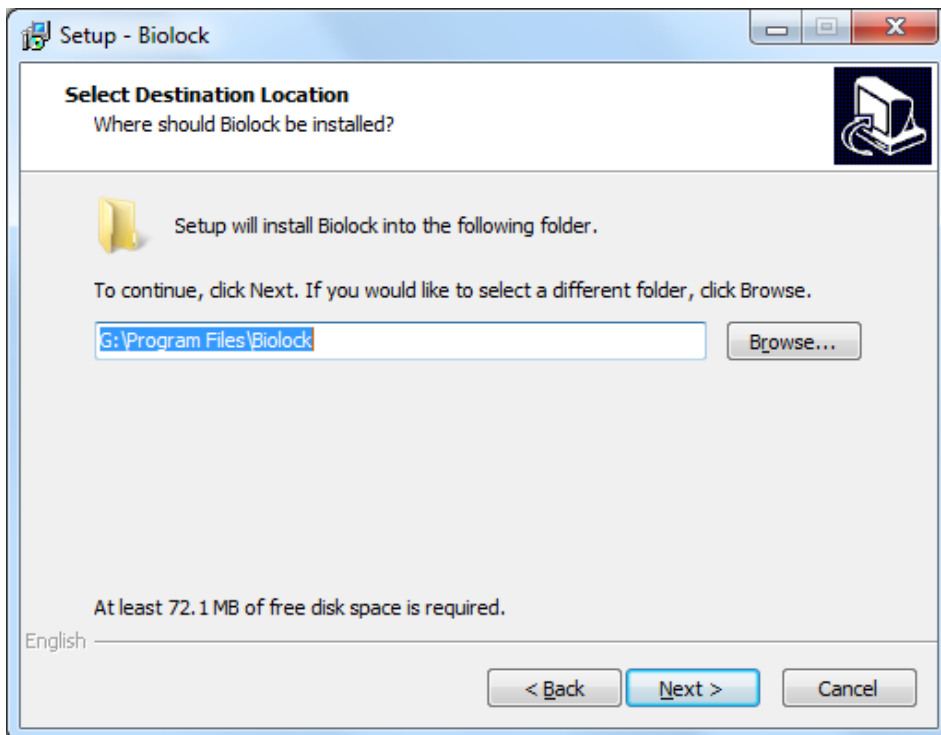


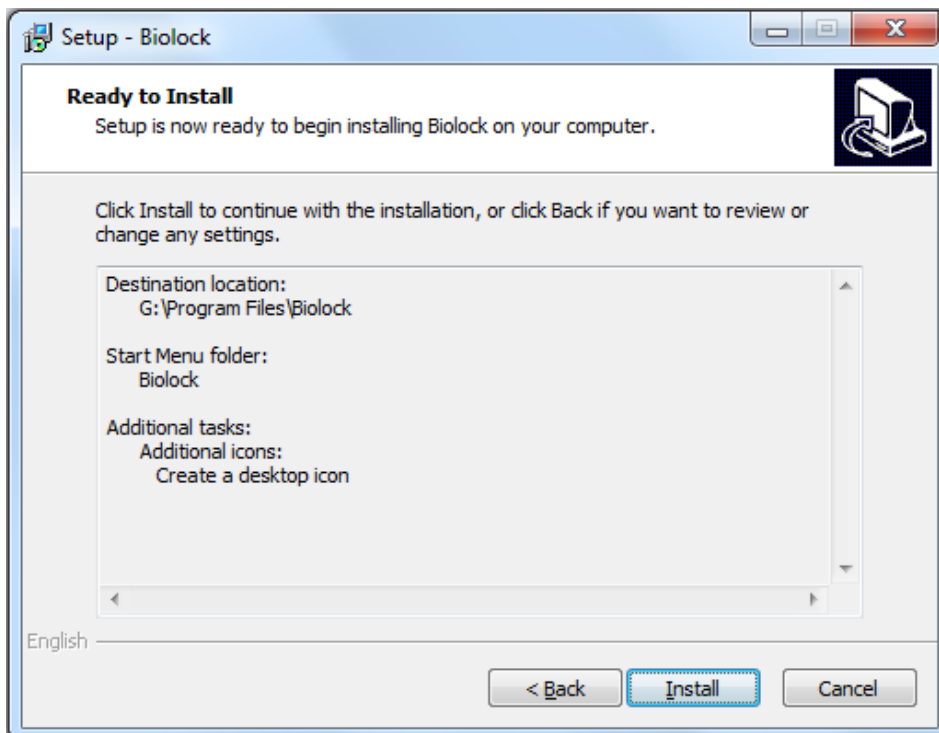
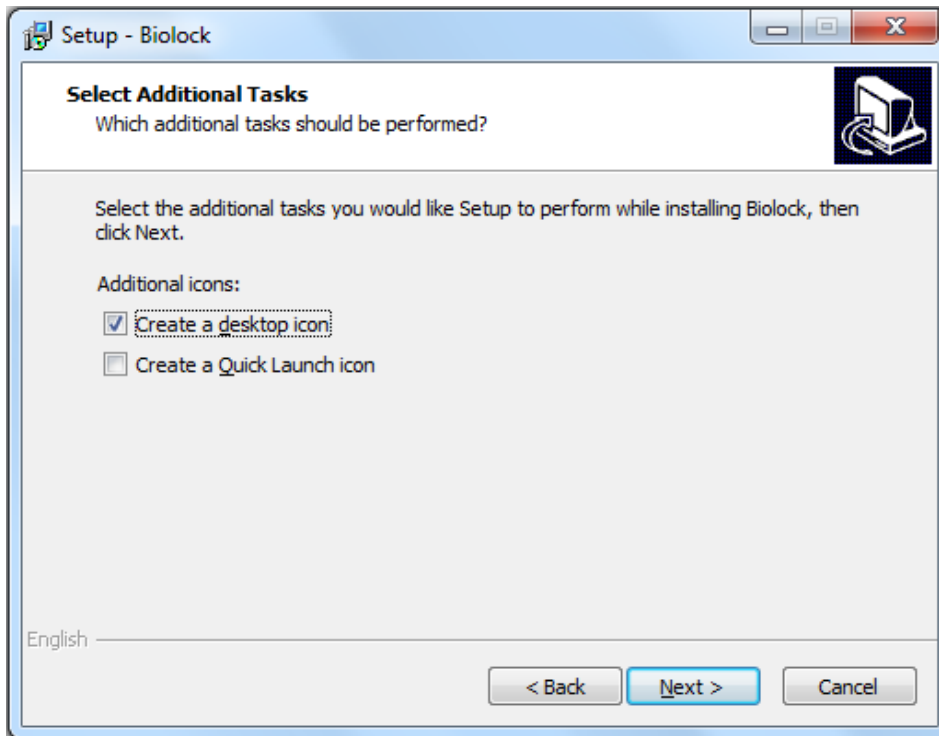


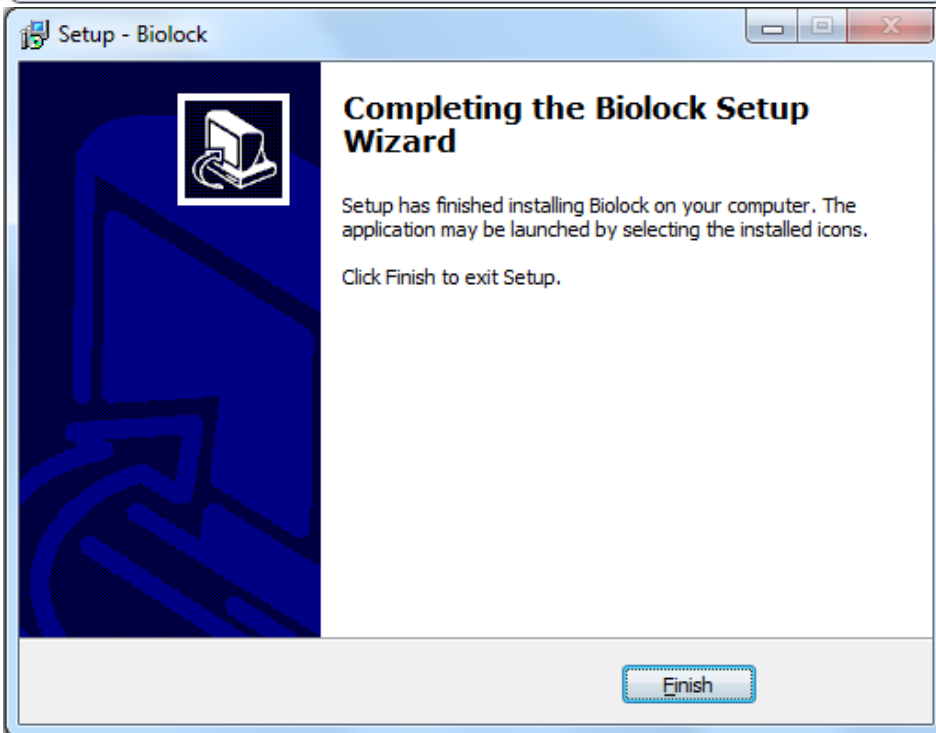
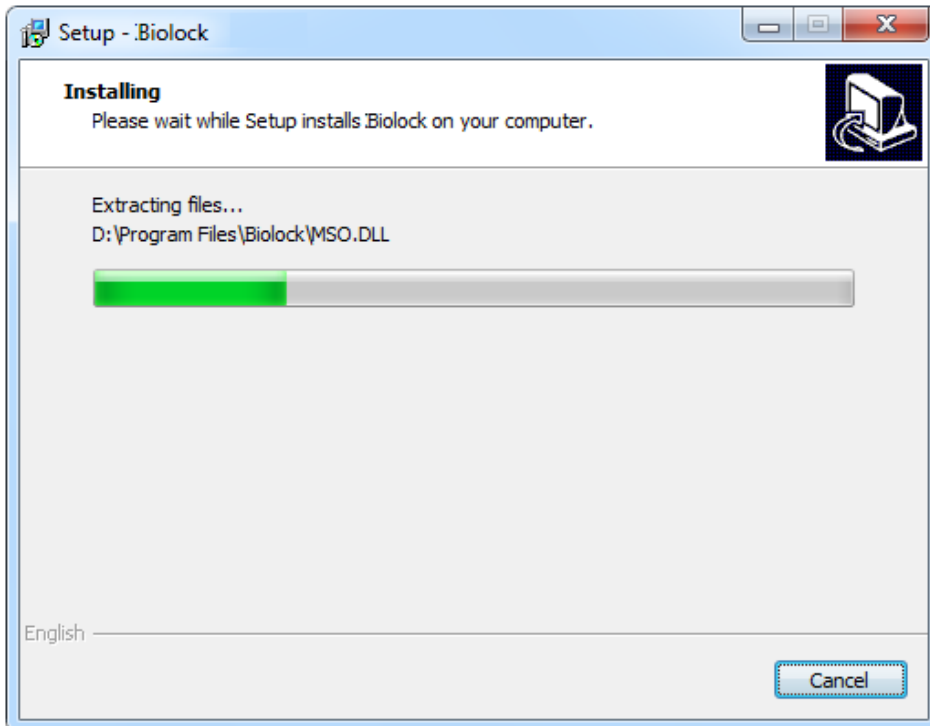




The installation is finished.


1.2.2 One-click Software Installation

If database has already existing in your computer, so you only need to install the Biolock software. Decompress HotelLock_Setup.rar, double click [**Biolock.exe**], and choose the language.

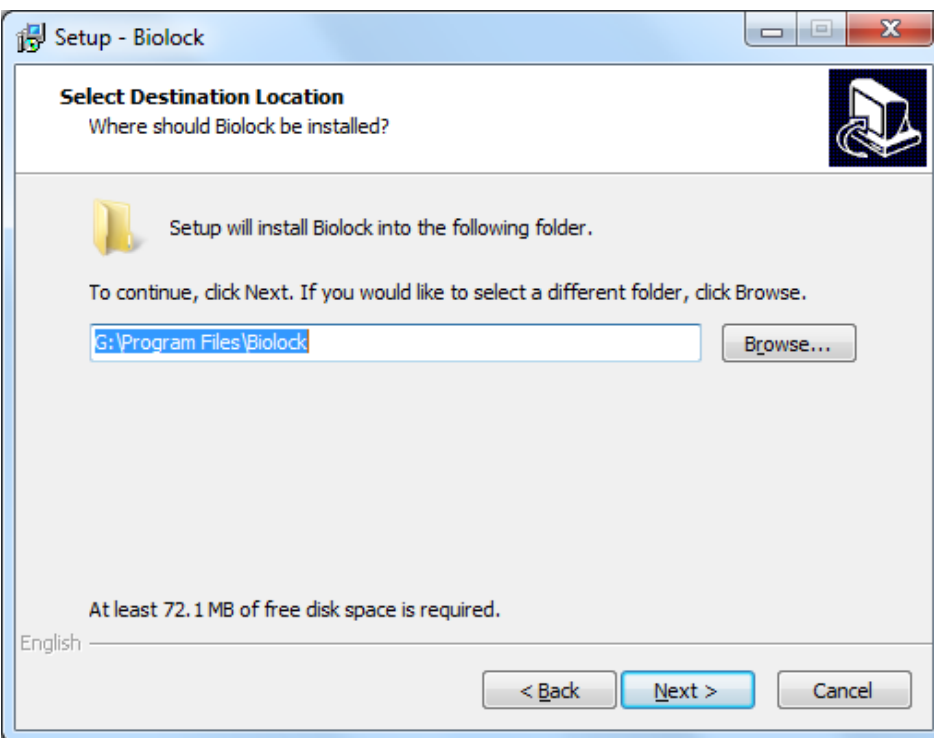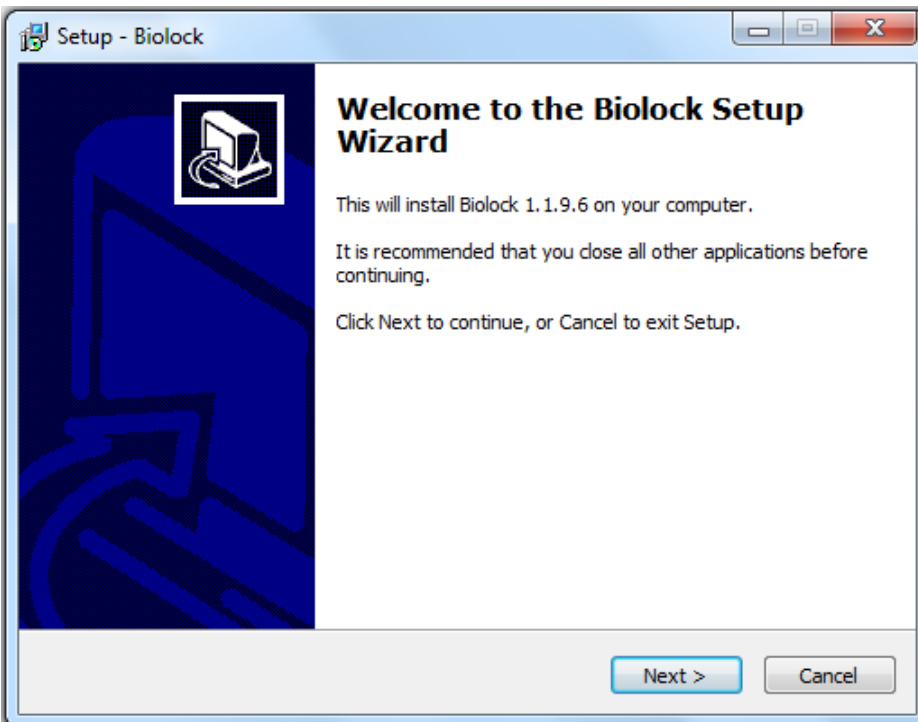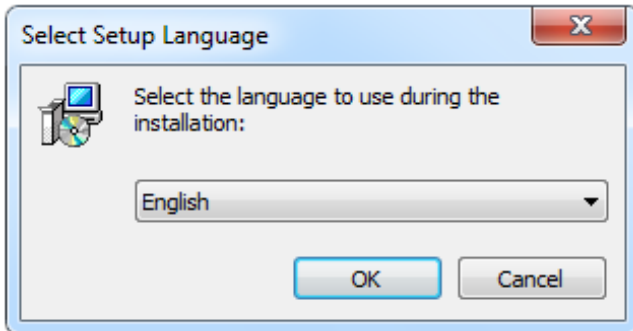

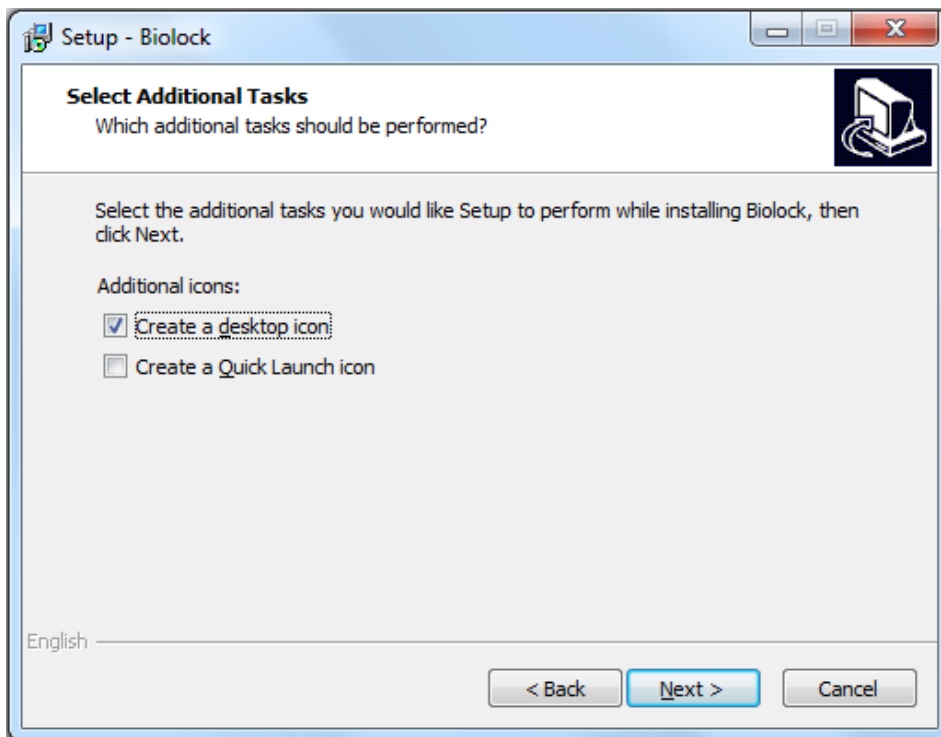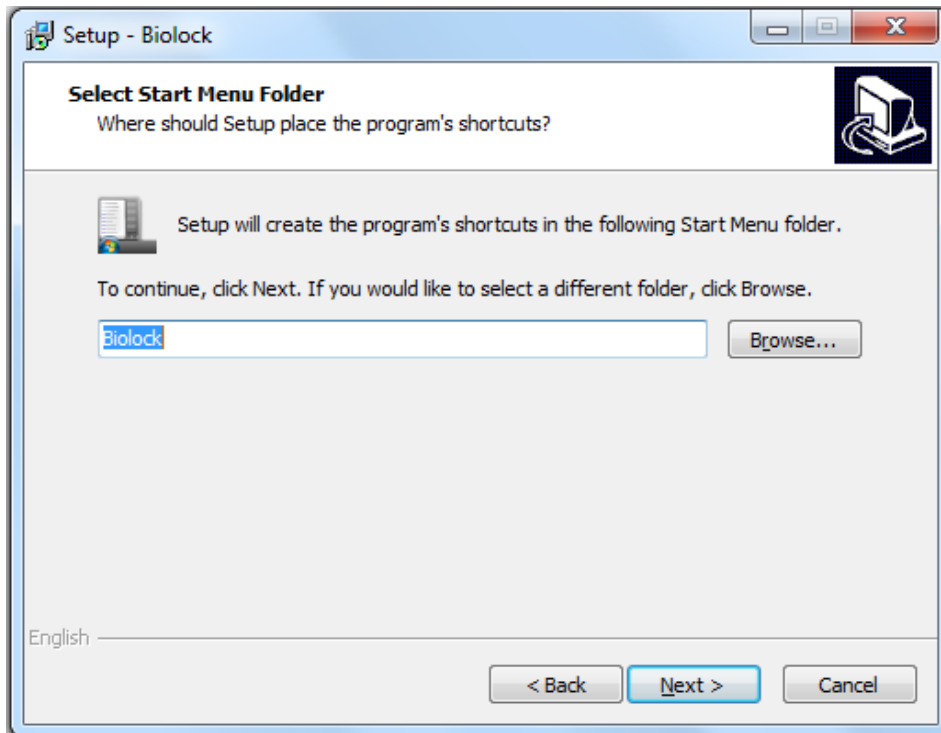

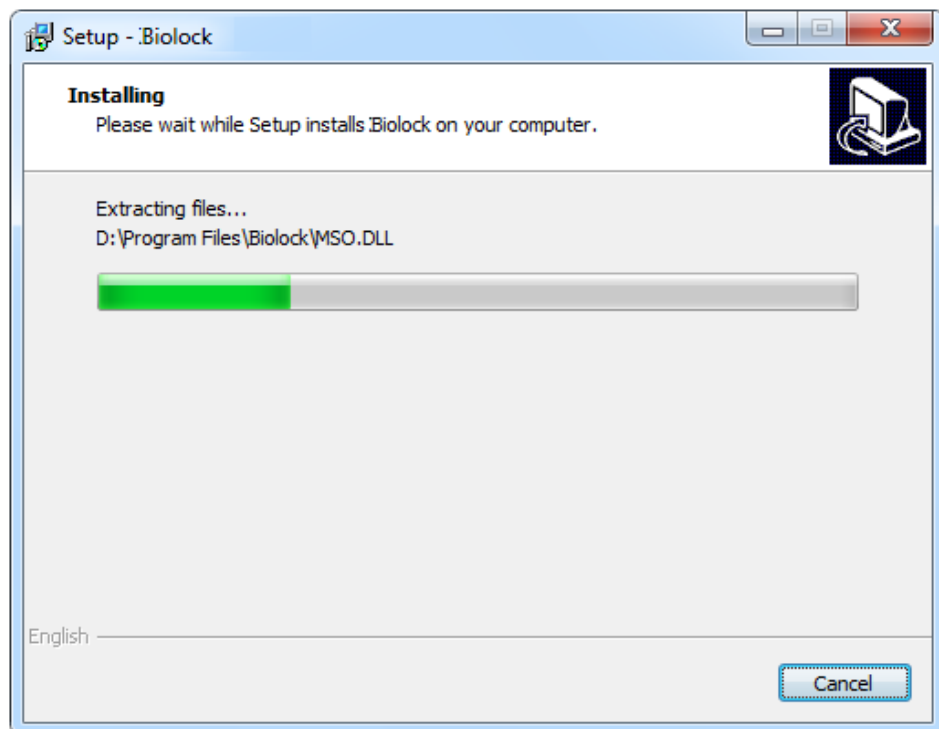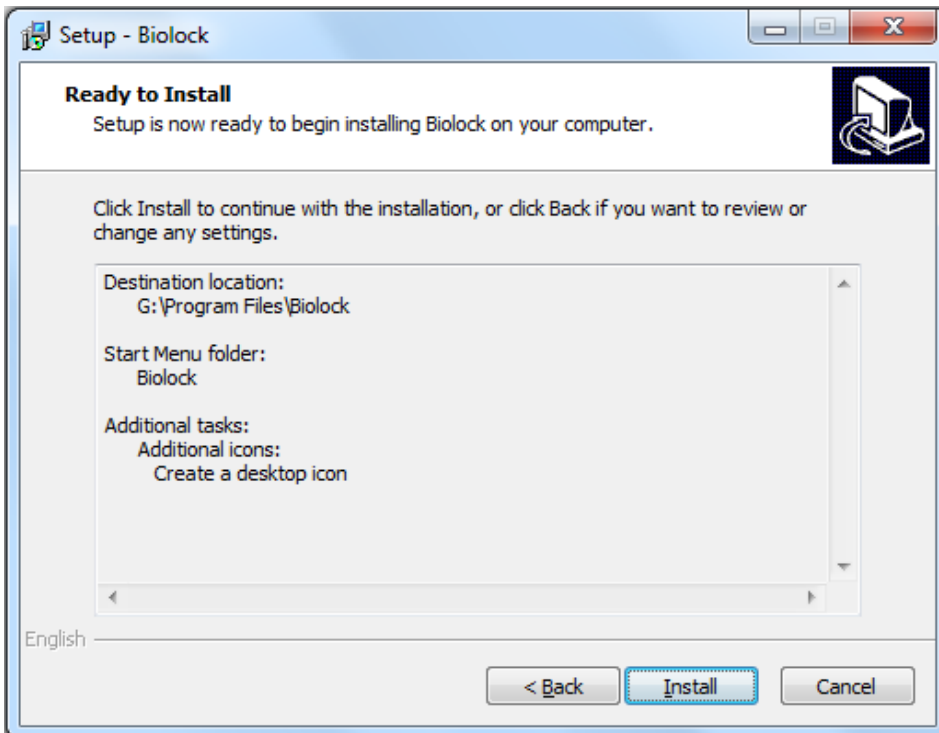

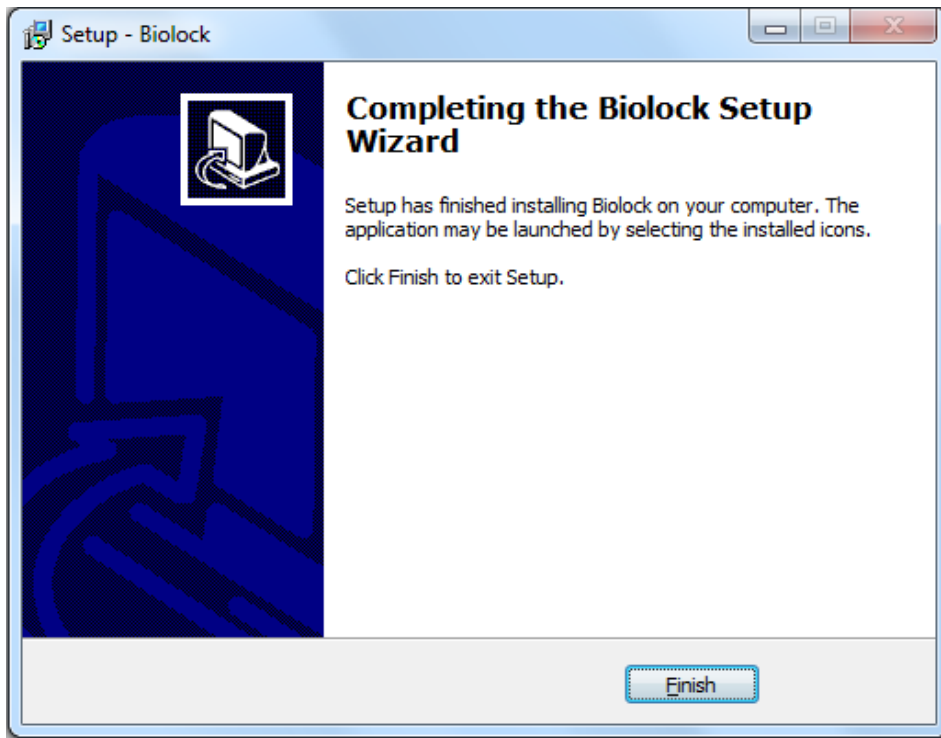


The installation is finished.

2 Software Running & Register

2.1 System Login

If you are the first time to run the system, please wait a moment, it will spend you several minutes to automatically create a database.

After successfully creating database, a picture will appear as below:

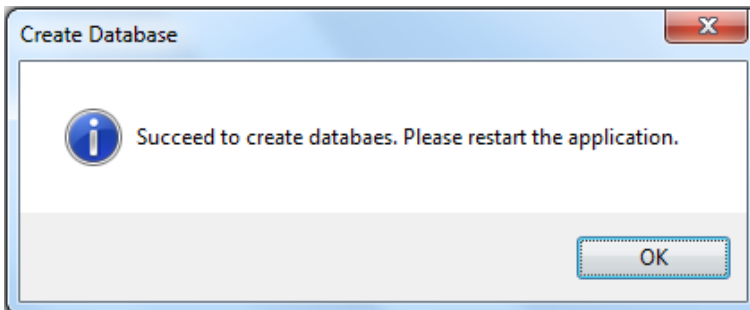

After restarting the system, you need to input login Name and password and click [**Login**] to enter the system.

Default Login Name: **admins**


Default Password: **123456**

◆ Choose the language type in setting and save it.




2.2 System register

It will pop up register interface for the first time to use the system.

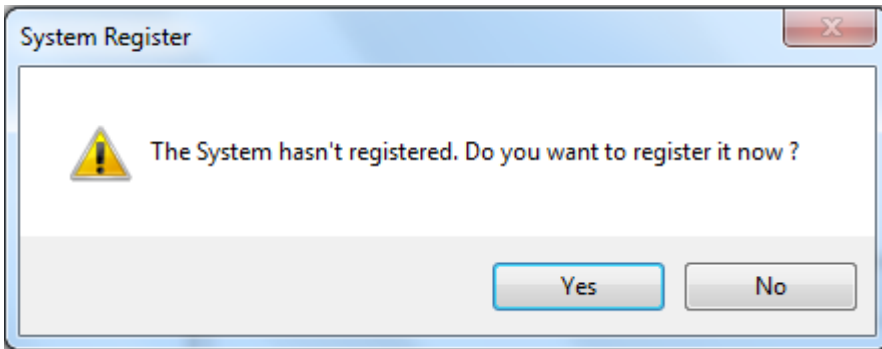

You can use it normally after registering, or you can click **[Help]** → **[About Us]** to enter the register interface.

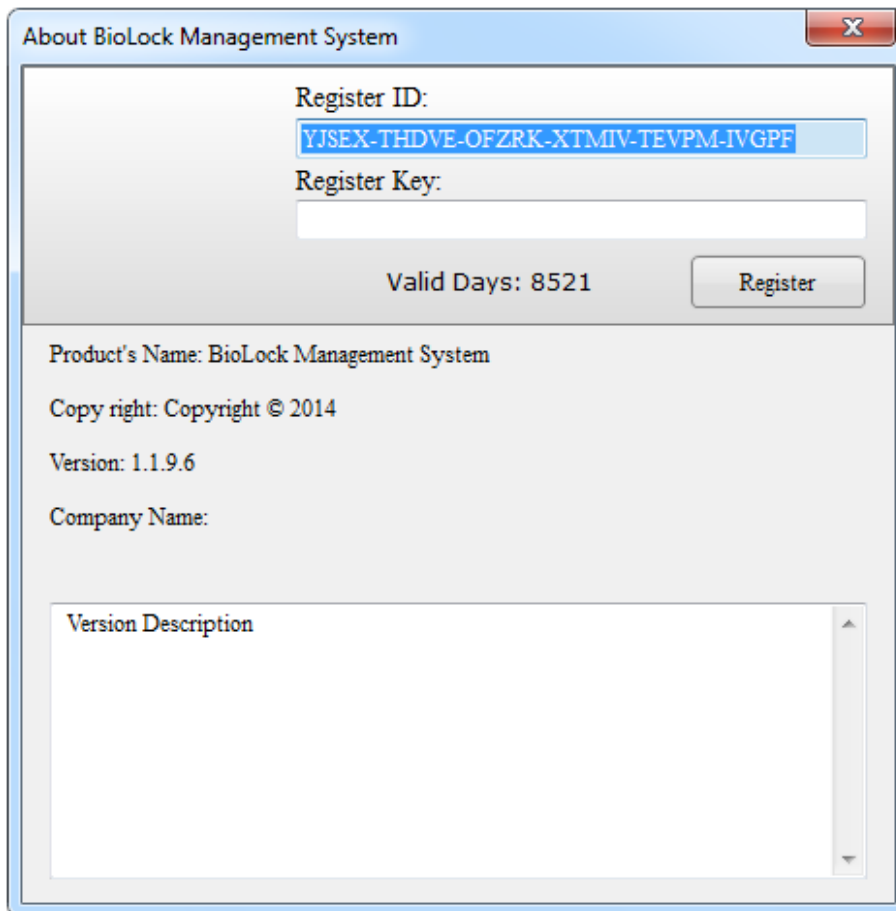

😊 **Note:** Only distributor can provide register key.

3 Configuring Hotel Information

3.1 Changing Password

Click [**User Management**] → [**Change Password**] to enter the **Change Password** Interface.

The screenshot shows the 'Change Password' interface. The top menu bar includes 'User Management' and 'Help'. The 'User Management' dropdown menu is open, listing options: 'Group User Management', 'User Management', 'Group Permission Setting', 'User Permission Setting', and 'Change Password'. Below this is the 'Change Password' dialog box. It features a key icon and the text 'Change password.' in green. The 'User Name' field is filled with 'Administrator'. There are three password input fields: 'Old Password', 'New Password', and 'Confirm Password'. At the bottom, there are 'OK' and 'Cancel' buttons.

If you are the first time to use this software, please remember to change the default Administrator password (123456).

3.2 Filling in Hotel Information

Click [**System Setting**] → [**Hotel Information**] to enter the **Hotel Information** Interface.

The screenshot shows the 'System Setting' menu. The 'System Setting' menu is open, showing options: 'Hotel Information', 'Certificate Type', 'Currency Setting', 'Commodity Setting', 'Logout', and 'Exit'. The 'Hotel Information' option is highlighted.

Hotel Information

Hotel Info: Set your hotel's information.

Save Info Close

Hotel Name: Blue

Hotel Number: 01012345678

Address:

Fax:

Phone:

Post:

Hotel Web:

Background:

Browse

Logo

Check in Time: 10:00

Check Out Time: 12:30

Extended Check Out 1: 14:00 *PS:Extra charge for half-day price when extended check-out.

Extended Check Out 2: 18:00 *PS:Extra charge for full-day price when extended check-out.

Cleaning Time Limit (Minute): 10

Minimum hour for Hour Room: 4 Stay Day(s): 1

Room Capacity: 10

Tax Type: Tax ({0})

Tax Rate: 0.00 %

Confirm Guest Information

You can input and modify hotel information like **Hotel Name**, **Hotel Web**, **Hotel Number**, **Phone**, **Address**, **Fax**, and **Post**.

😊 **Note:**



- ◆ **Stay Day** indicates how many days the user will stay. The system default **1 day** when issuing a card.
- ◆ **Cleaning Time Limit** indicates the cleaning time, the default time is 10 minutes (measured in minutes). It can be modified according to the actual circumstance of the hotel. When guests checkout, the room will automatically turn into empty and dirty , 10 minutes later, it will automatically become available, if you set 0, you need to manually modify room status
- ◆ **Check In Time** can be set by the hotel. If guests check in before **Check In Time**, their check out time must be today, If guests check in during **Check In Time**, their check out time is the next day. As shown above, it is set to 10:00, if guests check in before 10:00, then check out at 12:30 on the day, if guests check in after 10:00, then check out at 12:30 on the next day.
- ◆ **Check Out Time** indicates the default expiry time of the guest stay. The default expiry time is 12:30 of every day.
- ◆ **Minimum hour for Hour Room** means how many hours at least the guest has to stay, it can be changed to by hotel management staff.
- ◆ **Extended Check** can be set by the hotel. If guests check out between the first **Extended Check** and the second **Extended Check**, they need to pay extra half a day room fee; if guests check out after the second **Extended Check**, they need to pay extra a day room fee. As shown above, the **Check Out Time** is 12:30, the first **Extended Check** is 14:00, and the second **Extended Check** is 18:00. It means that from 12:30 to

14:00 for the buffer time, if guests check out between 14:00 and 18:00, they need to pay extra a day room fee; if guests check out after 18:00, they need to pay extra a day room fee.

- ◆ **Room Capacity** indicates the maximum number of cards that can be issued for a room before check-out.
- ◆ **Tax Type:** fill the **Tax Type** manually.
- ◆ **Tax Rate:** set the **Tax Rate** manually.
- ◆ After ticking **Confirm Guest Information**, even if the item is not required to fill out, but receptionists also have to input the related contents.
- ◆ **Background.** You change the system background according to your interest. Try to avoid an oversize picture, which may prolong uploading picture time and even lead to deadlock.
- ◆ Click [**Browse**] to upload the logo of the hotel.

3.3 Certificate Type Setting


Click [**System Setting**] → [**Certificate Type**] to enter the **Certificate Type** Interface.

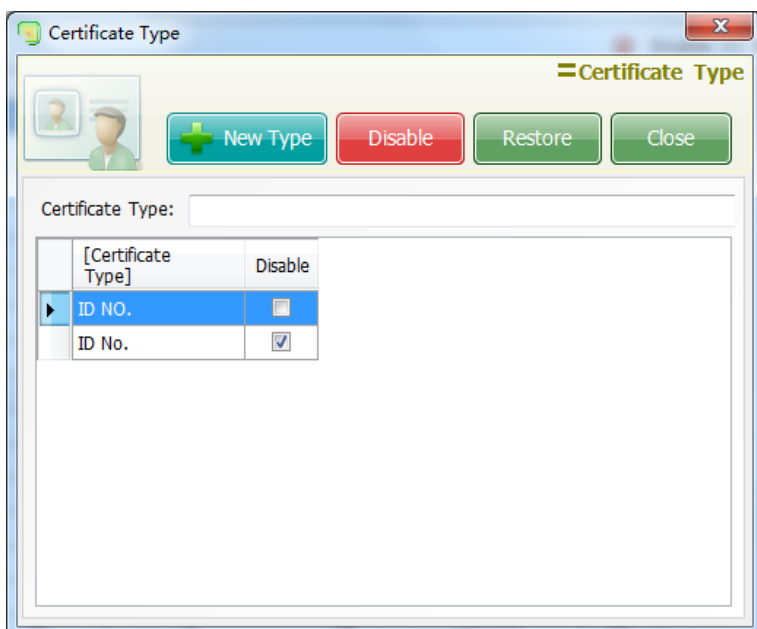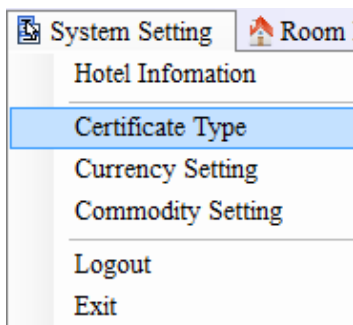

In this page, you can add and disable a certificate type.

3.4 Currency Setting


Click [**System Setting**] → [**Currency Setting**] to enter the **Currency Setting** Interface.

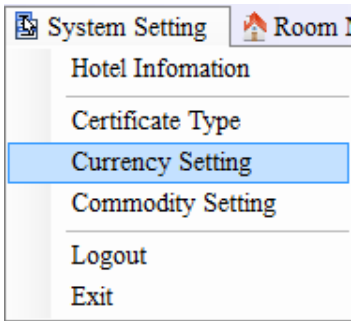





In this page, you can add and disable a currency type. Note that the **Ex-Rate** is inputted by hotel staffs, not fluctuating according to the market's change.

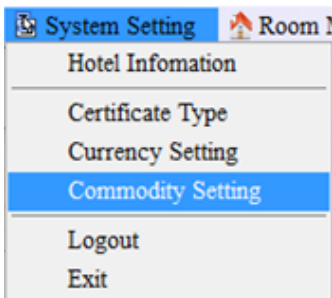
3.5 Commodity Setting

Click [**System Setting**] → [**Commodity Setting**] to enter the **Commodity Setting** Interface.



	Commodity Type	Create Time	Update Time
1	drink	2013/7/16 11:42	2013/7/16 19:46

Commodity Type :    

Item Code: 

Items Name:

Item Unit:

Unit Price:

Item Memo:

Disabled


After inputting a type name, click the [+] icon. Then you need to fill out the related information and click [Add]. Moreover, the information can be edited and deleted.

3.6 Creating Hotel Rooms

The process of creating hotel rooms: [Building Floor Setting] → [Room Type Setting] → [Room Setting] → [Group Room Setting].

3.6.1 Building Floor Setting


Click [Room Management] → [Building Floor Setting] to enter the Building Floor Setting Interface.

 Room Management

- Building Floor Setting
- Room Type Setting
- Room Setting
- Group Room Setting


- **Creating a building**

To create a building: select the hotel name, input a **Name** and **Code** in the **Building Setting** section, and click [**New**], as shown in the figure below.

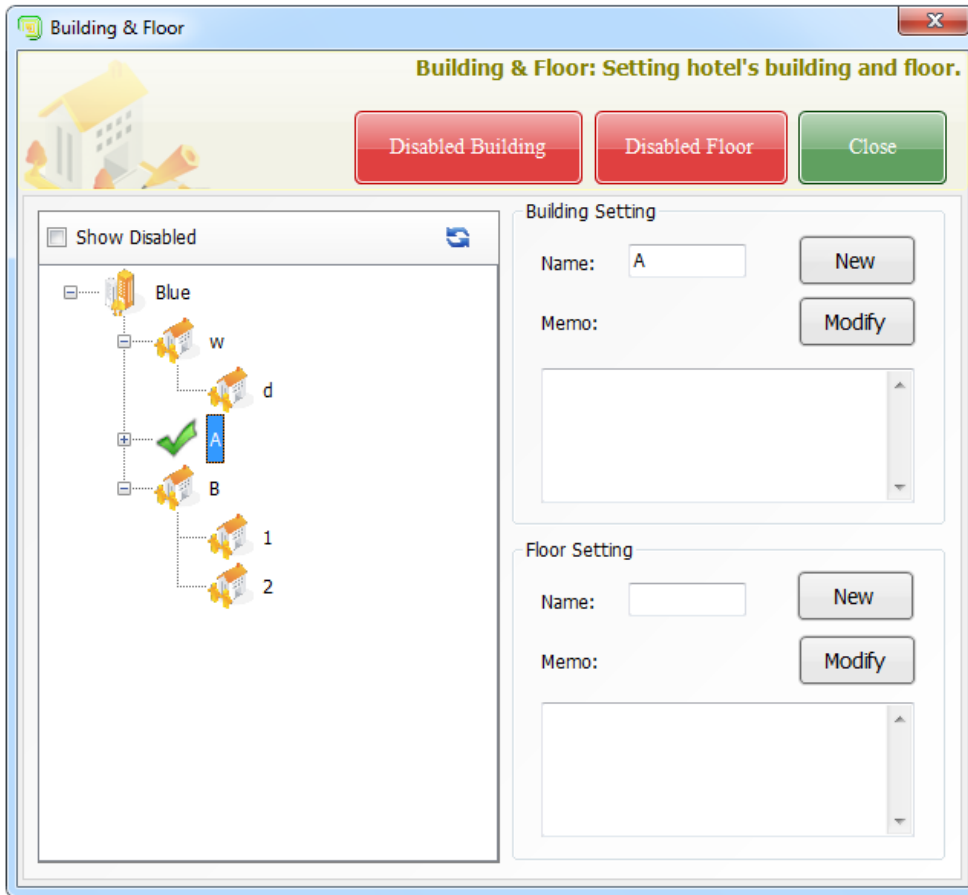

- **Create a floor**

To create a floor: select a building name, input **Name** and **Code** in the **Floor Setting** section, and click [**New**].

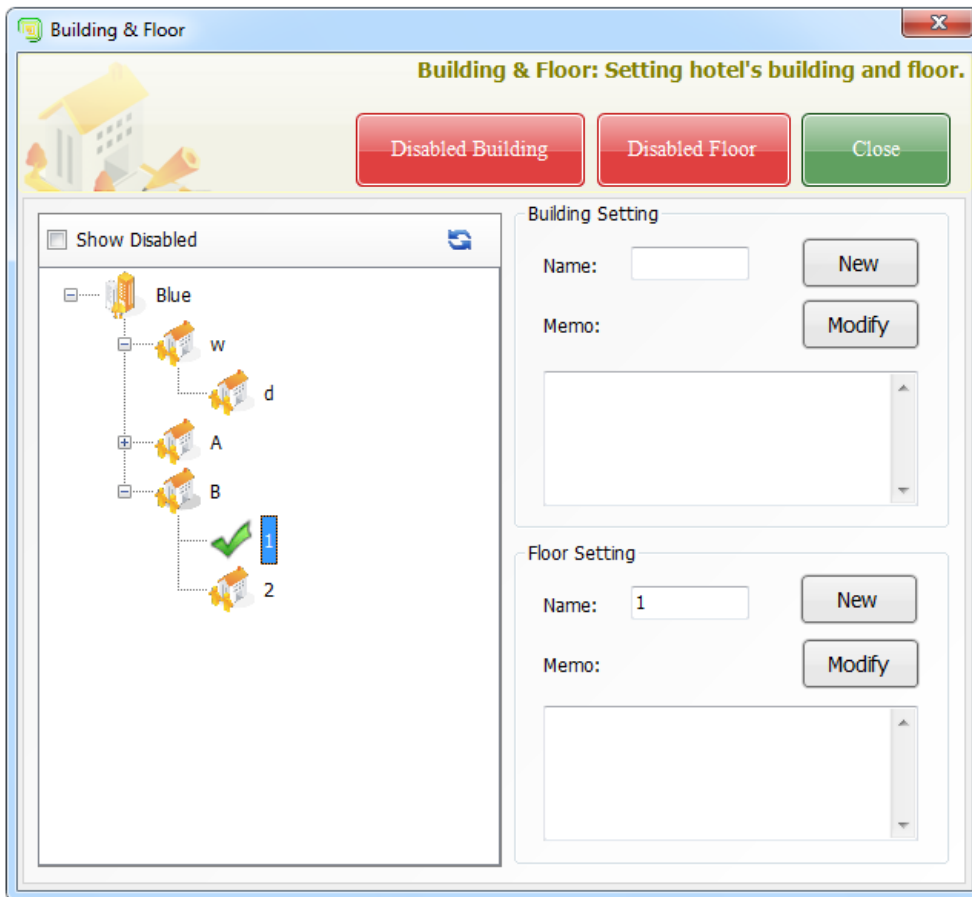


● **Deleting a floor**

To delete a floor: select the name of the floor to be deleted, and click [**Disable Floor**]. Only when all the rooms of this floor have been disabled can this floor be deleted.


● **Deleting a building**

To delete a building: select the name of the building to be deleted, and click [**Disable Building**]. Only when all the floors in this building have been disabled can this building be deleted.

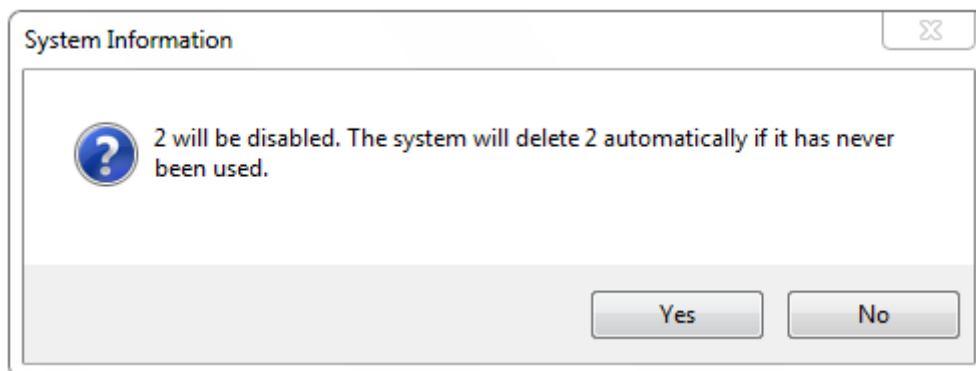

3.6.2 Room Type Setting

Click [**Room Management**] → [**Room Type Setting**] to enter the **Room Type Setting** Interface.

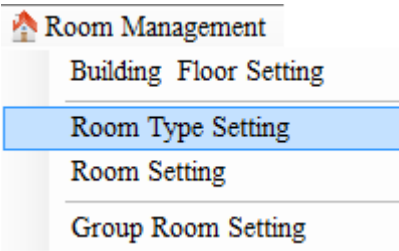


Adding a room type: filling in room type information, and click [New Type], as shown in the figure below:

 A screenshot of a "Room Type" configuration window. At the top, it says "Room Type" and "Room Type: Set room's type." Below this are four buttons: "New Type" (green with a plus sign), "Disable" (red), "Restore" (green), and "Close" (green). The form contains several input fields: "Name:", "Price:", "Hour Price:", "Room Size:", "Memo:", "Deposit:", "Hourly Price:", and "Bed Qty:". At the bottom, there is a table with columns: Room Type, Price, Deposit, Bed Qty, Hour Room Price, and Hourly Price. The table contains three rows: "general", "single room", and "VIP".

Room Type	Price	Deposit	Bed Qty	Hour Room Price	Hourly Price
general	200.00	500.00	2	50.00	50.00
single room	200.00	500.00	1	50.00	50.00
VIP	400.00	600.00	2	80.00	60.00


Disabling a room type: select the type, and click [Disable].

Only a **room type** which has never been used can be deleted.

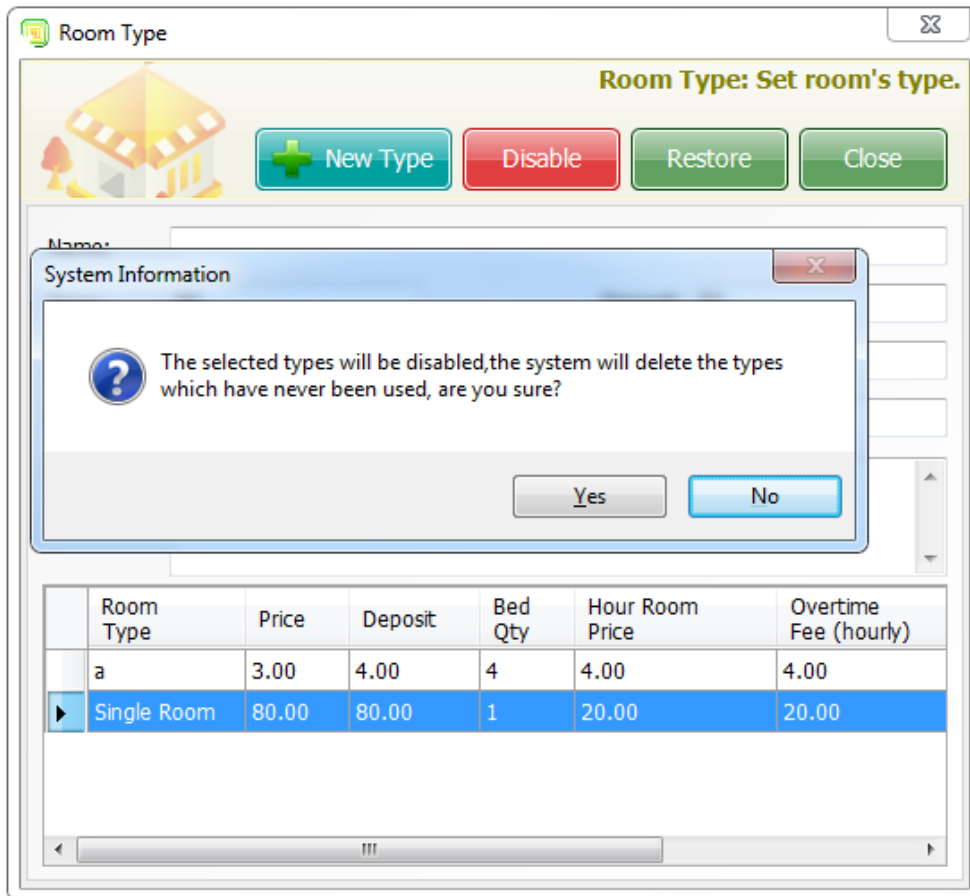

3.6.3 Room Setting

Click [Room Management] → [Room Setting] to enter the Room Setting Interface.

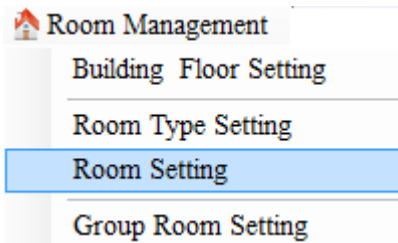

- **Creating a room**

Enter room information.

Add Room

Floor No.:

Room Type:

Room Status:

Room Size:

Extra Bed: Unit Price:

Room Memo:

Room No.:

Room Status: five room status you can choose. There are vacant, unclean, clean, repairing, stop used. The new room is defaulted as vacant room. You can set the room status for each room,

😊 **Note:** The Room Code should be unique, and the value is less than 256.

● **Create a batch of rooms**

Batch Creating

Floor Code Length: *Ex:12F,Length=2

StartRoomNo.: → Quantity:

*Ex:12F,Start: 12001,Create 30 Rooms.

Start Room No = 12001, Quantity = 30.

Special Option

With 4 at last With 4 in the middle

With 7 at last With 7 in the middle

Special Character

Sign: Fore Behind

Floor Code Length indicates the length of a floor name. For example, for Room 1201 on Floor 12, **12** is the floor name whose length is **2**; for Room 412 on Floor 4, **4** is the floor name, whose length is **1**.

Start Room No.: The number of first room.

Quantity: How many rooms will be created.


Special Option: Hotel management staff can add Prefix in the room number or suffix behind the room number.

When you fill out all information above, then you need to click [**Batch**], confirm the prompt and click [**Yes**] to complete batch creation.

Name	Code	Sub Code	Size	Memo	Building No.	Floor No.	Room Type	Disable
A001	1	0	4		A	1	a	<input type="checkbox"/>
A002	2	0	4		A	1	a	<input type="checkbox"/>
A003	3	0	4		A	1	a	<input type="checkbox"/>
A005	5	0	4		A	1	a	<input type="checkbox"/>
A006	6	0	4		A	1	a	<input type="checkbox"/>
A008	8	0	4		A	1	a	<input type="checkbox"/>
A009	9	0	4		A	1	a	<input type="checkbox"/>
A010	10	0	4		A	1	a	<input type="checkbox"/>
A011	11	0	4		A	1	a	<input type="checkbox"/>
A012	12	0	4		A	1	a	<input type="checkbox"/>
A013	13	0	4		A	1	a	<input type="checkbox"/>
A015	15	0	4		A	1	a	<input type="checkbox"/>


Disabling/Restoring rooms

Choose a room, click  Disable, and then click .

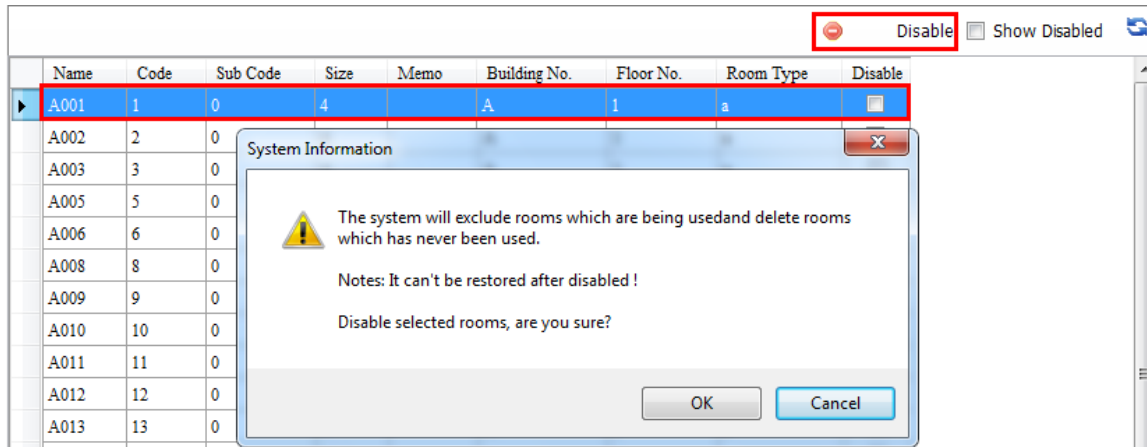

The screenshot shows the 'Disable' dialog box over a table of rooms. The 'Disable' button in the top right of the window is highlighted with a red box. The dialog box contains the following text:

System Information


 The system will exclude rooms which are being used and delete rooms which has never been used.


Notes: It can't be restored after disabled!

Disable selected rooms, are you sure?

Buttons: OK, Cancel


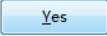
If a room which has never been used, it can not be restored after disabled; otherwise, it can be restored after disabled.

Click Show Disabled, and then click , disabled rooms (have used before) which are ticked up will appear again.

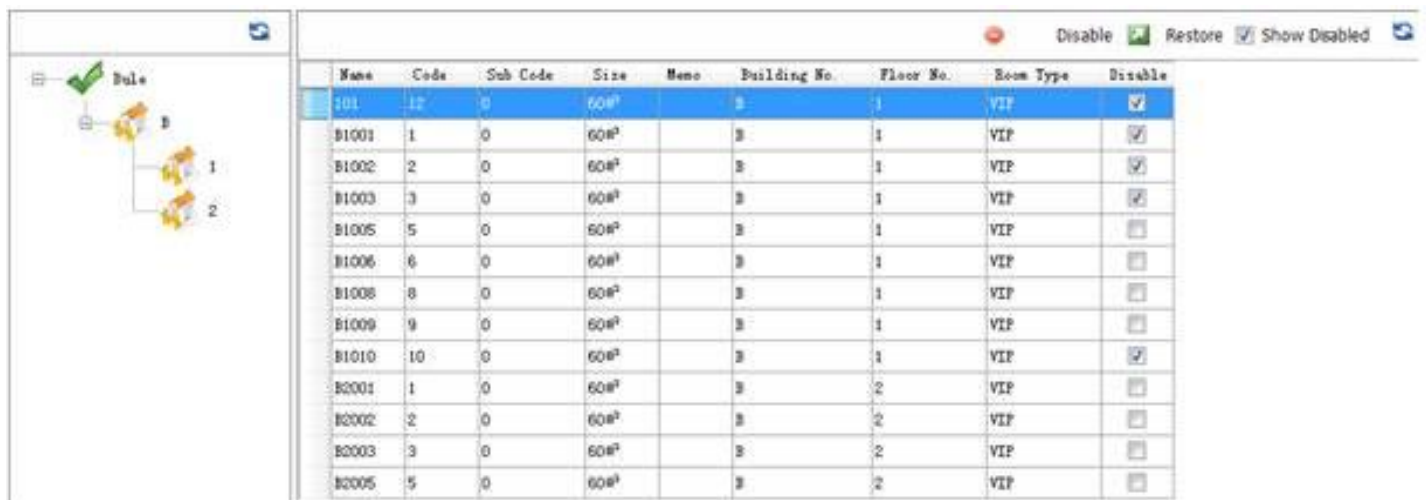


The screenshot shows the room management interface with the 'Show Disabled' checkbox checked and the 'Refresh' button visible. The table displays the following data:

Name	Code	Sub Code	Size	Memo	Building No.	Floor No.	Room Type	Disable
101	12	0	60m²		3	1	VIP	<input checked="" type="checkbox"/>
B1001	1	0	60m²		3	1	VIP	<input checked="" type="checkbox"/>
B1002	2	0	60m²		3	1	VIP	<input checked="" type="checkbox"/>
B1003	3	0	60m²		3	1	VIP	<input checked="" type="checkbox"/>
B1005	5	0	60m²		3	1	VIP	<input type="checkbox"/>
B1006	6	0	60m²		3	1	VIP	<input type="checkbox"/>
B1008	8	0	60m²		3	1	VIP	<input type="checkbox"/>
B1009	9	0	60m²		3	1	VIP	<input type="checkbox"/>
B1010	10	0	60m²		3	1	VIP	<input checked="" type="checkbox"/>
B2001	1	0	60m²		3	2	VIP	<input type="checkbox"/>
B2002	2	0	60m²		3	2	VIP	<input type="checkbox"/>
B2003	3	0	60m²		3	2	VIP	<input type="checkbox"/>
B2005	5	0	60m²		3	2	VIP	<input type="checkbox"/>

To restore a room, you can choose a disable room, click  Restore, and then click .

3.6.4 Group Room Setting


Click [Room Management] → [Group Room Setting] to enter the **Group Room Setting** Interface.

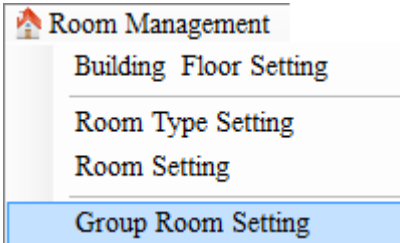

Step 1: Add a new group name.


Step 2: Select and add rooms to the group.


The figure below illustrates creation of a new group named **Single Room**, and moving of all the rooms of the **Single Standard Room** into this group:

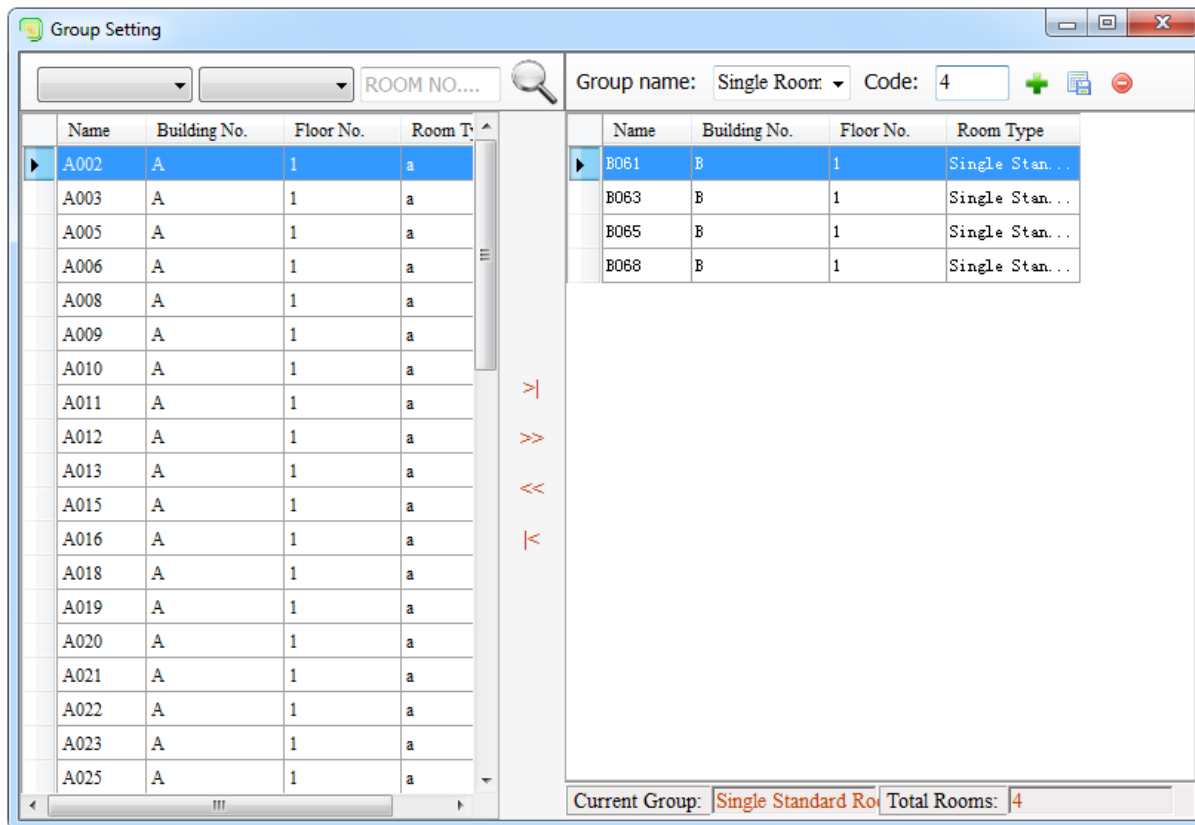

3.7 Setup Card

Click [Card Management] → [Setup Card] to enter the **Setup Card** Interface.

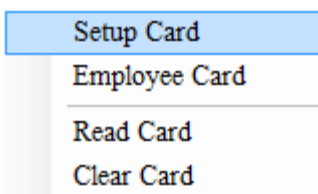

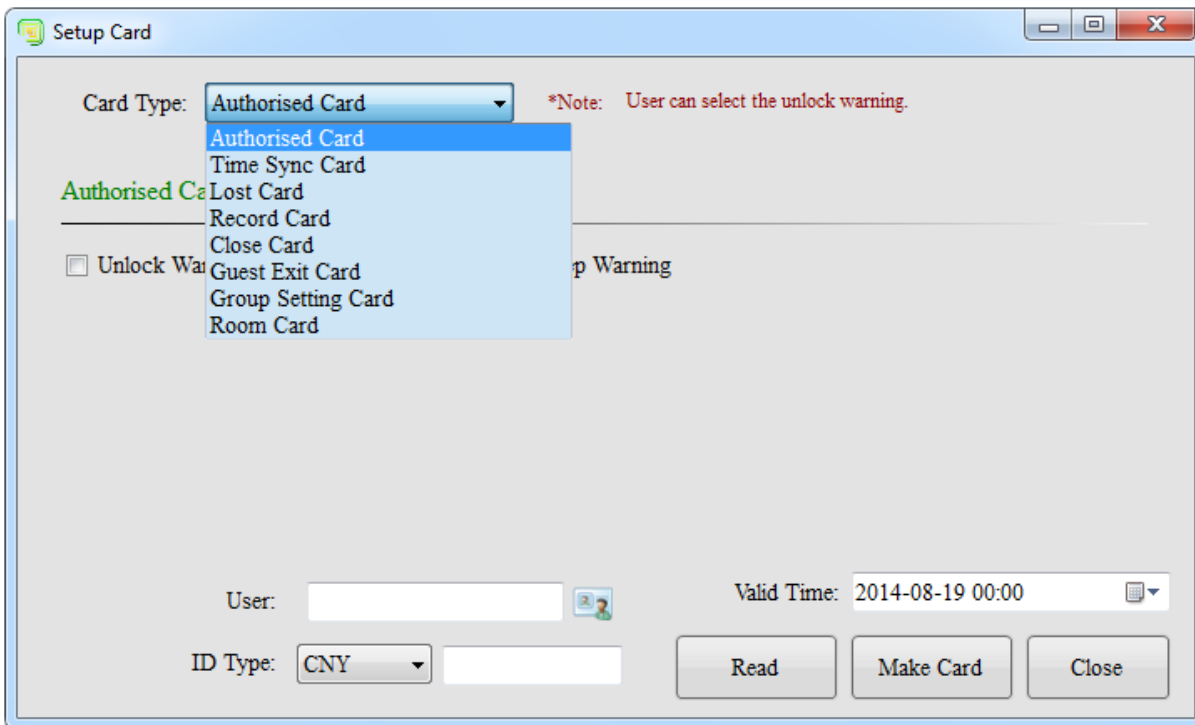


Setup cards include an Authorised Card, Time Sync Card, Lost Card, Record Card, Close Card, Guest Exit Card, Group Setting Card, and Room Card.

😊 **Note:** Before operating this menu, make sure that card dispenser connects with a computer. Otherwise, it is impossible to read or write a card; when a new lock is installed, please be sure to configure an Authorised Card, Time Sync Card, and Room Card in turn, and initialize the lock.


3.7.1 Authorised Card

Purpose: This is used to authorised a hotel lock. Only after a hotel lock is authorised can it reacts to a corresponding card of the hotel. Otherwise, it will alarm.


Click [**Card Management**] → [**Setup Card**] to enter the **Setup Card** Interface.

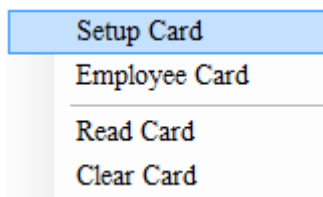

 Select [**Authorised Card**] in the **Card Type** field.

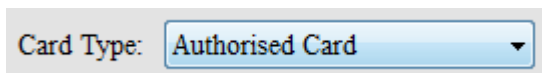

You can select [**Unlock Warning**], and specify how many times the alarm will be given. Or you may disable it.

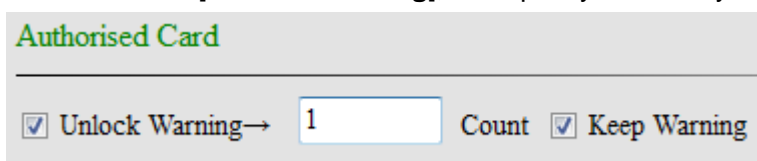

After selection, put a card on the reader, and click [**Make Card**] to configure the authorised card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with two buzzes.


Incorrect configuration: The red indicator is on, with 5 ~15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, please refer to the hotel lock instructions.

3.7.2 Time Sync Card

Purpose: This is used to configure time for a hotel lock. Once configured, a hotel lock will have its time synchronized with the system time. Otherwise, some error alarms, like early expiry or extended use, are likely to occur to an issued card when checked.


Click [**Card Management**] → [**Setup Card**] to enter the **Setup Card** Interface.

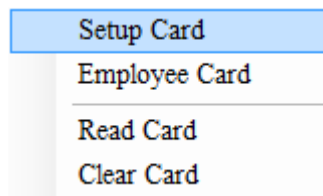

Select [**Time Sync Card**] in the **Card Type** field.

Card Type:

You can either synchronize with the system time or modify the time as necessary.

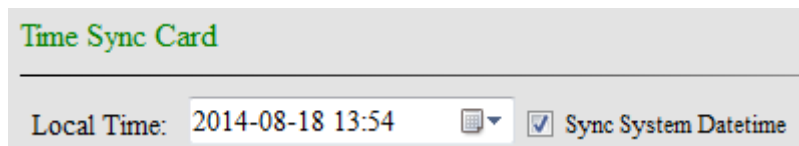

After selection, put a card on the reader, and click [**Make Card**] to configure the time card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with two buzzes.

Incorrect configuration: The red indicator is on, with 5-15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


3.7.3 Room Card


Purpose: This is used to configure a lock address for a hotel lock.


Click [**Card Management**] → [**Setup Card**] to enter the **Setup Card** Interface.

- Setup Card
- Employee Card
- Read Card
- Clear Card


Select **[Room Card]** in the **Card Type** field.

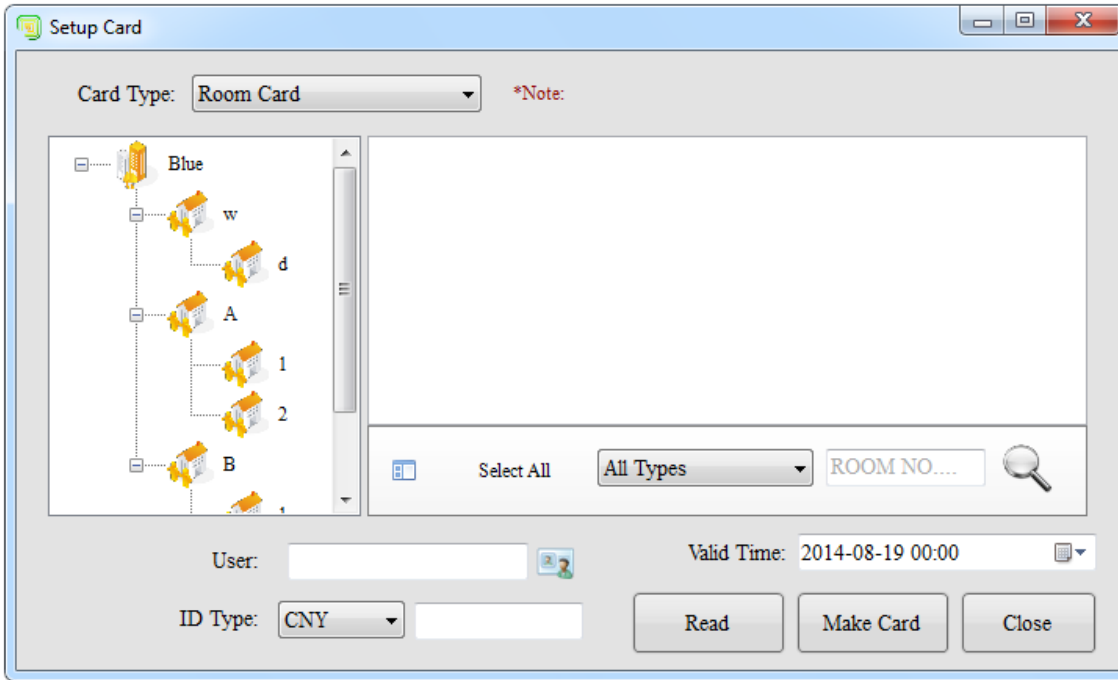

Click  to search for empty rooms. Select a floor to view the rooms on it, and tick the room you want to configure.

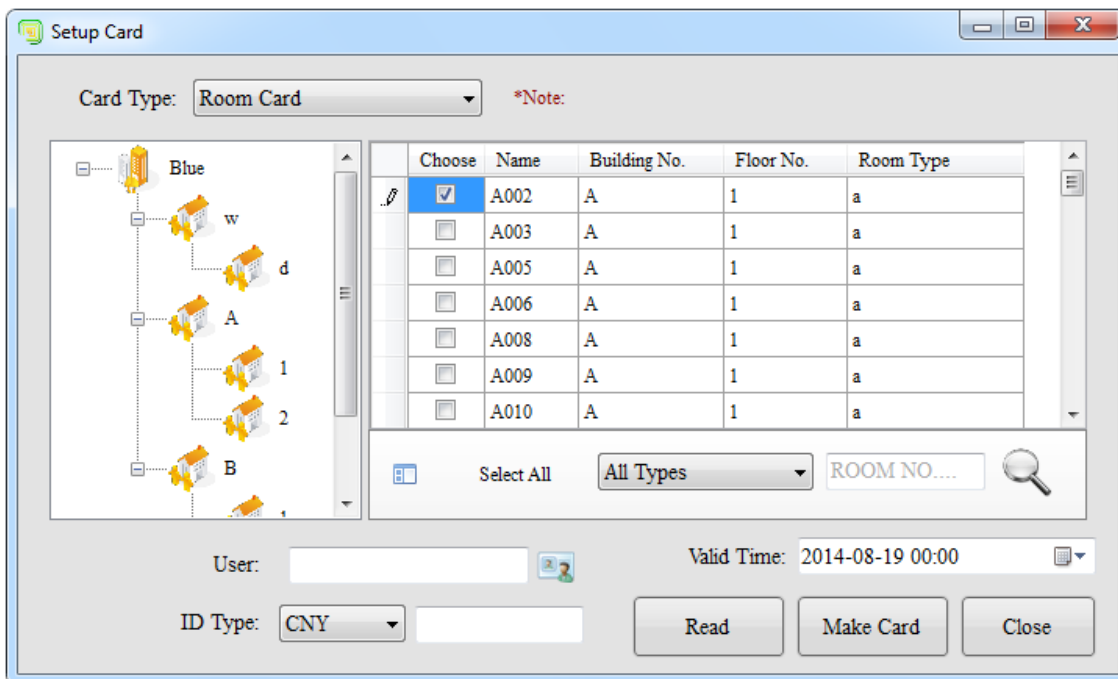

After selection, put a card on the reader, and click **[Make Card]** and select **[Yes]** in the prompt window to configure the room card.

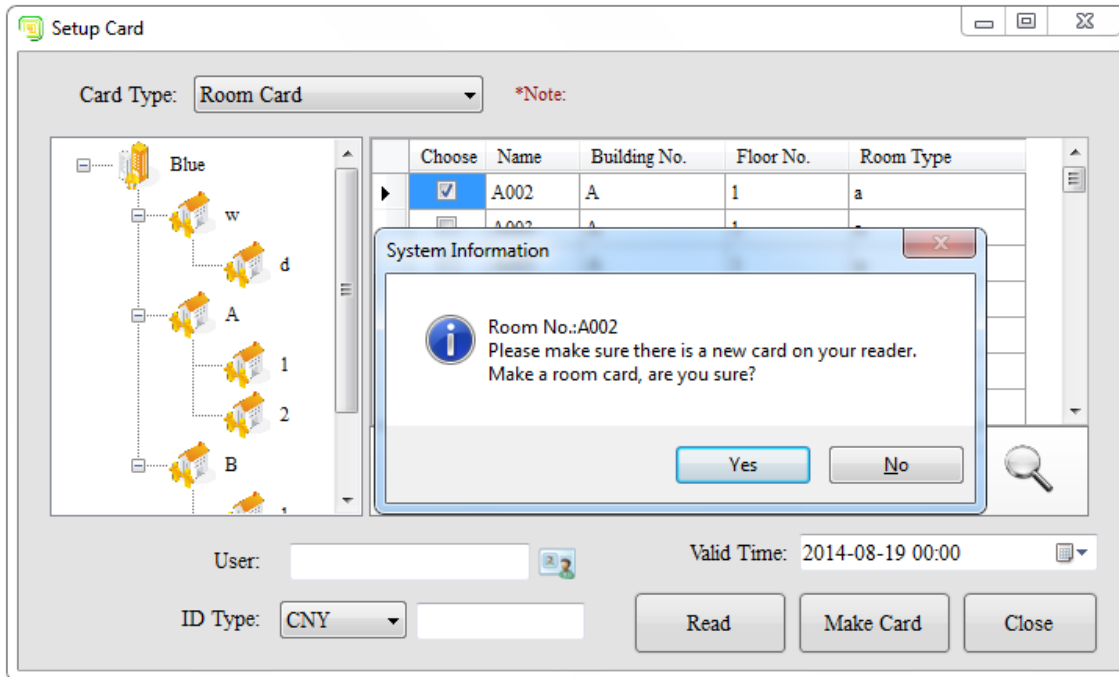

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with two buzzes.

Incorrect configuration: The red indicator is on, with 5-15 buzzes.


The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.

3.7.4 Lost Card

Purpose: In the valid time of the card, it is used for the following two cases:

- (1) **Lost current number:** This is used to report loss of a card. When a card is reported lost, the current hotel lock will react to it no more.
- (2) **Lost all card No. smaller than existing card No.** This is used to restrict access of a card number. When access is restricted, the current hotel lock will react no more to any card with a number smaller than the access-restricted card number.

Click **[Card Management]** → **[Setup Card]** to enter the **Setup Card** Interface.

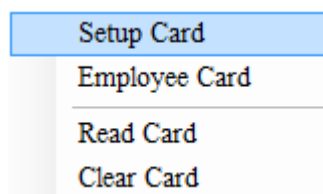

Select **[Lost Card]** in the **Card Type** field.

Card Type:

You can select **Lost current number** (lost card number) or **Lost all card No. smaller than existing card No.** (access-restricted card number). Or you can click **[Max Number]** to register loss of an access-restricted card, but this function must be used with caution, when the configuration is completed, all the cards issued previously will be invalid to the configured lock.

After selection, put a card on the reader, and click **[Make Card]** to configure the lost card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with two buzzes.

Incorrect configuration: The red indicator is on, with 5-15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.

3.7.5 Record Card

Purpose: This is used to read the opening records of a hotel lock.

Click **[Card Management]** → **[Setup Card]** to enter the **Setup Card** Interface.

Select **[Record Card]** in the **Card Type** field.

Card Type:

After selection, put a card on the reader, and click **[Make Card]** to configure the record card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: When the lock information is read, the green indicator will blink constantly, and remember not to remove the card, but wait until the buzzer starts sounding. When the buzzer makes five sounds and the green indicator is still on, indicating the records have been read, the card can be removed. If the card is not removed, the lock will read it again, but the configuration information inside the card has been overwritten by the opening record, so the red indicator will be on and an alarm will sound, which is normal.

Incorrect configuration: The red indicator is on, with 5 ~15 buzzes.


☺ **Note:** If the green indicator starts blinking in the very beginning, but before the whole operation is completed, the red indicator is on and 14 buzzes are sounded, that indicates only a part of the record has been read for some error.

The other sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


3.7.6 Close card

Purpose: This is a card used to disable all the current hotel locks. Any hotel lock to which this card has been applied will react no more to any card, and can be enabled by applying the authorised card to it.

Click [**Card Management**] → [**Setup Card**] to enter the **Setup Card** Interface.

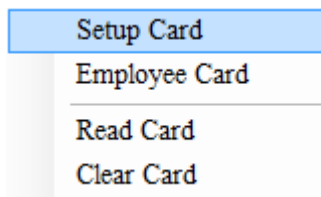

 Select [**Close Card**] in the **Card Type** field.

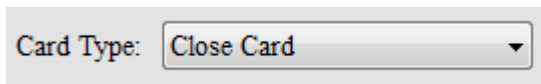

After selection, put a card on the reader, and click [**Make Card**] to configure the close card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with two buzzes.


Incorrect configuration: The red indicator is on, with 5 ~15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


3.7.7 Guest exit card

Purpose: This is used to check out. Once configured, any guest card can no longer open the door.

Click [**Card Management**] → [**Setup Card**] to enter the **Setup Card** Interface.

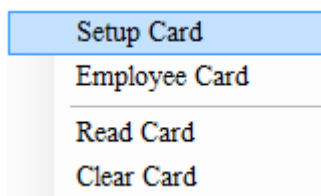

 Select [**Guest Exit Card**] in the **Card Type** field.

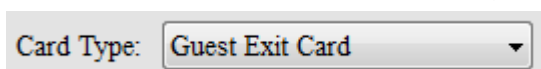

After selection, put a card on the reader, and click [**Make Card**] to configure the guest exit card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with two buzzes.


Incorrect configuration: The red indicator is on, with 5 ~15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.

3.7.8 Group setting card

Purpose: This is used to set the group type to which the current hotel lock belongs. When a configured group number card is used to open a door, only if the card is a member of the group to which the lock belongs can the lock be opened.


Click [**Card Management**] → [**Setup Card**] to enter the **Setup Card** Interface.

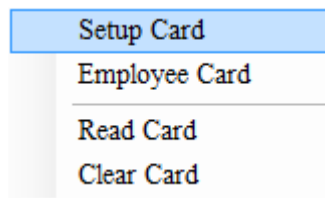

Select [**Group Setting Card**] in the **Card Type** field.



You can set or delete all groups, set or delete selected groups.

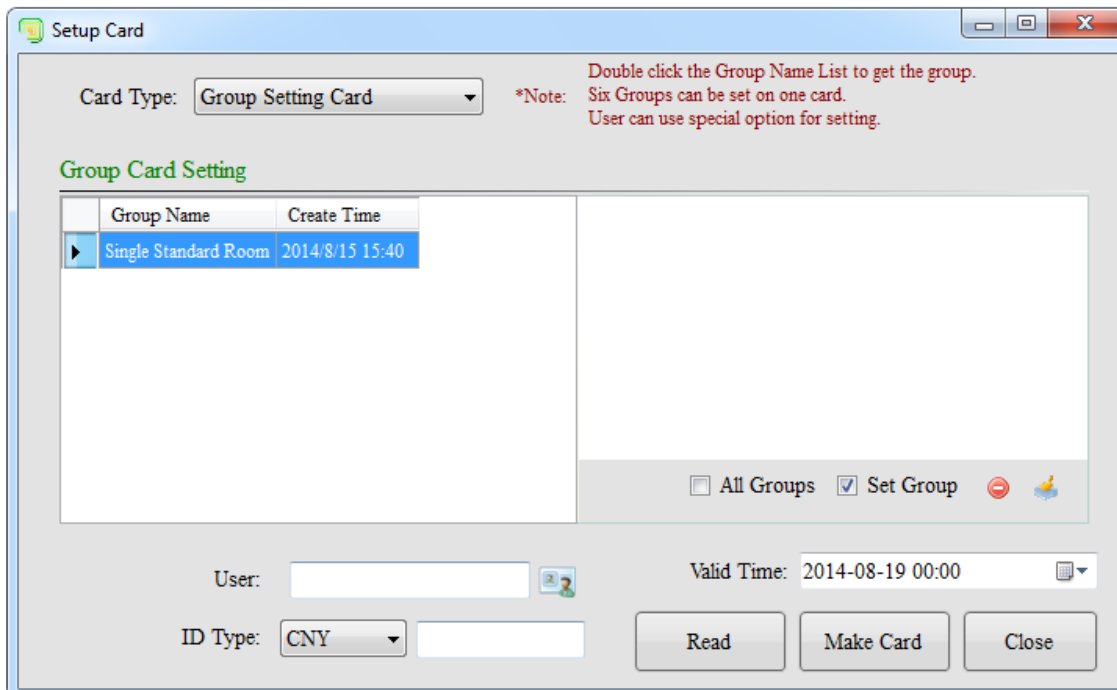


Double-click a listed group to add a corresponding group.


Each setting card can contain up to six groups.

Users can use special options for group setting, which are defined as follows:

 
Set all groups:

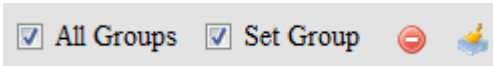


Set selected groups:

 

Delete all groups:

 

Delete selected groups:

 

After selection, put a card on the reader, and click **[Make Card]** to configure the group setting card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:


Correct configuration: The green indicator is on, with two buzzes.

Incorrect configuration: The red indicator is on, with 5-15 buzzes.


The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.

3.8 Logout and Exit

Click **[Logout]** to logout from the system.

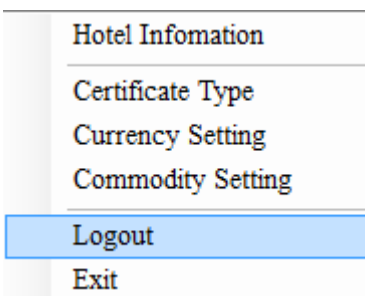

Click **[Exit]** to exit from the system.

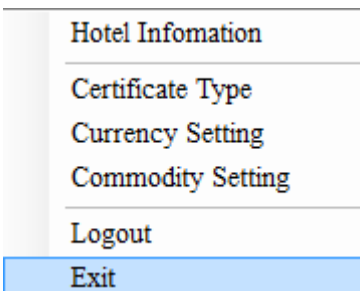

4 Daily Management


4.1 User Management

Click [**User Management**] in the user menu to pop up the submenus as follows, which will be described respectively in the sections that follow.




4.1.1 Group User Management


Click [**User Management**] → [**Group User Management**] to enter the **Group User Management** Interface.

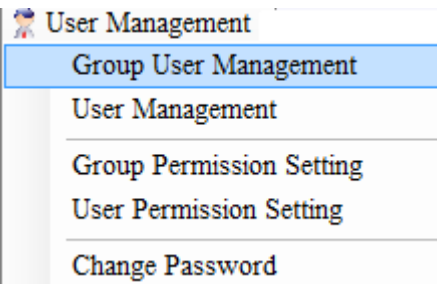

Click [**Add**] to create your own user group, such as Manage Groups and Receptionist.

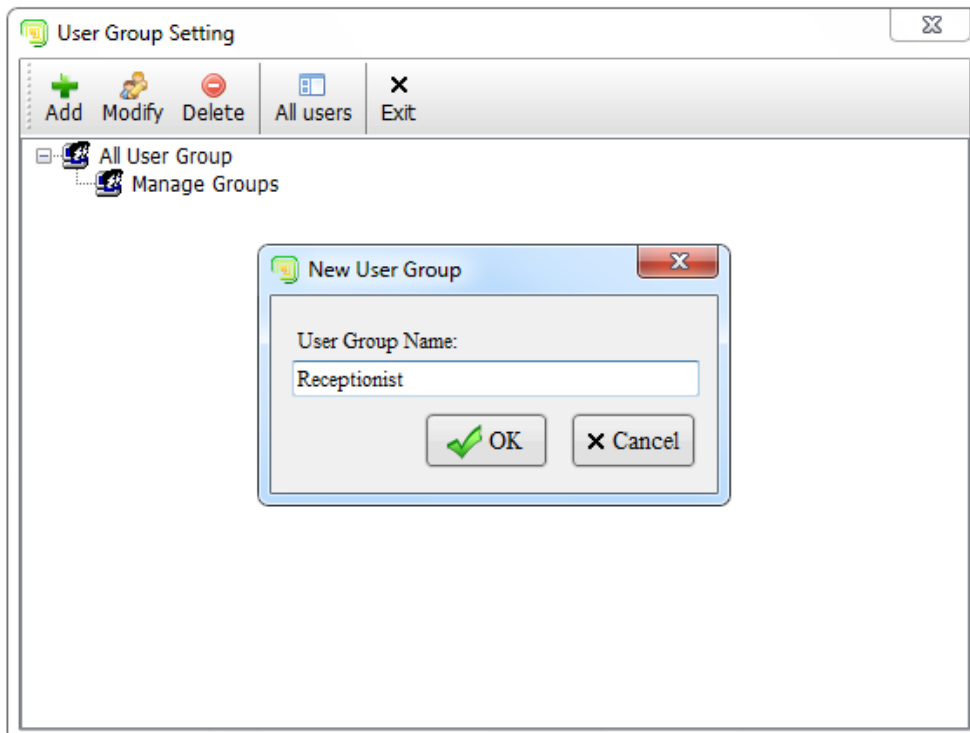


When the user group is created, it will be listed as shown in the figure below.

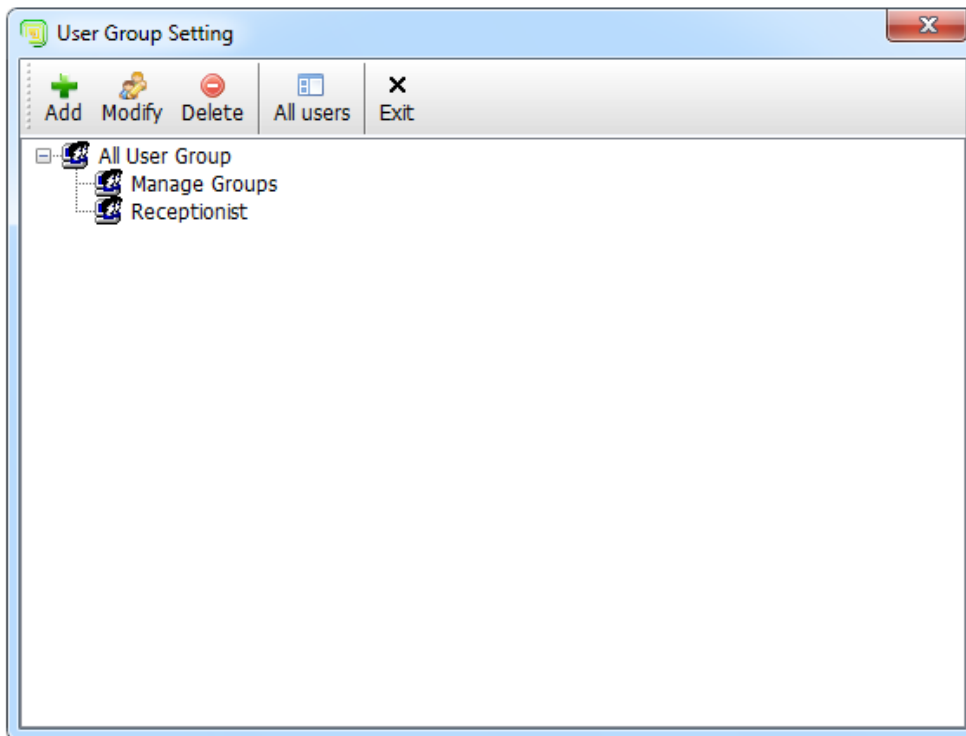


Any created user group can be modified or deleted.

4.1.2 User Management

Click **[User Management]** → **[User Management]** to enter the **User Management** Interface.

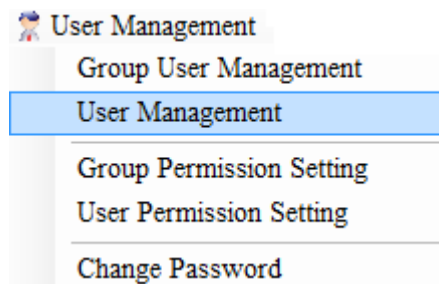


Click **[Add]** to create a user. Remember to select a user group which the user belongs.

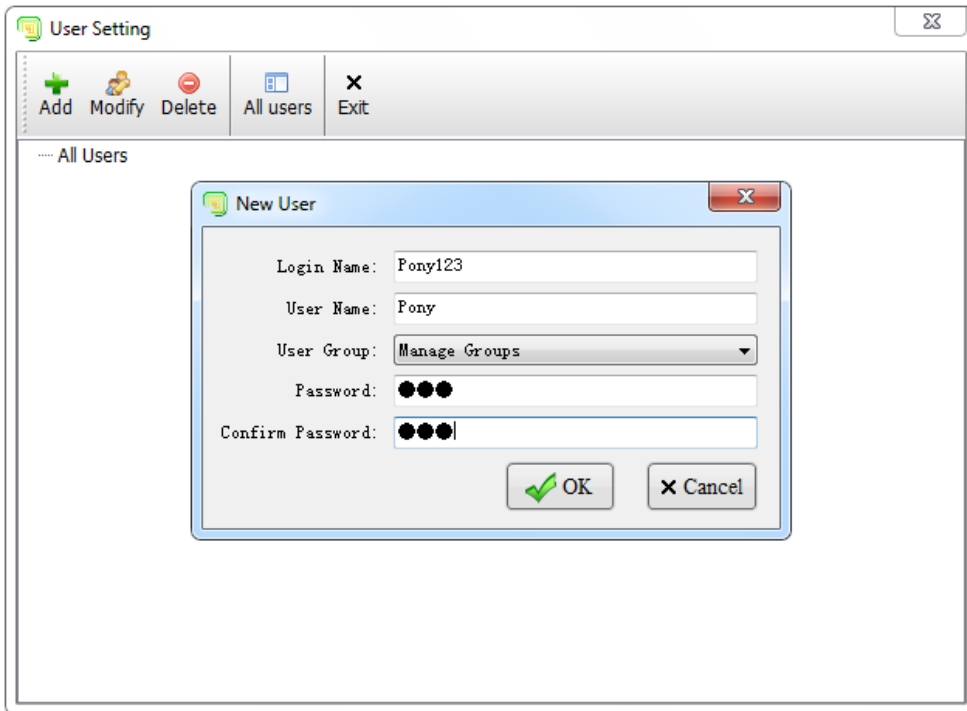


Any created user can be modified or deleted.

4.1.3 Group Permission Setting

Click [User Management] → [Group Permission Setting] to enter the **Group Permission Setting** Interface.

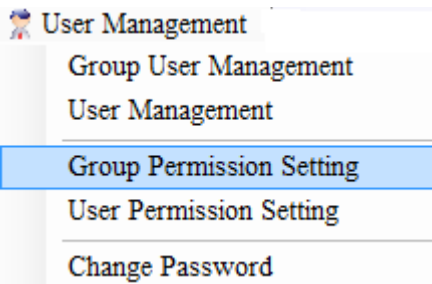

Click a group, and tick the permission you want to assign to the group.

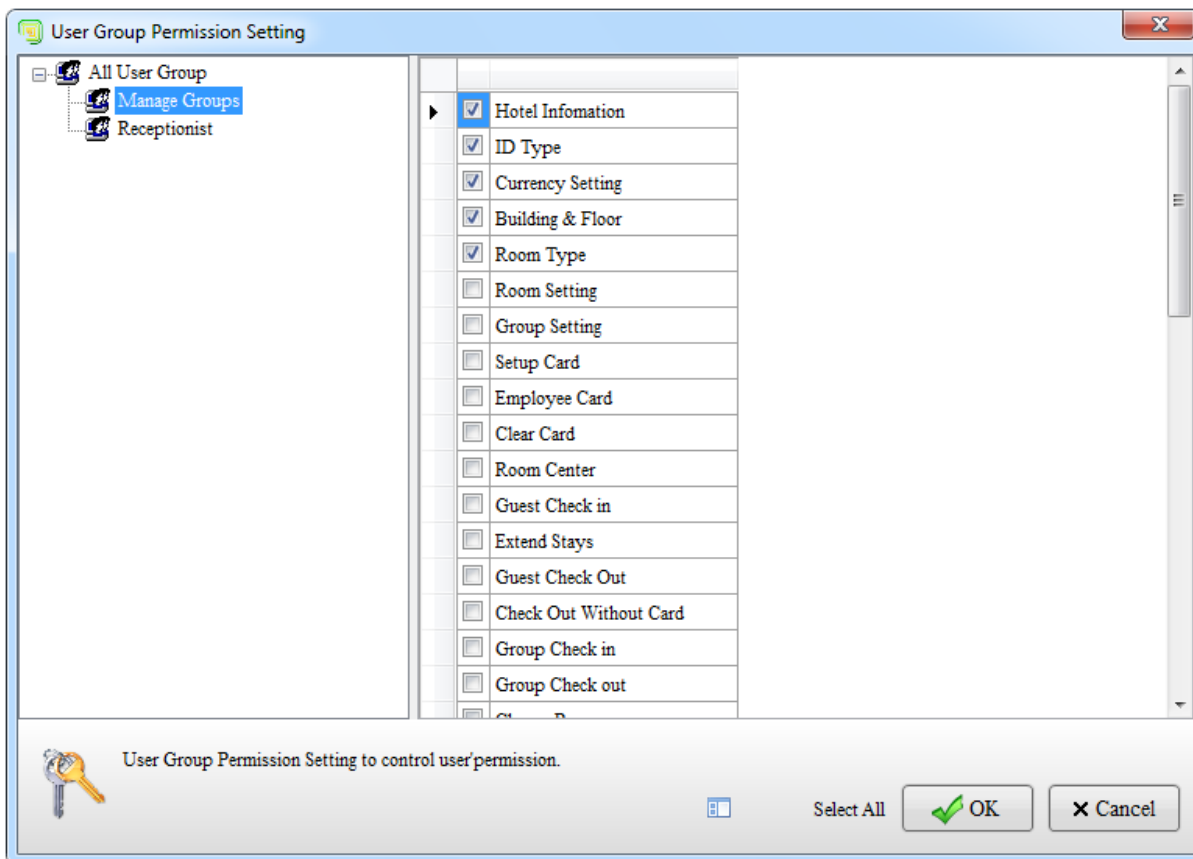


After selection, click [OK] to complete the operation.

4.1.4 User Permission Setting

Click [User Management] → [User Permission Setting] to enter the **User Permission Setting** Interface.




Click a user, and tick the permission you want to assign to the user. If there are no rights specified in particular for a user, the user's permissions are limited to those assigned to his/her user group.

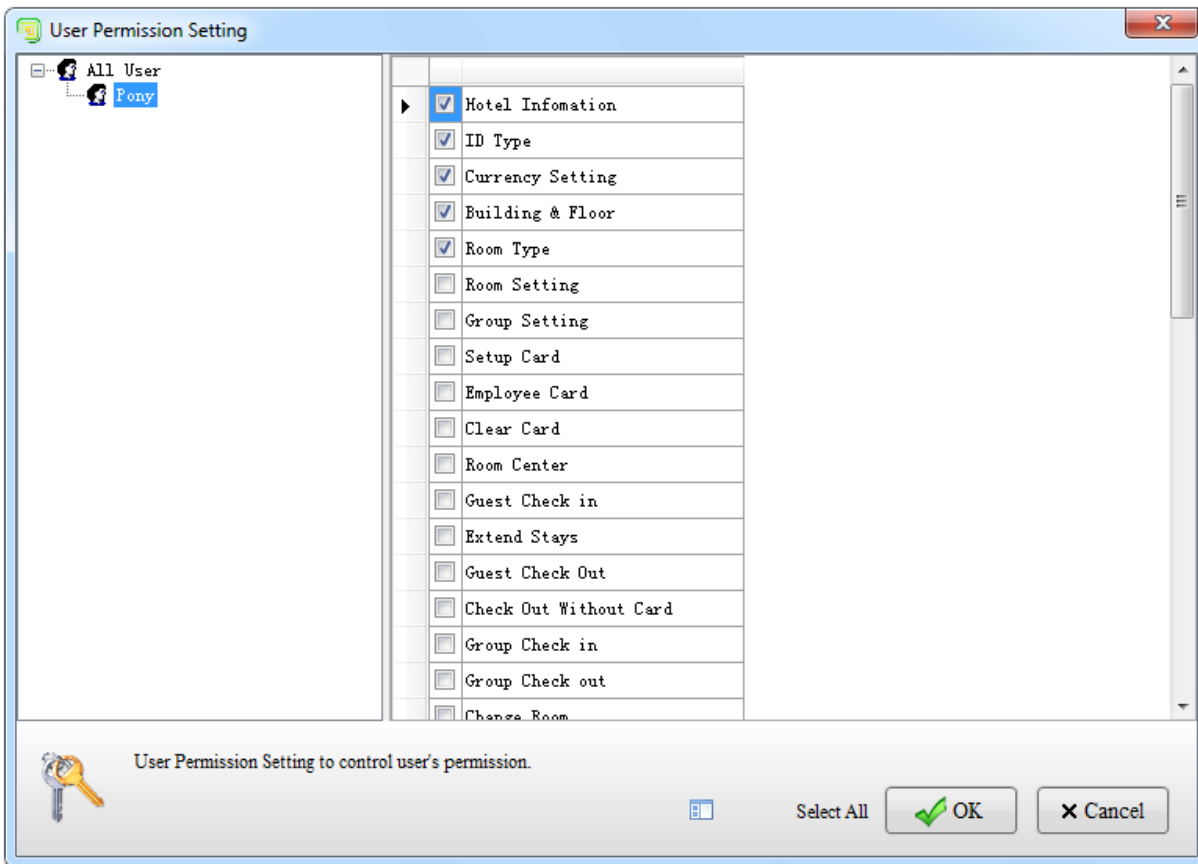


After selection, click [OK] to complete the operation.

4.2 Employee Card Management


Click [Card Management] → [Employee Card] to enter the **Employee Card** Interface.

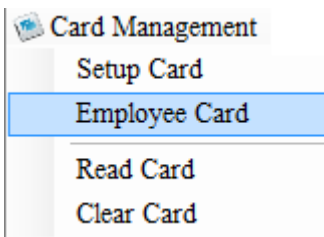

☺ **Note:** Before operating on this menu, be sure to connect the card dispenser correctly. Otherwise, it is impossible to read or write a card.

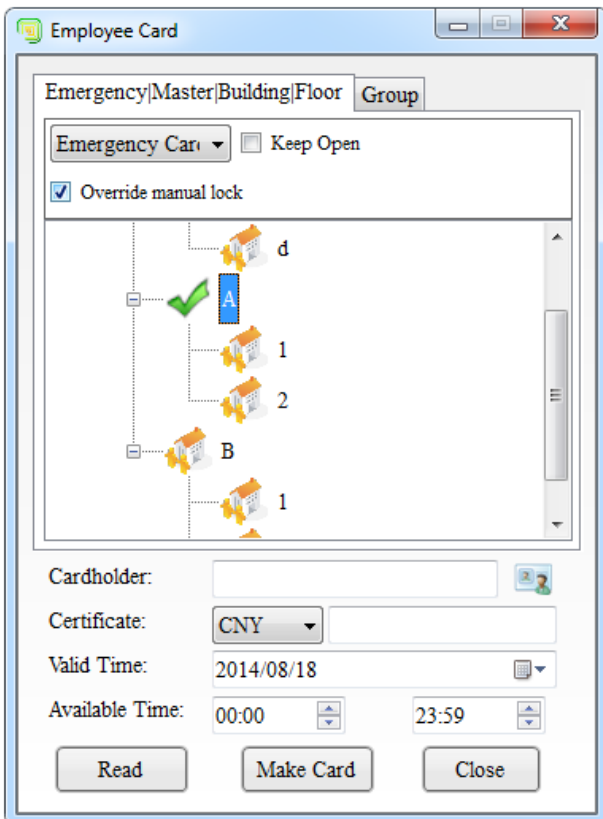


The employee cards include an Emergency Card, Master Card, Building Card, Floor Card, and Group Card. The first four types of cards have the same setting interface, as shown in the figure above. A group card has a separate setting interface as follows:

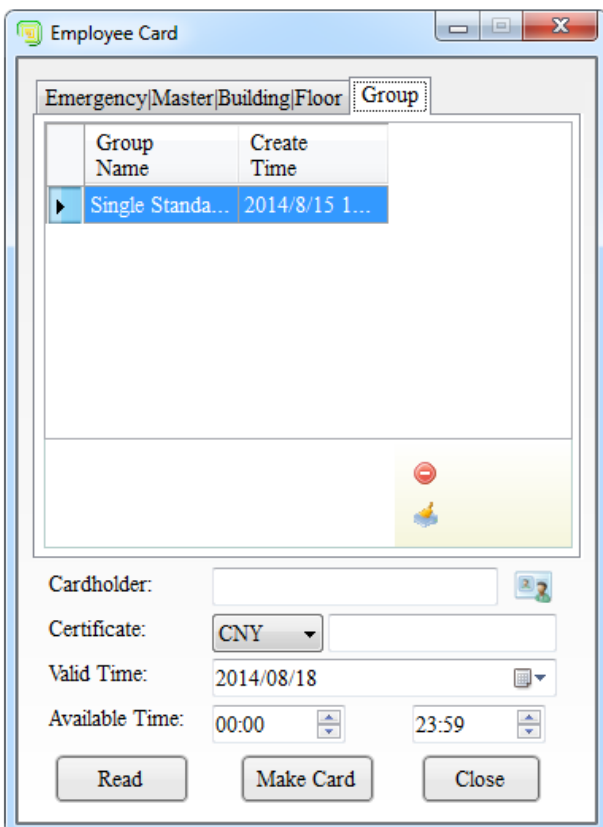


4.2.1 Emergency Card

Purpose: This is used to open a door in emergency. It can open any door. You can select the **Override Manual Lock** and **Keep Open** functions.


Click [**Card Management**] → [**Employee Card**] to enter the **Employee Card** Interface.

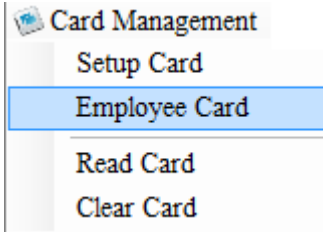

 Select **Emergency Card** in the **Card Type** field.

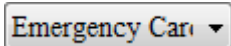


You can select the **Keep Open** and **Override Manual Lock** functions.

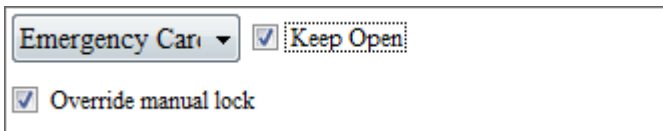

When **Keep Open** is ticked, the door will be opened and not closed until the card is applied again.

When **Override Manual Lock** is ticked, even a door that is locked inside can be opened.

 Besides, remember to configure **Valid Time** and **Available Time**, only within which can the card be valid.

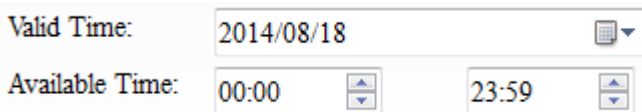

After selection, put the card you want to configure in the card issue area of the card dispenser, and click [**Make Card**] to configure the emergency card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with a buzz.

Constantly open: The green indicator is on, with one buzz (the lock is opened or closed).

Ordinarily open: The green indicator turns on, with one buzz (the lock is opened, and the door can be opened); the green indicator is kept on for about 5 seconds before the green and red indicators blink in turn, indicating the door is going to open, and finally there sounds one buzz (the lock is closed, and the door can no longer be opened).


Incorrect configuration: The red indicator is on, with 5-15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


4.2.2 Master Card

Purpose: This is used for general control of the hotel. It is actually equivalent to the emergency card, as it can open any door. You can select the **Keep Open** function or not.

Click [**Card Management**] → [**Employee Card**] to enter the **Employee Card** Interface.

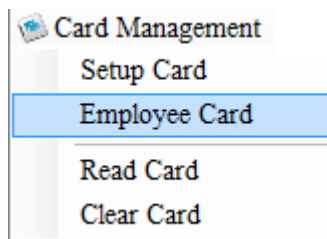

 Select **Master Card** in the **Card Type** field.




You can select **Keep Open** function or not.



When **Keep Open** is ticked, the door will be opened and not closed until the card is applied again.

 Besides, remember to configure **Valid Time** and **Available Time**, only within which can the card be valid.

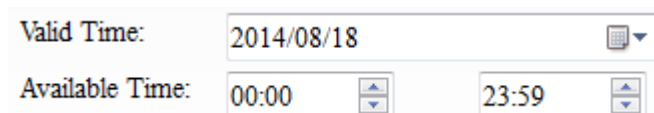

After selection, put the card you want to configure in the card issue area of the card dispenser, and click [**Make Card**] to configure the master card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator is on, with a buzz.

Constantly open: The green indicator is on, with one buzz (the lock is opened or closed).

Ordinarily open: The green indicator turns on, with one buzz (the lock is opened, and the door can be opened); the green indicator is kept on for about 5 seconds before the green and red indicators blink in turn, indicating the door is going to open, and finally there sounds one buzz (the lock is closed, and the door can no longer be opened).


Incorrect configuration: The red indicator is on, with 5-15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


4.2.3 Building Card

Purpose: This card can be used to open all the rooms in the configured building (ordinarily open).


Click [**Card Management**] → [**Employee Card**] to enter the **Employee Card** Interface.

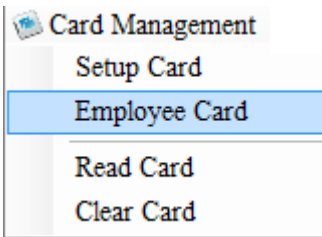

 
Select **Building Card** in the **Card Type** field.



Select the building you want to configure:

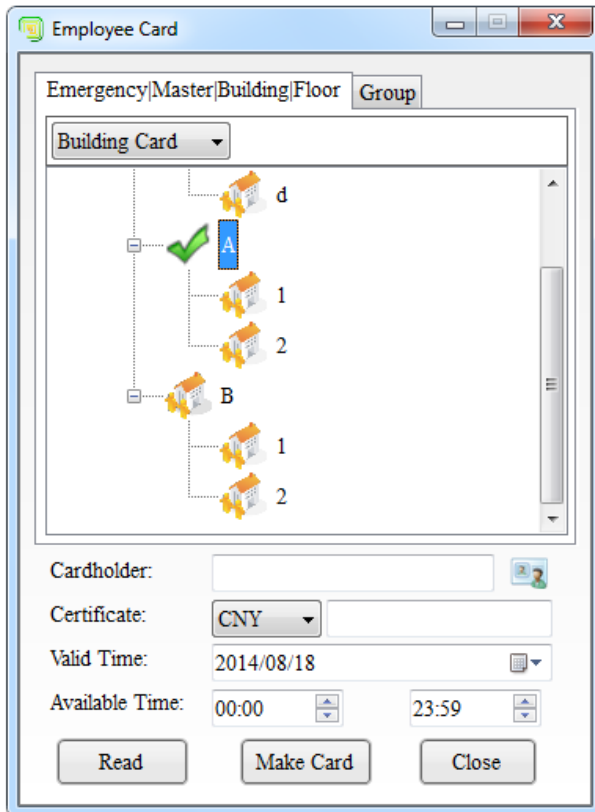

 Besides, remember to configure **Valid Time** and **Available Time**, only within which can the card be valid.

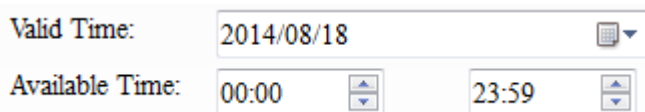

After selection, put the card you want to configure in the card issue area of the card dispenser, and click **[Make Card]** to configure the guest building card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:

Correct configuration: The green indicator turns on, with one buzz (the lock is opened, and the door can be opened); the green indicator is kept on for about 5 seconds before the green and red indicators blink in turn, indicating the door is going to open, and finally there sounds one buzz (the lock is closed, and the door can no longer be opened).


Incorrect configuration: The red indicator is on, with 5-15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


4.2.4 Floor Card

Purpose: This card can be used to open all the rooms on the configured floor (ordinarily open).


Click [**Card Management**] → [**Employee Card**] to enter the **Employee Card** Interface.

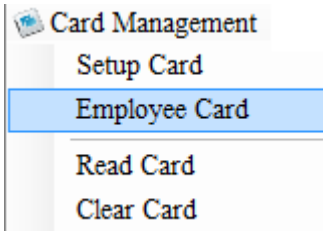

 
Select **Floor Card** in the **Card Type** field.

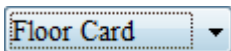

Select the floor you want to configure:

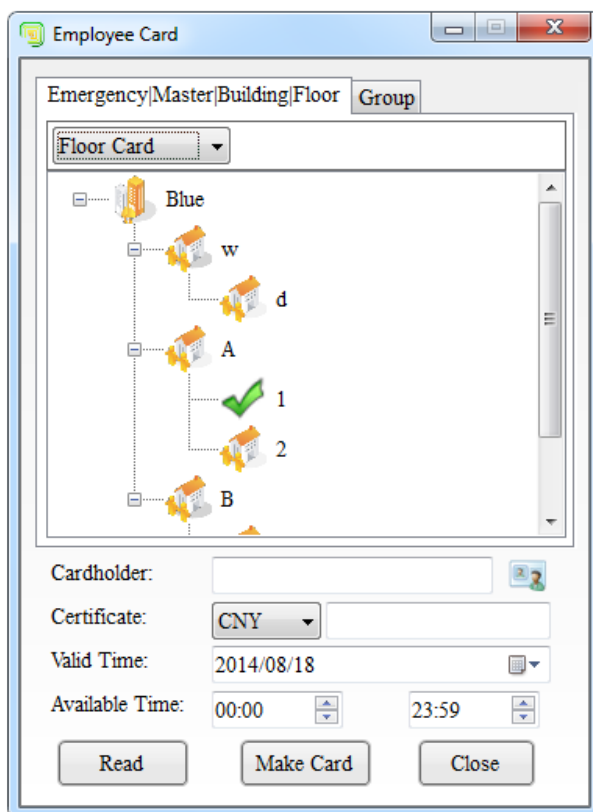

 Besides, remember to configure **Valid Time** and **Available Time**, only within which can the card be valid.



After selection, put the card you want to configure in the card issue area of the card dispenser, and click [**Make Card**] to configure the guest floor card.

Correct configuration: The card dispenser makes a buzz.

Incorrect configuration: The card dispenser makes no buzz.

When the card is checked against a hotel lock:


Correct configuration: The green indicator turns on, with one buzz (the lock is opened, and the door can be opened); the green indicator is kept on for about 5 seconds before the green and red indicators blink in turn, indicating the door is going to open, and finally there sounds one buzz (the lock is closed, and the door can no longer be opened).

Incorrect configuration: The red indicator is on, with 5-15 buzzes.

The sounds of the alarm are defined in [5.1 Sound Prompt of an Invalid Card](#). For more information, see the hotel lock instructions.


4.2.5 Read Card


Click [**Card Management**] → [**Read Card**] to read the information of current card.

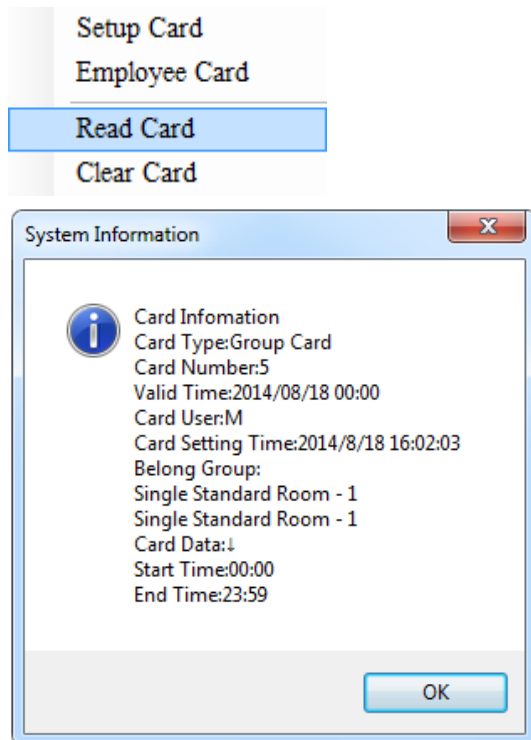

4.2.6 Clear Card

Click [**Card Management**] → [**Clear Card**] to clear the information of current card.

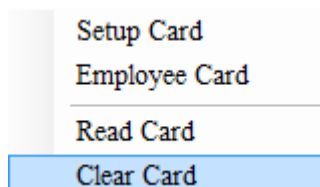

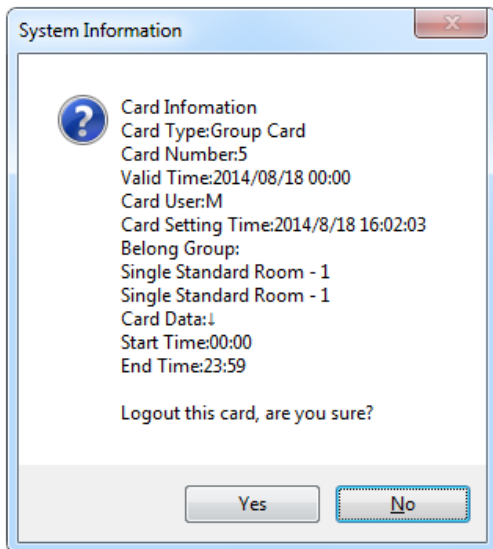

4.3 Reception Center




Reception Center includes Room Center, Group Reception, Room Reservation and Room Reservation.

4.3.1 Room Center

i. Description of function zones

The main interface is as follows:

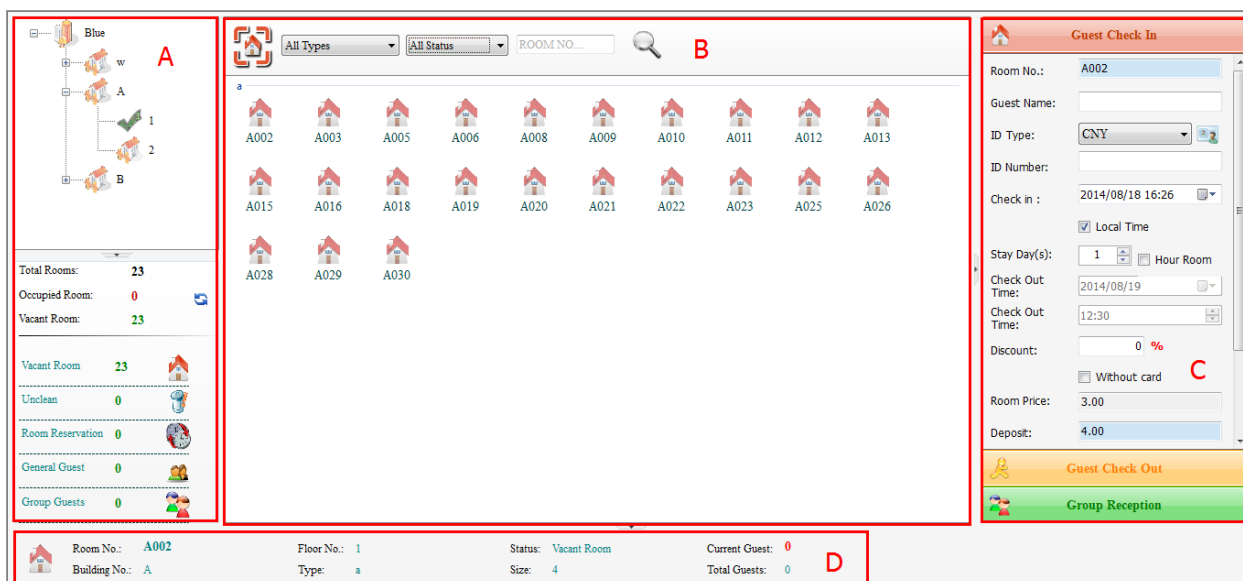

- A. General status of the floors and rooms
- B. Room list
- C. Guest check-in and check-out

D. Current room status

For the operation on each zone, please refer to **ii. Function zone operation and description**.

ii. Function zone operation and description

A. General status of the floors and rooms

☺ **Note:** Operators can click a floor name to check the room list and corresponding status. The figure below illustrates the room list and general status of 2F.

The screenshot displays a user interface for managing hotel rooms. On the left, a floor plan for the 2nd floor is shown with zones labeled 'Blue', 'w', 'A', '1', and 'B'. On the right, a room list is presented with a search bar at the top containing 'All Types', 'All Status', and a search input field labeled 'ROOM NO...' with a magnifying glass icon. Below the search bar, room icons are arranged in two rows: the first row contains A031, A032, A033, A035, A036, A038, A039, A050, A051, and A052; the second row contains A053, A055, A056, A058, and A059. At the bottom of the room list, a summary box provides the following data: Total Rooms: 55, Occupied Room: 0, and Vacant Room: 55. A red square frame highlights a refresh button (a circular arrow icon) located to the right of the 'Occupied Room' value.

Refresh this function zone . Please use the button inside the red frame.

B. Room lists

☺ **Note:** The rooms on the current floor are displayed in a classified list or in a general list.

To search for a room: select **Type** and **Status**, input **Room Name** or **Reserve Information** (displayed when the **Status** is **Reserve**), and click the search button (the magnifier icon) to obtain the room list. Both **Room Name** and **Reserve Information** support fuzzy search.

Room Status includes vacant room, unclean, room reservation, general guest, VIP guest, group guests, cleaning, repairing, stop used, available reserved room and expired reservation. You can select the room status for each room when creating, otherwise, the new room is default as vacant room.

Available reserved room: It means though the room has been reserved, other guests still can check in if it is still not the time for the guest who reserved the room to check in.


Expired reservation: The reservation time has expired, it means the guest who booked the room did not check in on time. And during this period of time, other guest can't check until you cancel the reservation at reservation management.

Room reservation: Other guests can not check in a certain room an hour (including cleaning time) before the reserved time.




To switch the list: click the button to switch the way the list is displayed.

Right-click menu: Right-click the icon of a room to pop up a shortcut menu, as shown in the figure below:

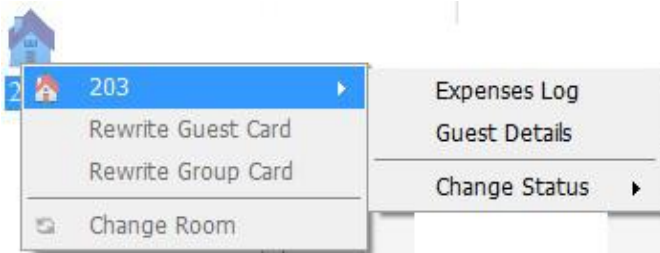

The figure above illustrates the right-click menu of 203, from which operators can check the **Expenses Log**, **Change Status** and **Guest Details**, **Rewrite Guest Card**, **Rewrite Group Card**, **Change Room**, and check **Other Expenses**.


To refresh this list: click the search button .

C. Guest check-in and check-out

😊 **Note:** This zone consists of three modules: **Guest Check In**, **Guest Check Out**, and **Group Reception**.

a. Guest Check In


Operations: Click the icon of a room in the list, input guest information, select **Arrival Date**, **Stay Day**, **Level Date**, and **Level Time**, and click [**Checking In**] to finish check-in, as shown in the figure below:

Upon successful check-in, the corresponding icon in the room list will be modified, for example, to .


b. Guest Extension

Four ways for extension: extension by days, extension by hours, day room extension by hours, hour room extension by days.


The operation of extension by days and extension by hours (take extension by hours as example): Fill in the check in information(extension by hour time) that pops up , click [**Extend Stay**], and click [**OK**] to finish extension, as shown in the figure below:

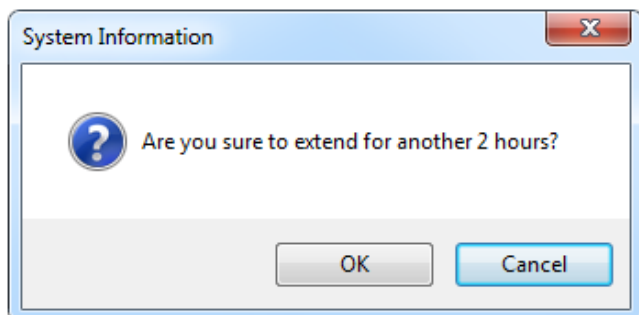

The operation of day room extension by hours and hour room extension by days (take day room extension by hours as example): Fill in the check in information (day room extension by hours) that pops up, click [**Extend Stay**], the system information will pop up as following:

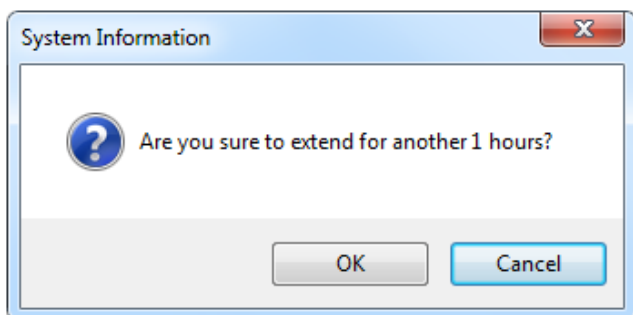

Click [**OK**] to continue extension, as shown in the figure below:

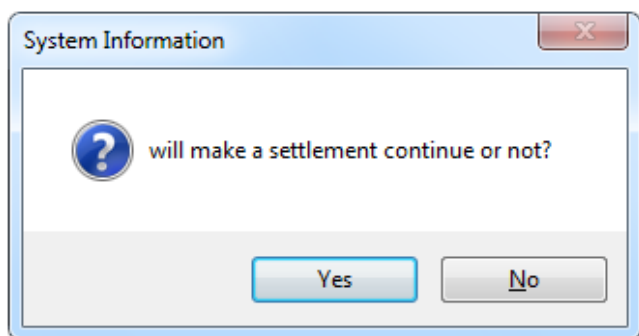

Click [**Yes**] to finish extension.

☺ **Note:** The extension operation is available to the guests with a card or not; the settlement above is not check out, you can see the details in the expenses list.

c. Guest Check Out

☺ **Note:** There are two cases: **Check out with Card** and **Check out without Card**.

a) To check out with a card: click [**Check out with Card**], and click [**Yes**] in the information box that pops up to finish checking out, as shown in the figure below:

Expenses List

Blue

phone: _____

Fax: _____

Hotel Web: _____

Adress : _____

Post: _____

Guest ID: G00000001

Guest Name: Guest 1

Check In: 2014/08/18 1

Check Out: 2014/08/27 1

Administrator -- 2014

Name	Qty	Unit Price	Discount
A002 Hour Room	1	4.00	10%
A005 Hour Room	216	4.00	10%
Total:			

Remarks: Subtotal = Unit Price * Qty * (1 - Discount)

Total: _____

Tax(0.00%): _____

Check out

Guest Name:
Guest 1

Total:
781.20 \$

Tax Rate:
0.00 %

Deposit:
13.90 \$

Paid:
767.30 \$

Change:
0.00 \$

Print Bill

*Press enter key to confirm money

Check out, are you sure?

OK Cancel

b) To check out without a card: click [**Check out without Card**], and a picture the same as above (check out with card) pops up.

The figure above provides the information about the guest in 203. Click [**Yes**] to finish **Check out without Card**.


d. Rewrite Guest Card and Rewrite Group Card

In the **Room Center**, right-click a checked-in room, and select **Rewrite Guest Card** or **Rewrite Card** from the shortcut menu. In the window that pops up, select the guest whose card needs rewriting, prepare the card, and click [**Make Card**] to finish rewriting.


😊 **Note:** After the rewritten card is punched on the lock, previous card will be invalid.

e. Change Room

Right-click checked-in room in the **Room Center**, and select **Change Room** from the shortcut menu. The menu bar will show the change room pane, select the new available rooms, as shown in the figure below:

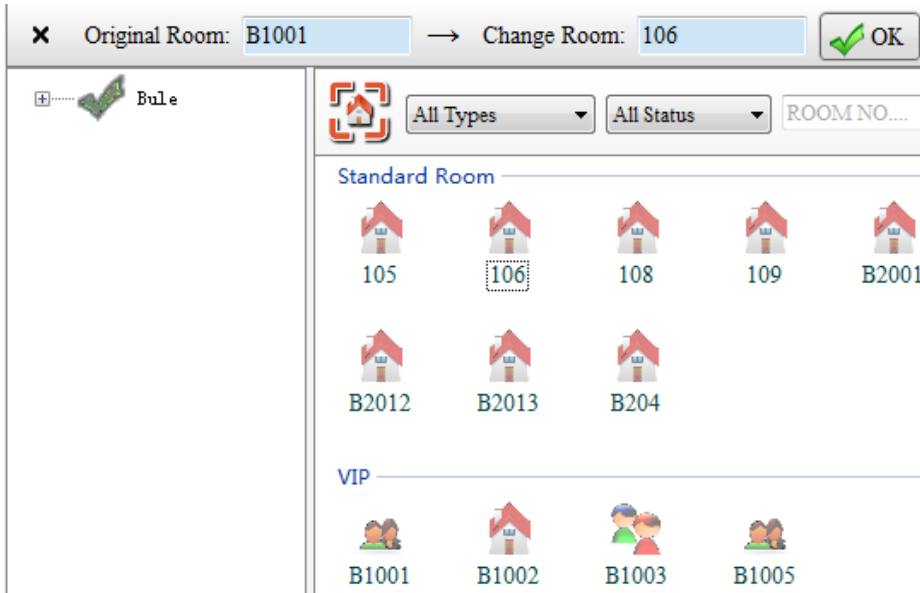

Click [OK], and a picture pops up as follows:

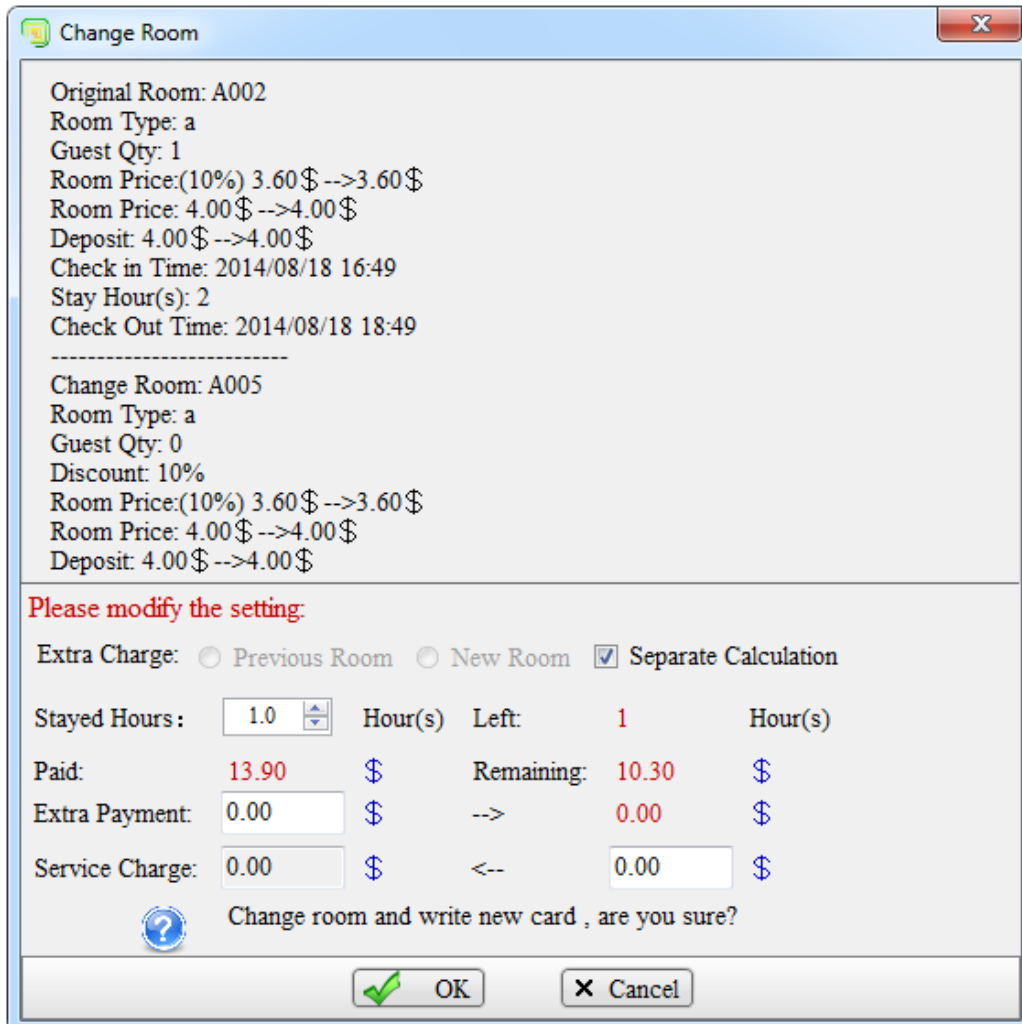

Different types of rooms have different price. When the guests change the room, it will generate the price difference. There are different Charging standard

Previous room: During the change room, the charge is previous room price.

New room: During the change room, the charge is new room price.



Separate Calculation: From the time you when checking in to the time when changing to another room, the extra charge equals to previous room price; while from the time when you change to another to the time of checking out, the extra charge equals to the new room price.

☺ **Note:** Our software provides Manual Setting the Have Stayed, Extra Payment, Service Charge. When group need to change room, the Separate Calculation is default.

Click [OK], then according to the prompt operate written card or not.

D. Current room status

Click on a guest room, can view current room status at the bottom of the software interface, the following figure:


	Room No.: 205	Floor No.: 2F	Status: Vacant Room	Current Guest: 0
	Building No.: A	Type: general	Size: 50	Total Guests: 0

4.3.2 Group Reception


 
This section includes **Group Check In**, **Group Check Out**, and **Group Extension** functions.

i. Group Check In

a) **Group Check In:** As there are plenty of settings involved, they are processed in a new interface. Click [Group Check In], and a picture pops up as follows:

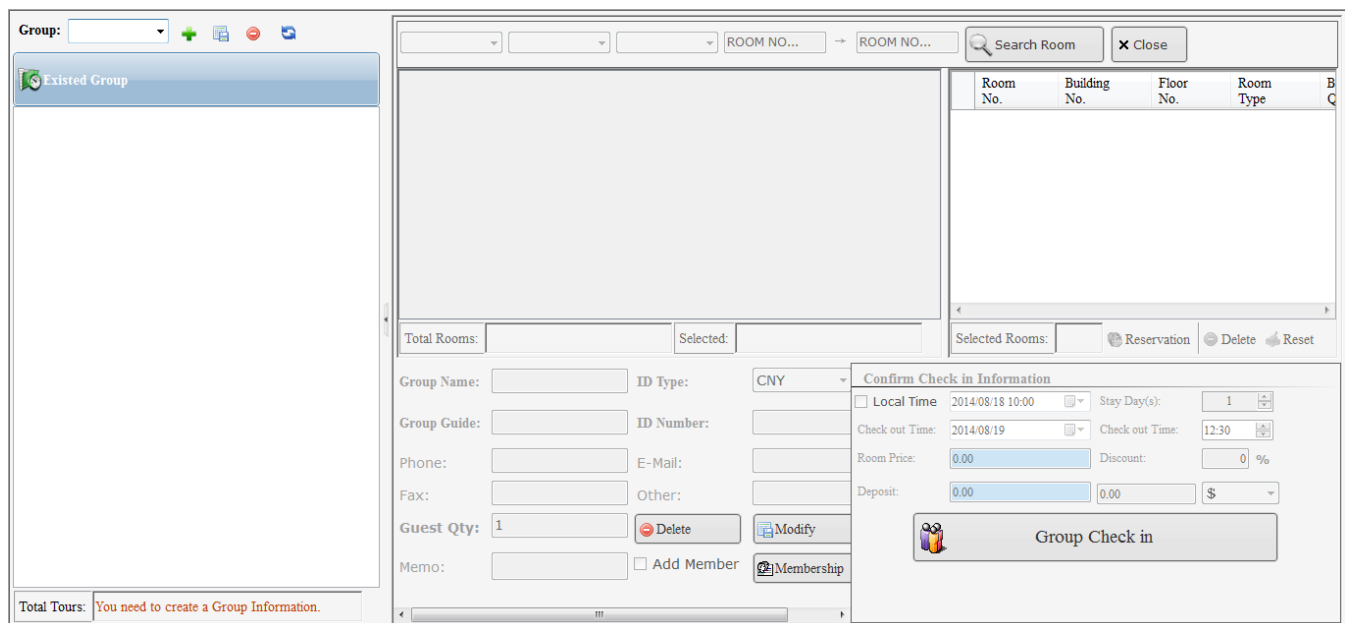

Step 1: Create a bureau. Click the [+] button, and an interface for adding a travel bureau pops up. For example, the figure below illustrates how to add the information of a travel bureau.

Group:	Hualian	Phone:	5151321	E-Mail:		Address:		
Contact Person:	Guest 1	Fax:		Other:		Memo:		

Save the setting and close the interface, and a figure pops up as follows:

Group:	Hualian				
--------	---------	---	---	---	---

Step 2: Check the **History Group** (skip if unnecessary).

Step 3: Input the group information, as shown in the figure below:

Group Name: **ID Type:**

Group Guide: **ID Number:**

Phone: **E-Mail:**

Fax: **Other:**

Guest Qty:

Memo: Add Member


Step 4: Select rooms, as shown in the figure below:


ROOM NO... → ROOM NO... Search Room X Close

Room No.	Building No.	Floor No.	Room Type	B	Q
A002	A	1	a		4
A003	A	1	a		4
A006	A	1	a		4
A010	A	1	a		4
A011	A	1	a		4
A012	A	1	a		4
A013	A	1	a		4
A015	A	1	a		4
A016	A	1	a		4
A018	A	1	a		4
A019	A	1	a		4
A020	A	1	a		4
A021	A	1	a		4

Step 5: Select a check-in date and level date, and click [**Group Check In**]. Confirm the group information, and click [**Yes**] to start to input information about group members, as shown in the figure below:

System Information

 Group Name:T1
 Group Guide:Guest 2
 Guest Qty:6
 Check in, are you sure?

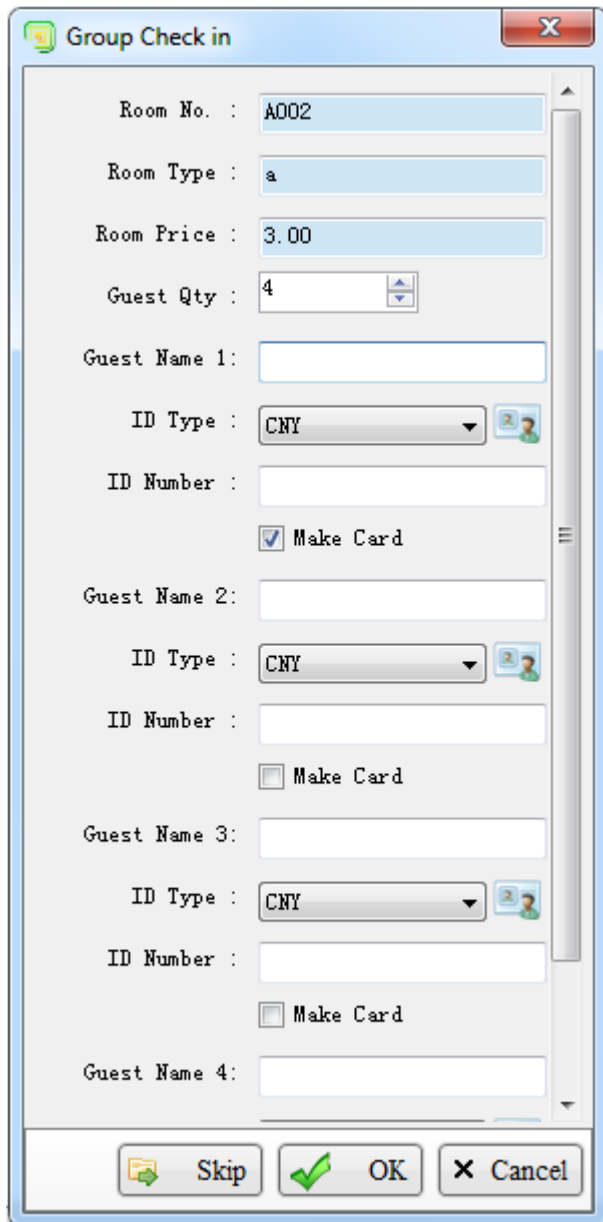

Group Check in

Room No. : A002

Room Type : a

Room Price : 3.00

Guest Qty : 4

Guest Name 1:

ID Type : CNY

ID Number :

Make Card

Guest Name 2:

ID Type : CNY

ID Number :

Make Card

Guest Name 3:

ID Type : CNY

ID Number :

Make Card

Guest Name 4:

Skip OK Cancel

After inputting information about a guest, click **[OK]** to input information about the next one. The **[Skip]** button can be used to cancel this room, and **[Cancel]** to stop registering information about the group members (the registered member information is still valid).

After finish checking in, click **[Have Member]** in the group information edition zone in step 3 to view the checked-in members. For example, the figure below displays the three members that have been input.

Tour Group	Group Name	Group Guide	Tour Group ID Type	Group No.	Guest Name	ID Type	ID No.	Room No.	E N
Hualian	T1	Guest 2	CNY	489411		CNY		A006	A
Hualian	T1	Guest 2	CNY	489411		CNY		A006	A
Hualian	T1	Guest 2	CNY	489411		CNY		A006	A
Hualian	T1	Guest 2	CNY	489411		CNY		A006	A
Hualian	T1	Guest 2	CNY	489411		CNY		A003	A
Hualian	T1	Guest 2	CNY	489411		CNY		A003	A
Hualian	T1	Guest 2	CNY	489411		CNY		A003	A
Hualian	T1	Guest 2	CNY	489411		CNY		A003	A
Hualian	T1	Guest 2	CNY	489411		CNY		A002	A
Hualian	T1	Guest 2	CNY	489411		CNY		A002	A
Hualian	T1	Guest 2	CNY	489411		CNY		A002	A
Hualian	T1	Guest 2	CNY	489411		CNY		A002	A

Total records 12

To add a member: click **[History Group]** in step 2 to obtain registered group information. Click the desired group, and select **[Add Member]** in step 3. Select rooms, and click **[Group Check In]** to input information about the added guest.

To modify information: click **[History Group]** in step 2 to obtain registered group information. Click the desired group, input information in the group information edition zone, and click **[Modify]**. All the information can be modified, except **Group Name, Certificate, Group Guide, and Number**.

Disable a group: only a group that is not checked in can be deleted.


Group reserve: input group information, select rooms, change check-in time and level time, and click **[Reserve]** in step 4 to finish reservation.

The rooms with successful check-in are displayed as follows:




b) Group check out: To check out a group, first **Read Card** or **Search** for group information, and confirm the guide's certificate before executing check-out.



Step 1: Click **[Read Card]** or **[Search]** to obtain group information, as shown in the figure below:

Tour Name: 

Guide Name:

ID Type No.: 

Room No.	Guest	Card(Pics)	Checked Out
A002	4	1	<input type="checkbox"/>
A003	4	0	<input type="checkbox"/>
A006	4	1	<input type="checkbox"/>

 Read Card  Check member details

Total Rooms:

Total Guests:

Total Card:


Group Check Out

T1



Group: ID Type:

Group Name: ID Number:


Group Guide:

 Search


	Tour Group	Group Name	Group Guide	Tour Group ID Type	Group No.	Check in Time	Guest Qty
1	Hualian	T1	Guest 2	CNY	489411	2014/8/18 10:00	6
2	Hualian	T1	Guest 2	CNY	489411	2014/8/18 10:00	6

   OK  Cancel


 
Step 2: Click  to check the guide's certificate.

Tour Name: 

Guide Name:

ID Type No.: 

Room No.	Guest	Card(Pics)	Checked Out

 Read Card
  Check member details

Total Rooms:

Total Guests:

Total Card:

Group Check Out

Step 3: Click [**Group Check Out**], and the prompt information appears. Click [**Yes**] to finish group check out, as shown in the figure below:

Expenses List

Blue

Hotel ID : 01012345678

Adress : _____

phone: _____

Fax: _____ Post: _____

Hotel Web: _____

-- Administrator -- 2014/08/18 17:43:28 --

Guest ID: T00000002

Guest Name: Guest 2

Check In: 2014/8/18 10:00:00

Check Out: 2014/8/18 17:43:28

Name	Qty	Unit Price	Disco unt	Subtotal
A002	1	3	0%	3
A003	1	3	0%	3
A006	1	3	0%	3

Check out

Guest Name:

Total:
 \$

Deposit:
 \$

Paid:
 \$

**Press enter key to confirm money*

Change:
 \$

Print Bill

Check out this Group, are you sure?

c) **Group extension:** To perform group extension, the first two steps are the same as those of performing **Group Check Out**. In step 3, in the operation prompt that pops up, modify the extension day as necessary. Click **[OK]** to finish **Group Extension**, as shown in the figure below:

Group Extend Stay


Tour Name: T1
 Guide Name: Guest 2
 ID Type No.: 489411
 Total Rooms: 2
 Total Guests: 8
 Total Card: 1
 Check in Time: 2014/08/18 10:00:00
 Stay Hour(s): 1
 Check Out Time: 2014/08/19 12:30:00
 Deposit: 14.00 \$

New check in information:

Stay Day(s): Day(s)
 Check Out Time:

ii. Group Information

Click **[Reception Center]** → **[Group Reception]** → **[Group Information]** to enter the **Group Information** Interface.

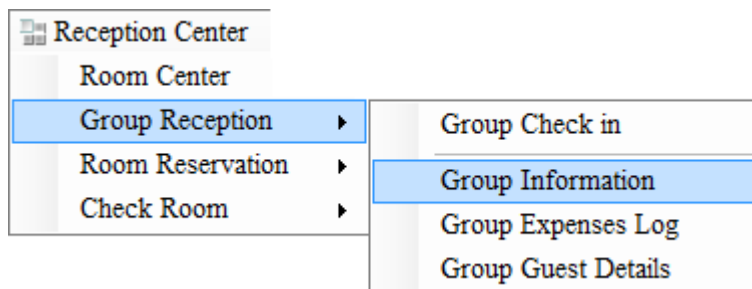

Group: <input type="text"/>	ID Type: <input type="text" value="All Types"/>	Check In: <input type="text" value="2014/08/17 12:30"/> → <input type="text" value="2014/08/18 17:48"/>
Group Name: <input type="text"/>	ID Number: <input type="text"/>	Check out: <input type="text" value="2014/08/18 17:48"/> → <input type="text" value="2014/08/18 17:48"/>
Group Guide: <input type="text"/>		Operator: <input type="text"/>

Tour Group	Group Name	Group Guide	Tour Group ID Type	Group No.	Check in Time	Guest Qty	Phone	Fax	E-Mail	Other	Memo
1	Hualian	T1	Guest 2	CNY	489411	2014/8/18 10:00	6				
2	Hualian	T1	Guest 2	CNY	489411	2014/8/18 10:00	6				
3	Hualian	T1	Guest 2	CNY	489411	2014/8/18 10:00	6				

iii. Group Expenses Log

Click [Reception Center] → [Group Reception] → [Group Expenses Log] to enter the **Group Expenses Log** Interface.

Reception Center

- Room Center
- Group Reception**
 - Group Check in
 - Group Information
 - Group Expenses Log**
 - Group Guest Details
- Room Reservation
- Check Room

Group: <input type="text"/>	Group Guide: <input type="text"/>	Check in: <input type="text" value="2014/08/17 12:30"/> → <input type="text" value="2014/08/18 12:30"/>
Group Name: <input type="text"/>	ID Type: <input type="text"/>	Check out: <input type="text" value="2014/08/18 12:30"/> → <input type="text" value="2014/08/19 12:30"/>
	ID Number: <input type="text"/>	Operator: <input type="text"/>

Expenses Details
 Statistics
 Fuzzy Search

Group ID	Group	Group Name	Group Guide	ID Type	ID Number	Member	Check in Date	Stay Day(s)	Check Out Time	Paid	Stay Day(s)	Check out Date	Discount	Room Price	
1	T00000002	Hualian	T1	Guest 2	CNY	489411	6	2014/8/18 10:00	1.00	2014/8/19 12:30	0.00	1.0	2014/8/18 17:44	1.00	9.00
2	T00000003	Hualian	T1	Guest 2	CNY	489411	6	2014/8/18 10:00	2.00	2014/8/20 12:30	0.00	0.0		1.00	0.00

iv. Group Guest Details

Click [Reception Center] → [Group Reception] → [Group Guest Details] to enter the **Group Guest Details** Interface.

Reception Center

- Room Center
- Group Reception**
 - Group Check in
 - Group Information
 - Group Expenses Log
 - Group Guest Details**
- Room Reservation
- Check Room

Search Export To Excel Reset Close

Group: Guest Name: Building NO.: All Buildings Room Type: All Types

Group Name: ID Type: All Types Floor No.:

Group Guide: ID Number: Room No.:


Check In: 2014/08/17 12:30 → 2014/08/18 17:59 Check out: 2014/08/18 17:59 → 2014/08/18 17:59

Group ID	Tour Group	Group Name	Group Guide	Tour Group ID Type	Group No.	Card No.	Guest Name	ID Type	ID No.	Room No.	Building No.	Floor
T00000003	Hualian	T1	Guest 2	CNY	489411	27		CNY		A009	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	26		CNY		A009	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	25		CNY		A009	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	24		CNY		A009	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	23		CNY		A008	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	22		CNY		A008	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	21		CNY		A008	A	1
T00000003	Hualian	T1	Guest 2	CNY	489411	20		CNY		A008	A	1

4.3.3 Room Reservation

i. Reservation

Click [Reception Center] → [Room Reservation] → [Reservation] to enter the Reservation Interface.

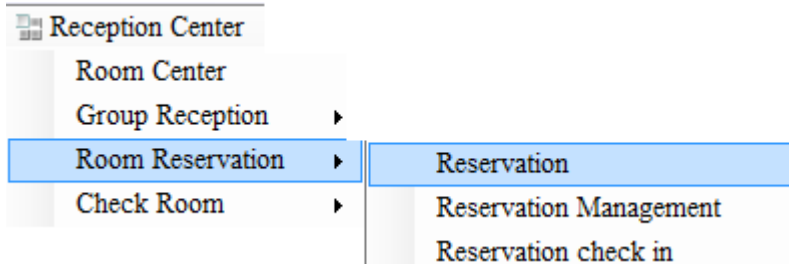

Single guest reserve steps:

Step 1: Search for and select rooms.

Step 2: Input reservation information, and click [OK] to finish reservation, as shown in the figure below:

Reservation

2014-08-18 18:31 → 2014-08-18 Search Room

Room No.	Building No.	Floor No.	Room Type	Bed Qty	Exsit
A002	A	1	a	4	0

Total Rooms: 53 Selected: 1 Selected Rooms: 1 Delete

Contact Person: Guest 1 * Guest Name: Room Reservation *

Contact Mobile: 1463231 * Check in Time: 2014/08/18

Phone: Check in Time: 18:31

ID Type: CNY Check Out Time: 2014/08/18 OK

ID Number: 56578 * Email: Cancel


The rooms that are reserved successfully are displayed as follows:




☺ **Note:** for group reservation, please refer to [4.3.2 Group Reception](#).

ii. Reservation Management

Click [**Reception Center**] → [**Room Reservation**] → [**Reservation Management**] to enter the **Reservation Management** Interface.

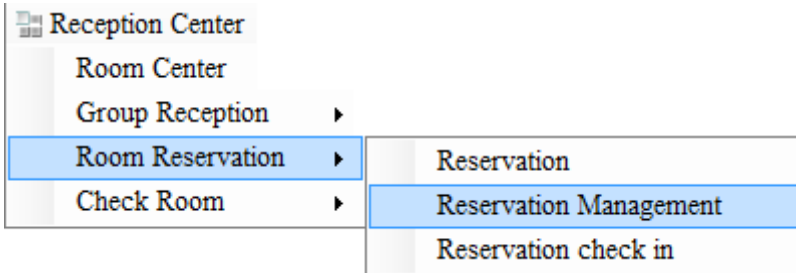

Check or delete a reserved room, as shown in the figure below:

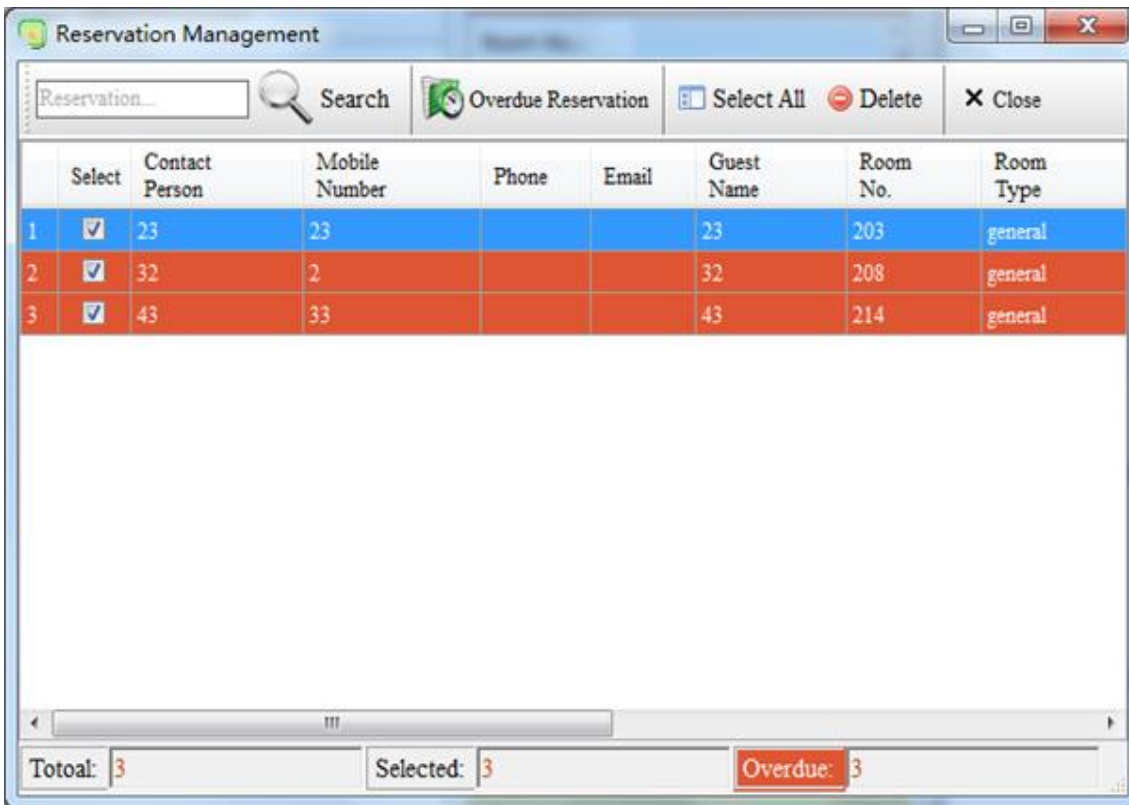


The figure displays a list of reserved rooms, and those in red are overdue (selected by default and should be deleted).


iii. Reservation check in

Check in for guest who has already reserved in advance.


Steps:

Step1: Click [**Reception Center**] → [**Room Reservation**] → [**Reservation check in**].

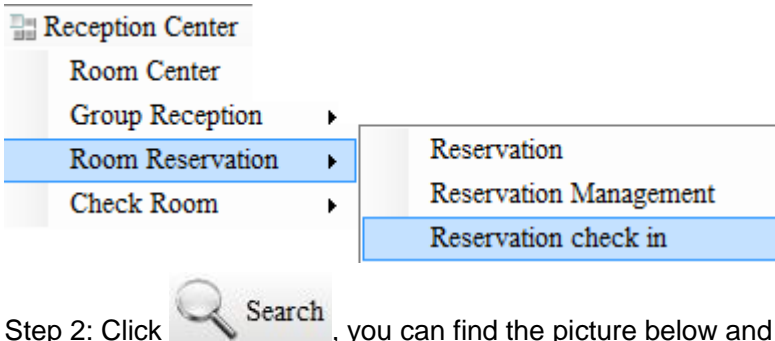

Step 2: Click  Search, you can find the picture below and find the rooms which have already been booked.

Reservation... Search Close

Contact Person	Mobile Number	Phone	Er
peg	1365464		<input checked="" type="checkbox"/>  A203

Room Type	Room Price	Room Name
single room	30.00	A203

Local Time 2013-10-24 15:48 Stay Day(s): 3 Room Price: 30.
 Check Out Time: 2013-10-27 12:30 Discount: 100 % Deposit: 50.


Step 3: Choose a group or a guest.

Step 4: Choose reservation room, whether make card, fill in guest name and ID number.

Step 5: Fill in the information as below.


Local Time 2013/10/23 11:20 Stay Day(s): 2 Room Price: 200.00 Paid: 600.00
 Check Out Time: 2013/10/25 11:20 Discount: 100 % Deposit: 200.00 Currency Type: CNY

Step 6: Click [Guest Check In] to finish reservation check in.

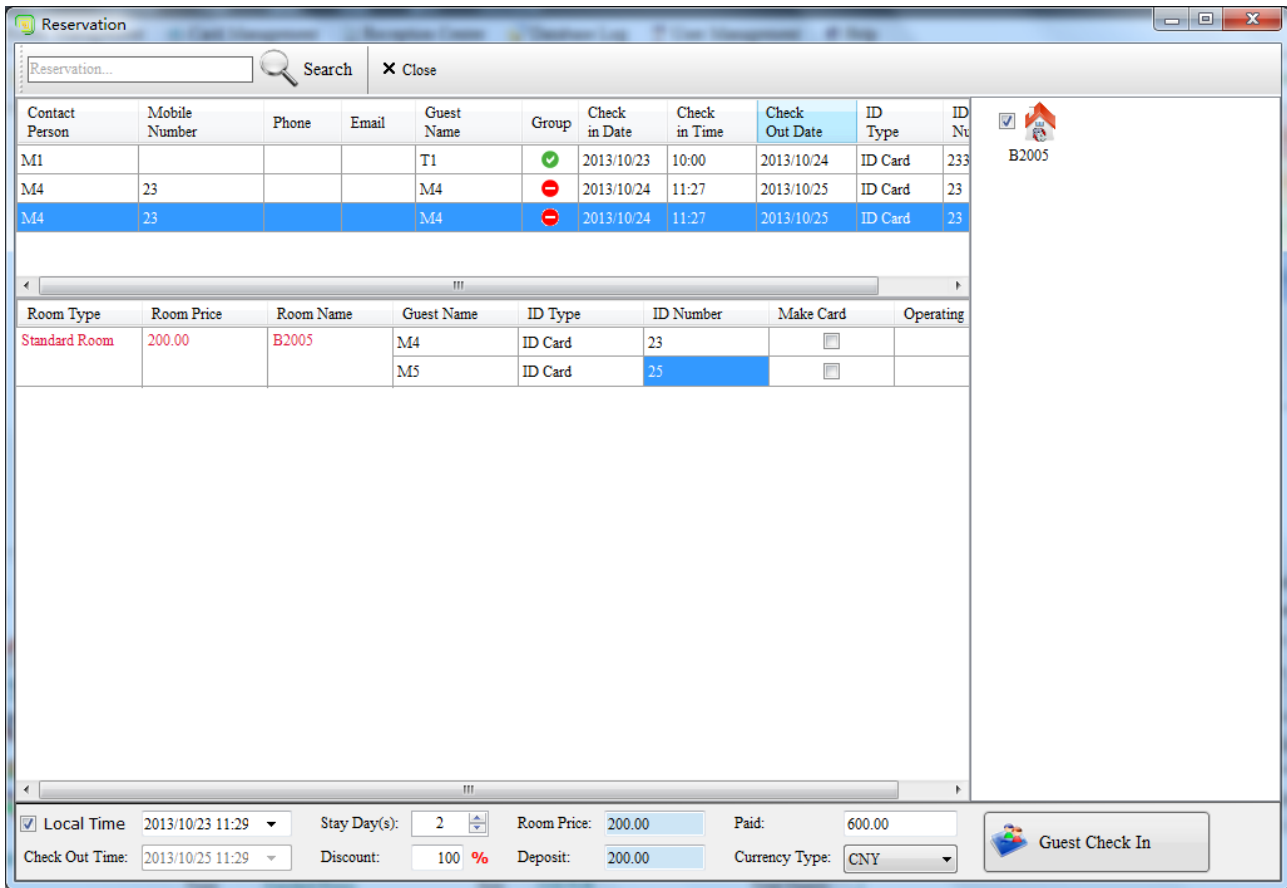

4.3.4 Check Room

Click [Reception Center] → [Check Room] to enter the Check Room Interface.

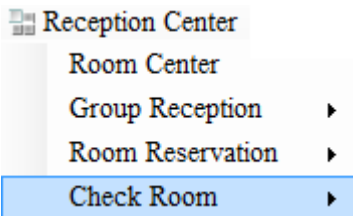



Check Room includes Guest Check and Clean Check, through which a reminder can be set for the rooms that need checking out and cleaning.

4.4 Consumption Management


 **Note:** A guest purchase commodity should with a card.

 Click [Consumption Management] → [Commodity Purchase] to enter the Commodity Purchase Interface.



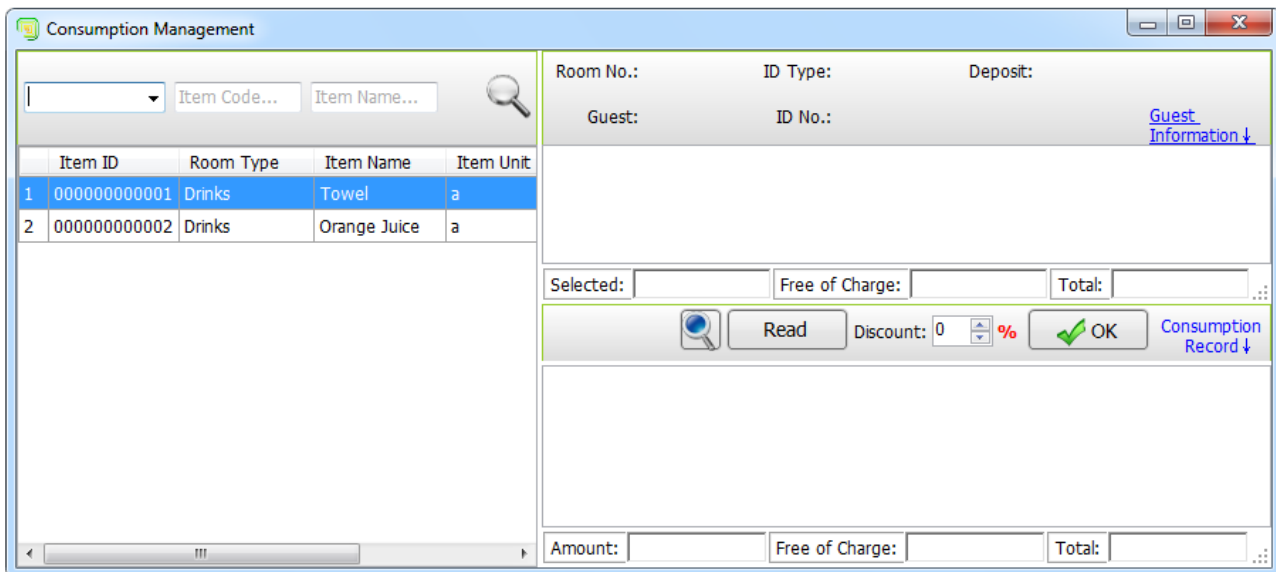

Put the guest card on reader, click **[Read]**, then you can double click the commodity you need in the left column, they will show in the right column. You can refer to the picture below:

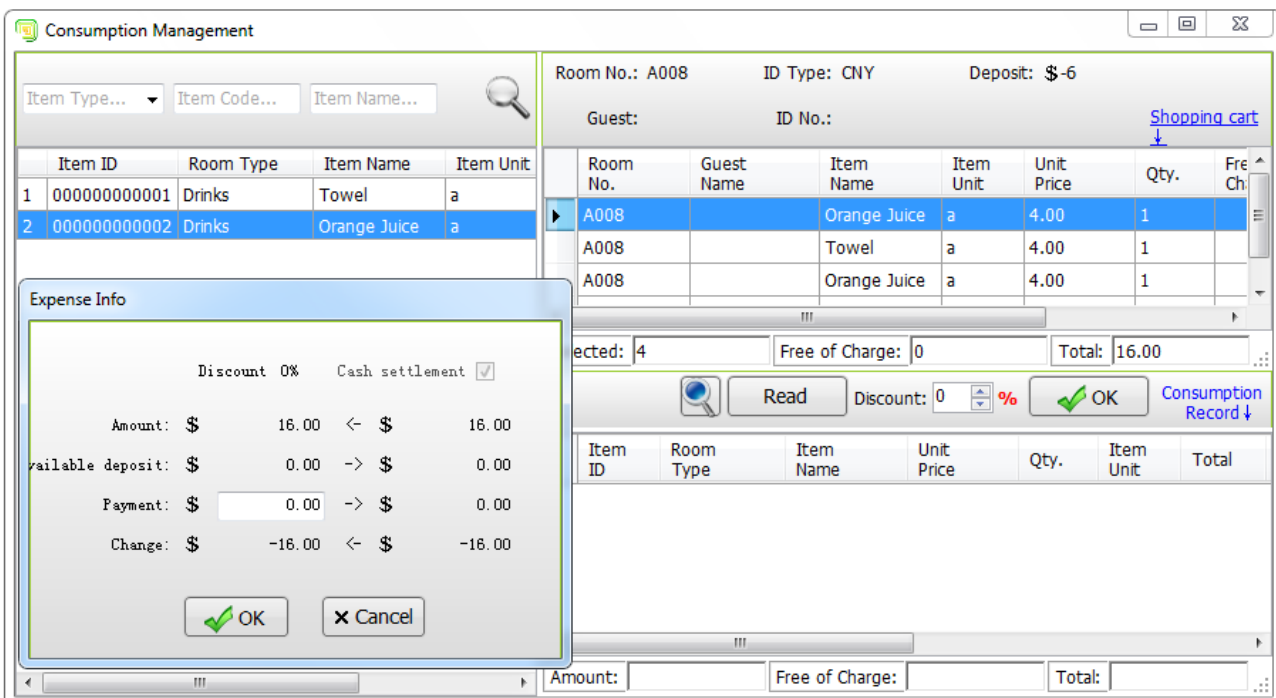

After selecting all commodities you need, you can choose to pay cash at sight or pay all the money when checking out. If you pay in cash, the consumption information won't show in the check-out Billing.



Note: You can see the shopping cart and consumption records in the right column.

4.5 Database Log

Click **[Database Log]** in the user menu to pop up the sub-menus as follow, which will be described respectively in the sections that follow.

Database Log

Guest Details

Expenses Log

Other Logs

Card Setting Log

Group Card Setting Log

Lock Open Log

Database Management

4.5.1 Guest Details

This function is used to view the detailed records of the guests who have checked in. Operators can input search conditions to view related records and export them to an Excel sheet, as shown in the figure below:

Card Number: →

Guest Name: Building NO.: Room Type: Operator:

ID Type: Floor No.: Check In: →

ID Number: Room No.: Check out: →

Card No.	Re-write	Guest Name	ID Type	ID No.	Room No.	Building No.	Floor	Room Type	Check in Time	Stay Day(s)	Check Out Time	Extend Stays	First Extend Stays
28	<input type="checkbox"/>	Room Reservation	CNY	56378	A002	A	1	a	2014/8/18 18:47	1Day(s)0Hours	2014/8/19 12:30	<input type="checkbox"/>	
7	<input type="checkbox"/>		CNY		A003	A	1	a	2014/8/18 16:49	0Day(s)5Hours	2014/8/18 21:49	<input checked="" type="checkbox"/>	2014/8/18 16:51
6	<input checked="" type="checkbox"/>	Guest 1	CNY	18484515	A005	A	1	a	2014/8/18 16:46	1Day(s)2Hours	2014/8/18 18:49	<input checked="" type="checkbox"/>	2014/8/18 16:49
27	<input type="checkbox"/>		CNY		A009	A	1	a	2014/8/18 10:00	2Day(s)0Hours	2014/8/20 12:30	<input checked="" type="checkbox"/>	2014/8/18 17:47
26	<input type="checkbox"/>		CNY		A009	A	1	a	2014/8/18 10:00	2Day(s)0Hours	2014/8/20 12:30	<input checked="" type="checkbox"/>	2014/8/18 17:47
25	<input type="checkbox"/>		CNY		A009	A	1	a	2014/8/18 10:00	2Day(s)0Hours	2014/8/20 12:30	<input checked="" type="checkbox"/>	2014/8/18 17:47

4.5.2 Expenses Log

This function is used to view records of the room use, dividing into two inquiry ways, details and statistics inquiries. Figure 1 displays details inquiry, while Figure 2 displays statistics inquiry.

Building No.: Room Type: Operator:

Floor No.: Check In: →

Room No.: Check out: →

Details Statistics

Room	Building	Floor	Room Type	Guest Qty	Card Qty	Check in Time	Extend Day(s)	Check out Time	Room Price	Currency	Ex-rate	Other Expenses	Extend Check out	Last Extension Time
A002	A	1	a	1	1	2014/8/18 16:49	0Day(s)2Hours	2014/8/18 18:49	3.60	\$	1.0000	0.00	<input checked="" type="checkbox"/>	2014/8/18 18:49
A002	A	1	a	4	1	2014/8/18 10:00	1Day(s)0Hours	2014/8/19 12:30	3.00	\$	1.0000	0.00	<input type="checkbox"/>	
A002	A	1	a	1	0	2014/8/18 18:47	1Day(s)0Hours	2014/8/19 12:30	0.00	\$	1.0000	0.00	<input type="checkbox"/>	
A003	A	1	a	1	1	2014/8/18 16:49	0Day(s)5Hours	2014/8/18 21:49	16.00	\$	1.0000	0.00	<input checked="" type="checkbox"/>	2014/8/18 21:49
A003	A	1	a	4	0	2014/8/18 10:00	1Day(s)0Hours	2014/8/19 12:30	3.00	\$	1.0000	0.00	<input type="checkbox"/>	
A005	A	1	a	1	1	2014/8/18 17:00	0Day(s)1Hours	2014/8/18 18:49	0.00	\$	1.0000	0.00	<input checked="" type="checkbox"/>	2014/8/18 18:49

Building No.: Room Type: Operator:

Floor No.: Check In: →

Room No.: Check out: →

Details Statistics

Room	Building	Floor	Room Type	Guest Qty	Card Qty	Stay Day(s)	Room Price	Currency	Ex-rate	Other Expenses
A002	A	1	a	1	0	0.0Day(s)0Hours	0.00	\$	1.0000	0.00
A002	A	1	a	4	1	1.0Day(s)0Hours	3.00	\$	1.0000	0.00
A002	A	1	a	1	1	0.0Day(s)1Hours	3.60	\$	1.0000	0.00
A003	A	1	a	4	0	1.0Day(s)0Hours	3.00	\$	1.0000	0.00
A003	A	1	a	1	1	0.0Day(s)4Hours	16.00	\$	1.0000	0.00
A005	A	1	a	1	1	0.0Day(s)0Hours	0.00	\$	1.0000	0.00
A006	A	1	a	4	1	1.0Day(s)0Hours	3.00	\$	1.0000	0.00
A008	A	1	a	4	0	0.0Day(s)0Hours	0.00	\$	1.0000	0.00
A009	A	1	a	4	1	0.0Day(s)0Hours	0.00	\$	1.0000	0.00

4.5.3 Other Logs

This function is used to view other consumption records of a room, dividing into 2 inquiry ways, details and total expenses inquiries. Figure 1 displays consumption details, while Figure 2 displays consumption total expenses.

Item Type: Date: →

Item Code: Room No.: Operator:

Item Name: Guest Name: Fuzzy Search

Details Total Expenses

Item Code	Item Type	Item Name	Unit	Price	Qty.	Original Price	Discount	Price	Free of Charge	Amount	Date	Operator	Guest Name	ID Type
1	000000000002	Drinks	Orange Juice	a	4.00	1.00	4.00	1.00	4.00	<input type="checkbox"/>	4.00	2014/8/18 19:26	Administrator	CNY
2	000000000001	Drinks	Towel	a	4.00	1.00	4.00	1.00	4.00	<input type="checkbox"/>	4.00	2014/8/18 19:26	Administrator	CNY

Item Type: Date: →

Item Code: Room No.: Operator:

Item Name: Guest Name: Fuzzy Search

Details Total Expenses

Item Code	Item Type	Item Name	Unit	Price	Qty.	Original Price	Discount	Price	Free of Charge	Amount	
1	000000000002	Drinks	Orange Juice	a	4.00	1.00	4.00	1.00	4.00	<input type="checkbox"/>	4.00
2	000000000001	Drinks	Towel	a	4.00	1.00	4.00	1.00	4.00	<input type="checkbox"/>	4.00

4.5.4 Card Setting Log

This function is used to view all card issue records, and also supports multi-condition query and data export. The following figure displays records on non-group setting cards.

Card Number: →

User Name: Building No.: Card Type: Operator:

ID Type: Floor No.: Card Setting Time: →

ID Number: Room No.: Valid Time: →

Card Number	Card Type	User Name	ID Type	ID Number	Lock Address
1	1	Authorised Card			
2	2	Authorised Card			
3	3	Time Sync Card			
4	4	Room Card			w d rr
5	5	Group Card	M	CNY	484152
6	6	Guest Card	Guest 1	CNY	18484515
7	7	Guest Card		CNY	A 1 A003
8	8	Guest Card		CNY	A 1 A002
9	16	Guest Card		CNY	A 1 A006
10	24	Guest Card		CNY	A 1 A009

4.5.5 Group Card Setting Log

This function is used to view the records on issue of all group setting cards, and supports data export.

Card Number: →

User Name: Group Name: Operator:

ID Type: Create Date: →

ID Number: Valid Time: →

Card Number	User Name	ID Number	Setting	All Group	Group Name1	Group Name2	Group Name3	Group Name4	Group Name5	Group Name6
1	29	Guest 1	4549151	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>					

4.5.6 Lock Open Log

This function is used to read the record card to view the lock records. Put the record card on the card reader, and click **[Get Lock Information]** to obtain lock information and records, as shown in the interface below:


Get Lock Information		2014/07/18 00:00						
Lock Address:	03 - 01 - 02 - 00	2014/08/18 23:59		100				Export To Excel
Lock Name:	A002	Card Number	Lock Open Time	Open Mode	Card Type	User Name	ID Type	ID Number
Building No.:	A	1	77	2014-07-09 16:17	Card Open			
Floor No.:	1	2	77	2014-07-09 16:17	Card Open			
Room Type:	a	3	77	2014-07-09 16:17	Card Open			
Lock Time:	2014-08-18 19:33	4	77	2014-07-09 16:18	Card Open			
Lock Opened:	530	5	77	2014-07-09 16:18	Card Open			
Limit Number:	0	6	77	2014-07-09 16:18	Card Open			
Group List:		7	64	2014-07-09 16:55	Card Open			
1		8	90	2014-07-10 11:25	Card Open			
2		9	91	2014-07-10 11:26	Card Open			
3		10	92	2014-07-10 11:27	Card Open			
4		11	92	2014-07-10 11:27	Card Open			
Black List:		12	0	2014-07-11 13:53	Machinery - Key			
1		13	0	2014-07-11 16:05	Machinery - Key			
		14	75	2014-07-11 16:06	Card Open			
		15	75	2014-07-11 16:07	Card Open			
		16	76	2014-07-11 16:08	Card Open			
		17	77	2014-07-11 16:08	Card Open			

4.6 Database Management


Click [Database Log] → [Database Management] to enter the **Database Management** Interface.

This function is used for database backup and restoration. This operation is available only on the server. Please use the **Database Restore** operation with caution.

Tick up [Confirm], click a corresponding button, the figure illustrates the backup operation:

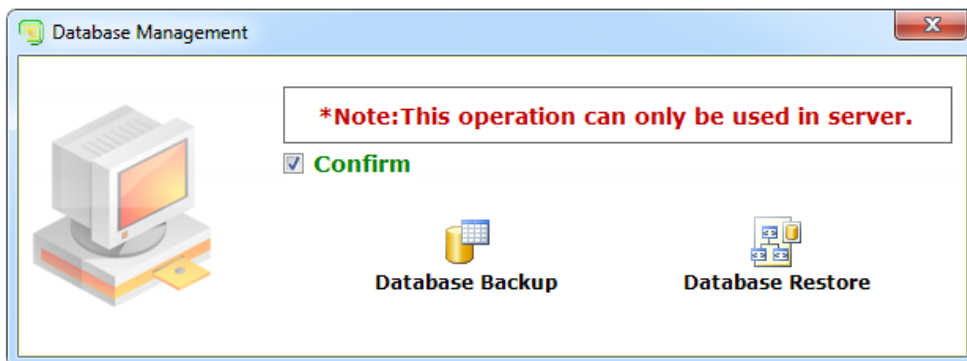

Select a path, and click [Save] to continue the operation (the time needed depends on the size of the database), when backup successfully, the system information will pop up as following:

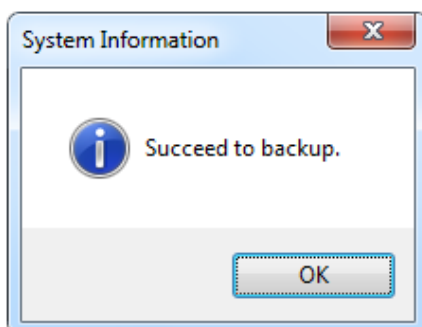

5 Appendix

5.1 Sound Prompt of an Invalid Card

Five buzzes: Wrong card type

Six buzzes: A guest card has a wrong room number, or a group card, emergency card, or master card has a wrong group number.

Seven buzzes: The card has expired.

Eight buzzes: A guest card has an invalid code, or an employee card has an invalid period of Available time.

Nine buzzes: In a blacklist.

Ten buzzes: An authorised card has an invalid authorised code.

Eleven buzzes: A building card has a wrong building number, or a floor card has a wrong floor number.

Thirteen buzzes: The card number is an access-restricted card number.

Fourteen: The record card downloads incomplete data.

Fifteen buzzes: This is not a card of the hotel.


5.2 Database Configuration

For how to configure the database, let's take Microsoft SQL Server 2005 as an example in this manual.


If it is unable to connect to the database, you can check the database configuration through the following methods.

5.2.1 Configuring the Server of Database


Click [**Start**] → [**All Programs**] → [**Microsoft SQL Server 2005**] → [**Configuration Tools**], and then the figure below will appear:

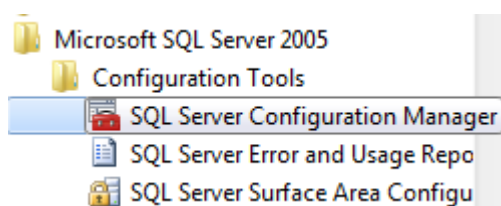

Click [**SQL Server Configuration Manager**], then click [**SQL Server 2005 Network Configuration**], and the figure below will appear:

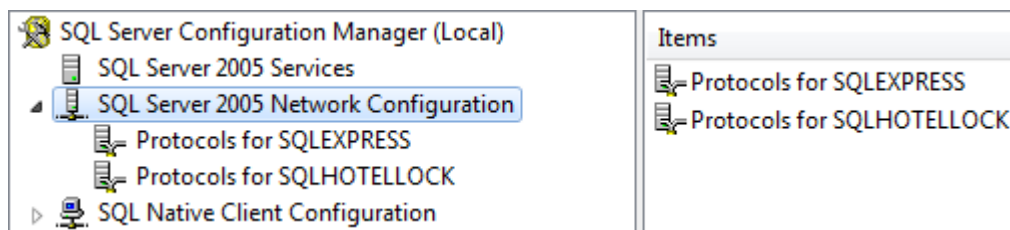

Double click the server which you want to connect with, such as [**Protocols for SQLEXPRESS**] (or **Protocols for SQLHOTELLOCK**), and the figure below will appear:

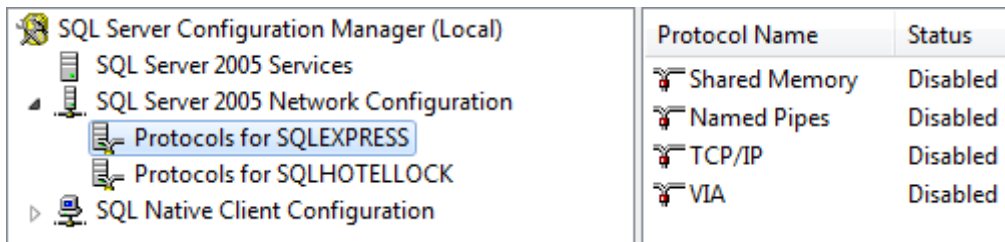


Right click [**Shared Memory**], choose [**Enable**], and the figure below will appear:




Click [**OK**], the Status of **Shared Memory**, **Named Pipes**, **TCP / IP** can be changed into **Enable**.

When we set TCP / IP enable Status, double-click [**TCP / IP**], and the figure below will appear:

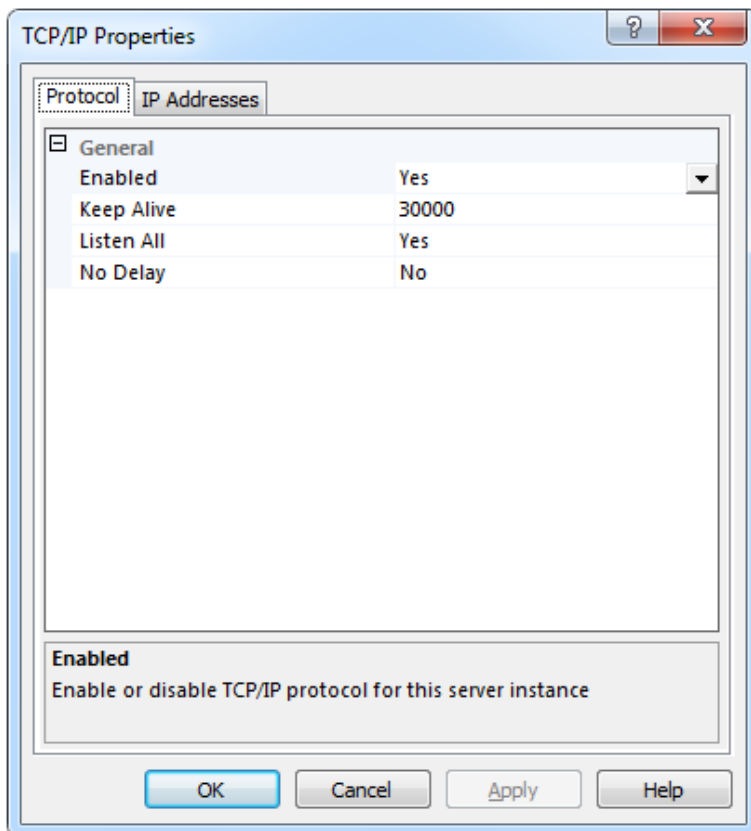

Click the [**IP Addresses**] tab, **IP All** columns **TCP Port** is set to **1433**, and the figure below will appear:

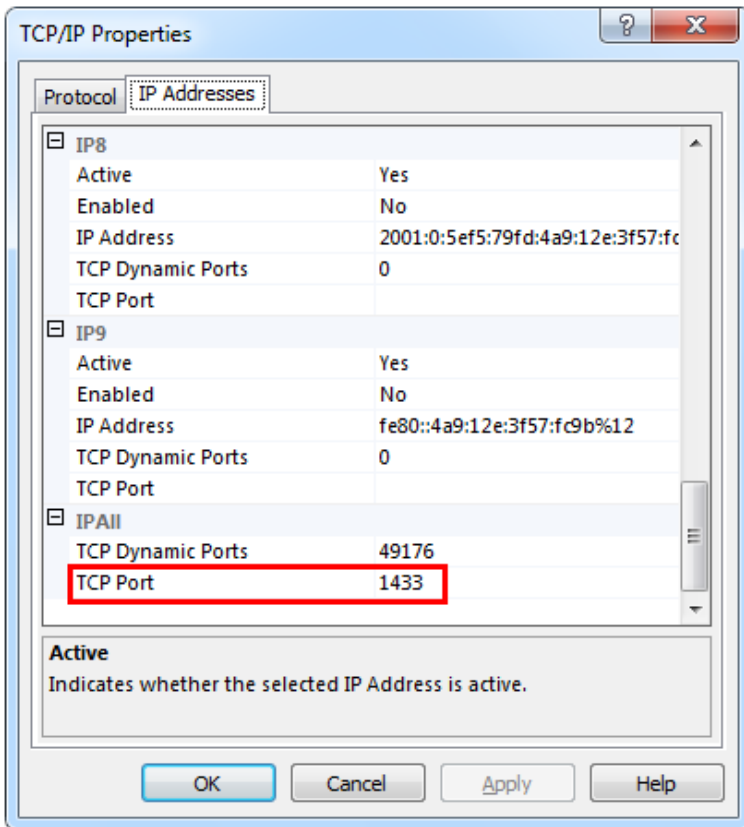

Click [**Apply**] and [**OK**] to complete the database configuration.

Please restart it and the server will take effect, the restart steps are as following:

1. Click [**SQL Server 2005 Services**]




2. Right-click the server that you need to restart, then choose [**Start**].

NOTE:Because it is so hard to clear all information of SQL in your computer . So please don't uninstall it .


5.2.2 Create an Account for Database Login

If your computer has already had a database, you can update it through database management software, Here we will take Microsoft SQL Server 2005 as an example to illustrate how to update the database via database management software.


Click [**Start**] → [**All Programs**] → [**Microsoft SQL Server 2005**], and the figure below will appear:

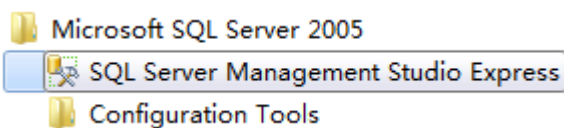


Click [**SQL Server Management Studio Express**], and the figure below will appear:

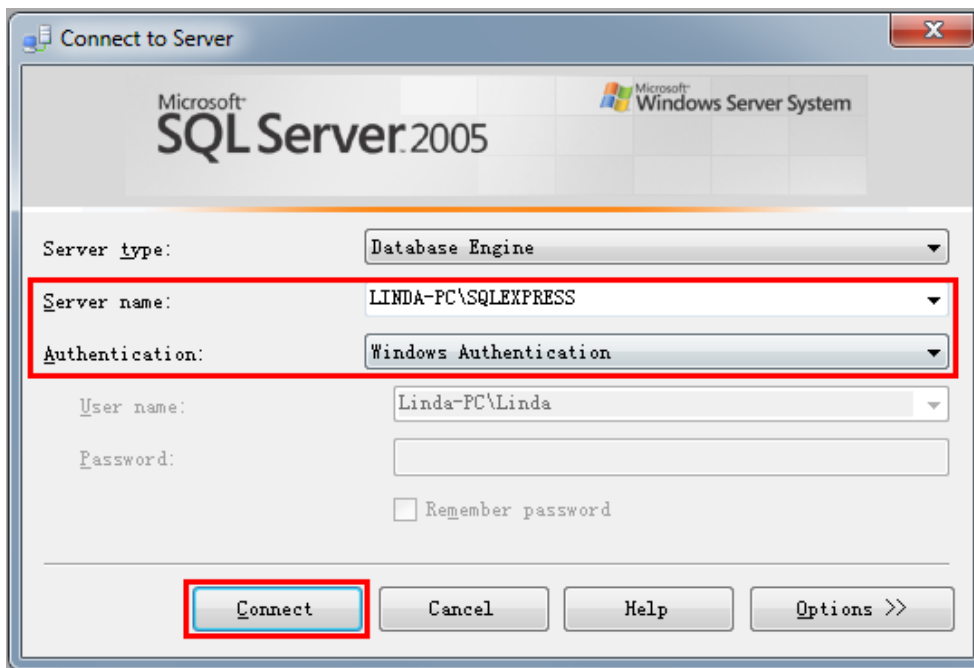


Choose server name and [**Windows Authentication**], click [**Connect**] to connect with the database server which need to share.

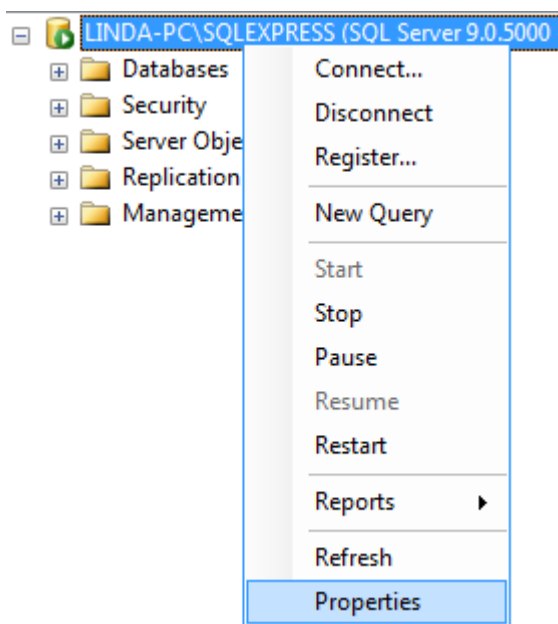


Right-click [**LINDA-PC\SQLEXPRESS**] server name, and choose [**Properties**] to enter the Server Properties interface. Click [**Security**] → [**SQL Server and Windows Authentication mode**], click [**OK**].

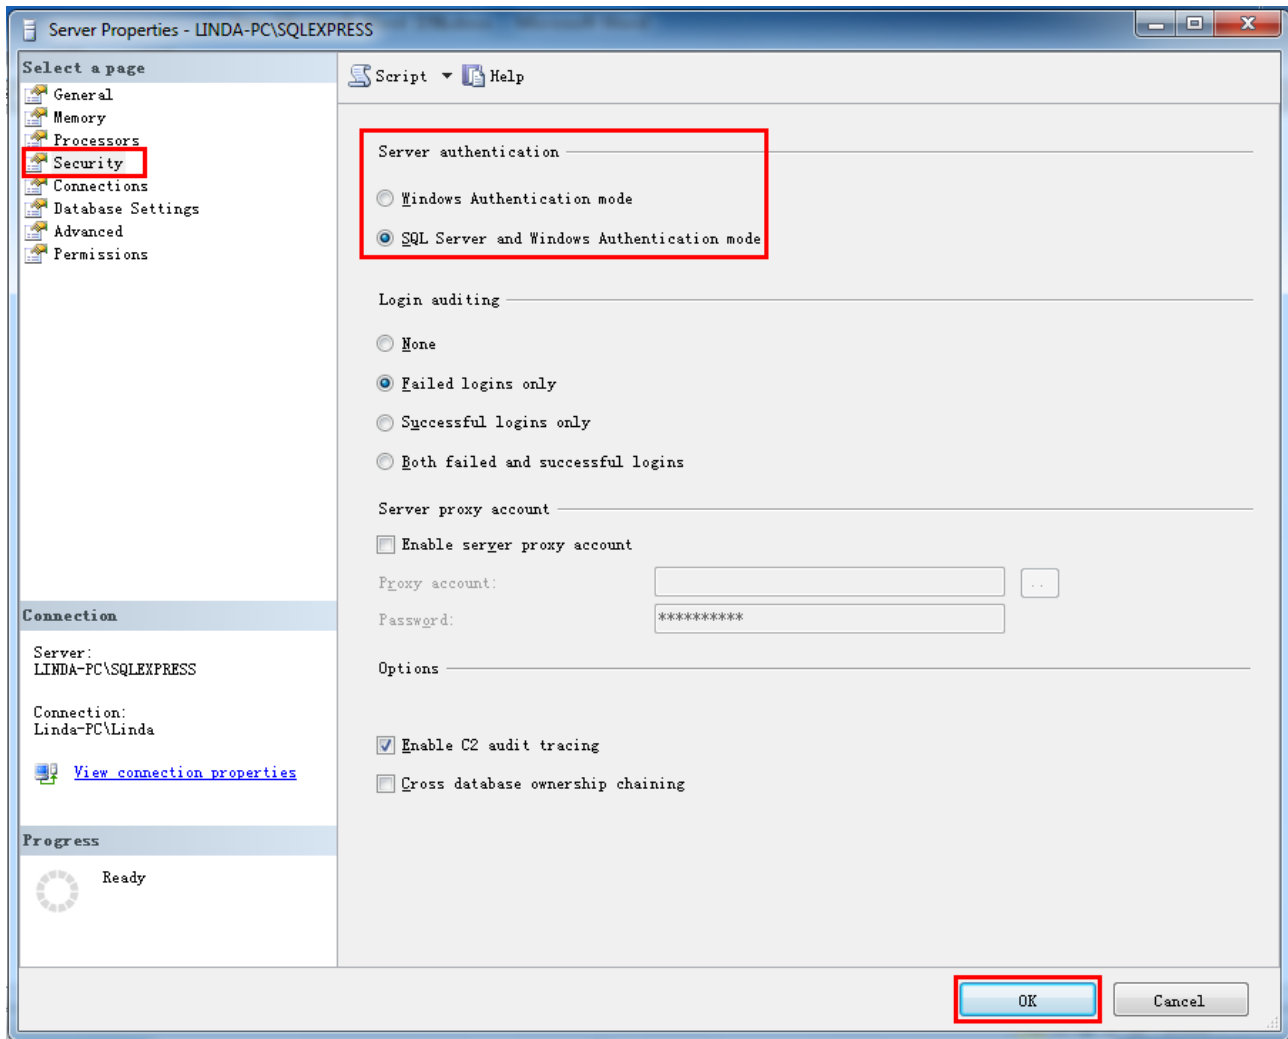


Choose [**Security**] → [**Logins**] in **Microsoft SQL Server Management Studio Express** interface, right-click [**sa**], choose [**New Login**] to create new **Logins**, or choose [**Properties**] to assign operation levels.

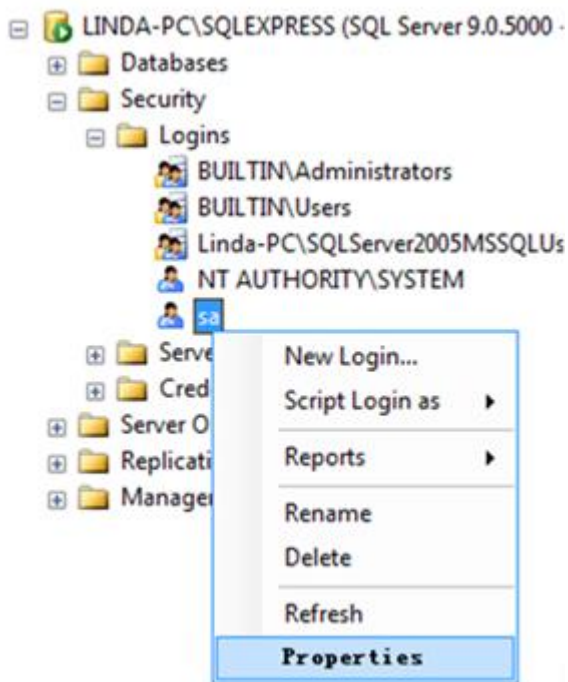


Click **[Status]** in **Login Properties – sa** interface, click **[Grant]** and **[Enabled]** in **Settings**.

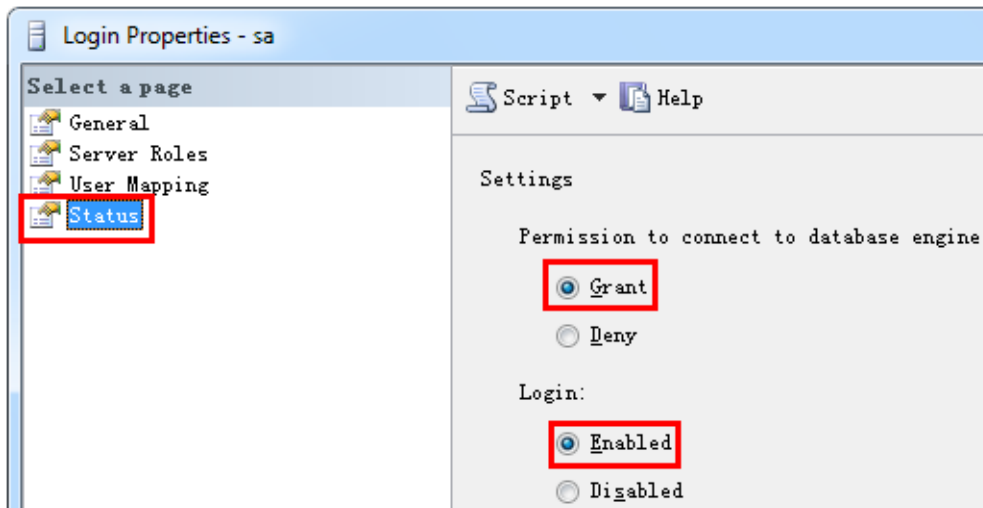


Click **[General]** in **Login Properties – sa** interface to set login password.

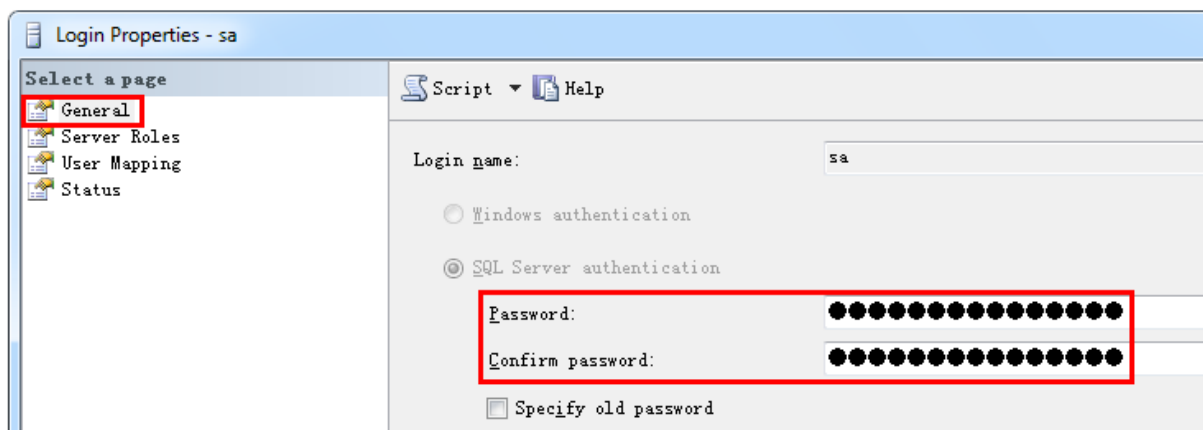


Click **[Server Roles]** in **Login Properties – sa** interface to set server roles.

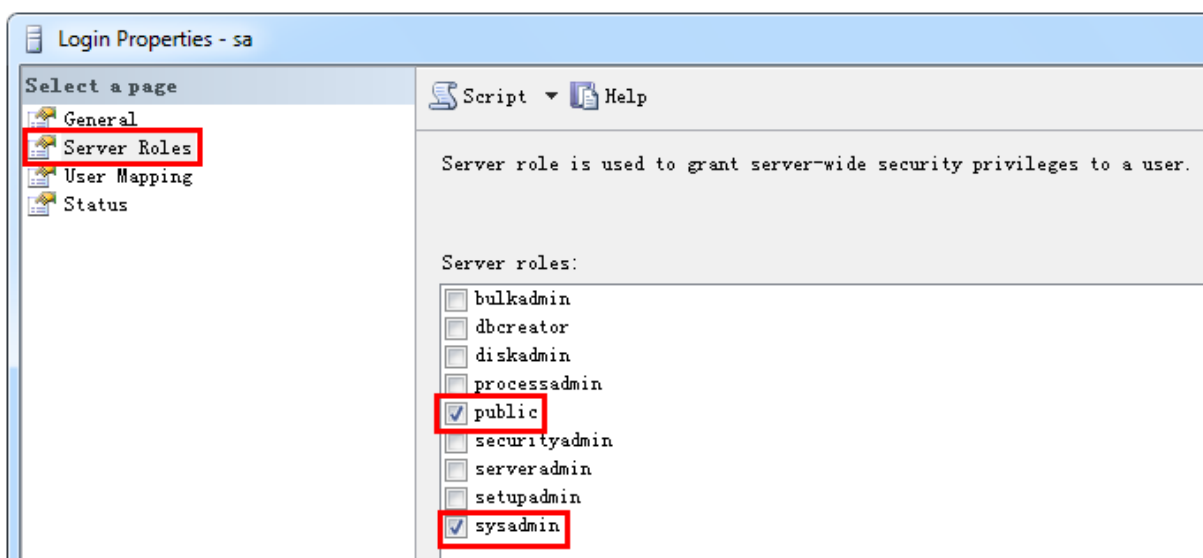

Click **[User Mapping]** in **Login Properties – sa** interface to assign operation levels.

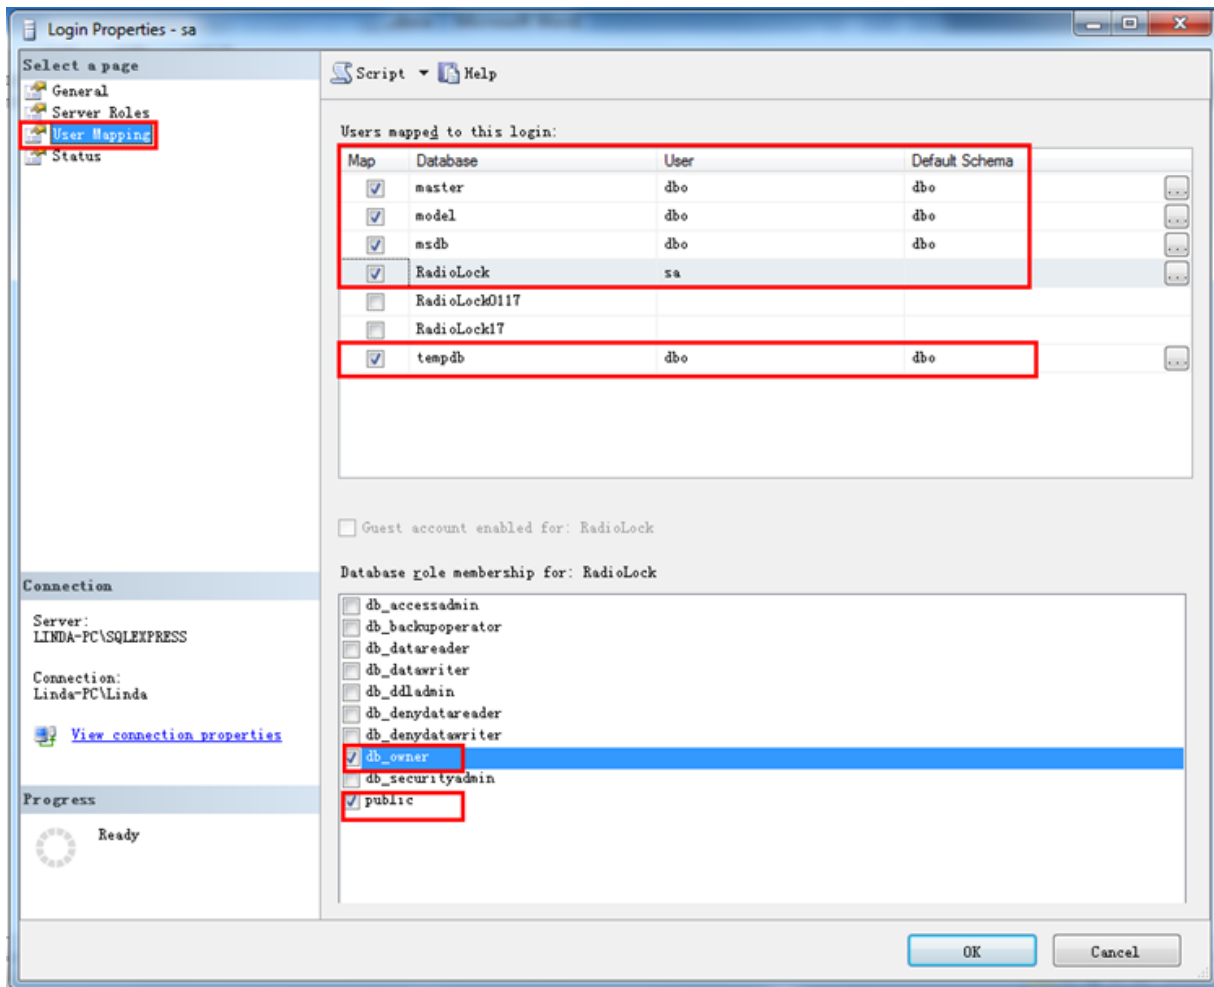

Click [OK] to save setting.

 **Note:** If your operation is affected by firewall or other defense software, please check your computer firewall setting and close the firewall to finish the rest operations.

5.3 System Setting

You can choose the language or database of the system at your pleasure.

Server: Define the server name in the LAN, click to search database server in the LAN, there are four kinds of naming:

- **[IP]** or **[computer name]**
- **[IP] : [PORT]** or **[IP] \ [instant name]**
- **[computer name] \ [instant name]**
- Special usage: Computer name can be replaced as **[.]** when connecting the native database.

Login name and password: Verify the connection of database.

Note: The default login name is **sa**, and default password is **123**.

Database: Operating target (Database files are stored in **BiolockData** folders of the dish in which system is installed).

Click **[Save]** to save the setting and restart the system, then it will take effect.

Only if the server fails to connect with the software, the login interface appears **[Create Database]** in **Setting** interface, then you can create the database manually, and the default path is **Documents**.

Note: Please refresh the information of rooms before checking in.

